

• 15J0901B100 •

RemoteDrive IrisControl

DRIVE REMOTE CONTROL

USER MANUAL

Upd. 08/11/18

R. 01

SW Version 2.3X

English

- This manual is integrant and essential to the product. Carefully read the instructions contained herein as they provide important hints for use and maintenance safety.
- The software described in this manual is a tool helping drive control. Enertronica Santerno S.p.A. is not responsible for any direct and/or consequential damages due to the implementation of the RemoteDrive/IrisControl.
- Enertronica Santerno S.p.A. reserves the right to make any technical changes to this manual and to the device without prior notice. If printing errors or similar are detected, the corrections will be included in the new releases of the manual.
- Enertronica Santerno S.p.A. is responsible for the information contained in the original version of the Italian manual.
- The information contained herein is the property of Enertronica Santerno S.p.A. and cannot be reproduced. Enertronica Santerno S.p.A. enforces its rights on the drawings and catalogues according to the law.



Enertronica Santerno S.p.A.
Via della Concia, 7 – 40023 Castel Guelfo (BO) Italy
Tel. +39 0542 489711 – Fax +39 0542 489722
santerno.com info@santerno.com

TABLE OF CONTENTS

1. DEVICE OVERVIEW.....	6
1.1. GENERAL.....	6
1.1.1. DEVICES THAT CAN BE CONTROLLED BY THE REMOTEDRIVE	6
1.1.2. DEVICES THAT CAN BE CONTROLLED BY THE IRISCONTROL	7
2. SPECIFICATIONS.....	8
2.1. MINIMUM HARDWARE AND SOFTWARE REQUIRED	8
2.1.1. HARDWARE	8
2.1.2. SOFTWARE.....	8
2.2. STANDARD SUPPLY	8
2.3. MAIN FEATURES	8
2.3.1. LOCAL CONNECTION	9
2.3.2. REMOTE CONNECTION VIA THE LAN BETWEEN 2 COMPUTERS	9
2.3.3. REMOTE CONNECTION VIA LAN AND THE INTERNET BETWEEN 2 COMPUTERS.....	9
2.3.4. REMOTE CONNECTION VIA THE INTERNET BETWEEN TWO COMPUTERS	9
2.3.5. REMOTE POINT-TO-POINT MODEM CONNECTION VIA THE TELEPHONE LINE BETWEEN 2 COMPUTERS	10
2.3.6. REMOTE CONNECTION VIA THE LAN BETWEEN THE COMPUTER AND THE DRIVE IMPLEMENTING ES851	10
2.3.7. REMOTE MODEM CONNECTION VIA THE TELEPHONE LINE BETWEEN A COMPUTER AND THE DRIVE IMPLEMENTING ES851	10
2.3.8. REMOTE CONNECTION BETWEEN THE COMPUTER AND THE DRIVE IMPLEMENTING ES851 VIA THE INTERNET USING THE LINK.ELETTRONICASANTERNO.IT PROXY SERVER	10
3. HARDWARE INSTALLATION – WIRING	11
3.1. CONNECTION TO THE SINUS K.....	11
3.2. CONNECTION TO THE SINUS PENTA/PENTA MARINE/IRIS BLUE/SOLAR DRIVE PLUS	11
3.3. CONNECTION TO THE SINUS K/SINUS PENTA/IRIS BLUE – USING ES822 BOARD	12
3.4. CONNECTION TO THE SINUS LIFT	13
3.5. CONNECTION TO THE DCREG AND V317 – USING ES733 BOARD	13
3.6. CONNECTION TO THE ASAB, ASAC0 AND ASAC1	15
3.7. CONNECTION TO THE ASAMV.....	15
3.8. CONNECTION TO THE SINUS M	16
3.9. CONNECTION TO THE SINUS N.....	16
3.10. CONNECTION TO THE SINUS H.....	16
3.11. CONNECTION TO PLANTS IMPLEMENTING THE ES851 DATA LOGGER	17
3.11.1. LOCAL CONNECTIONS.....	17
3.11.2. REMOTE CONNECTIONS.....	19

3.12. CONNECTION KITS	20
3.12.1. CONNECTION KIT FOR PC-DRIVE DIRECT CONNECTION.....	20
3.12.2. CABLE CONNECTING THE PC TO THE DRIVE WITH MULTIMOTOR FUNCTION ACTIVE (IRIS BLUE) OR IP54 VERSION	20
3.12.3. CONNECTION KIT FOR PLANTS IMPLEMENTING ES851	21
3.13. GENERAL NOTES.....	21
4. INSTALLING THE SOFTWARE – CONNECTING PROCEDURES.....	22
4.1. LOCAL CONNECTION	22
4.2. REMOTE CONNECTION.....	23
4.2.1. REMOTE CONNECTION (SLAVE)	23
4.2.2. REMOTE CONNECTION (MASTER).....	24
4.3. REVERSED REMOTE CONNECTION	25
4.3.1. REVERSED REMOTE CONNECTION (MASTER)	25
4.3.2. REVERSED REMOTE CONNECTION (SLAVE).....	27
4.4. REMOTE MASTER-ESPROXY CLIENT CONNECTION	28
4.5. REMOTE SLAVE-ESPROXY SERVER CONNECTION.....	30
5. USER INTERFACE	31
5.1. CHOOSING A DIALOG LANGUAGE	31
5.2. SELECTING THE TYPE OF CONNECTION.....	33
5.2.1. CONNECTION PARAMETERS	34
5.2.2. REMOTE ACCESS CONFIGURATION.....	36
5.2.3. SERIAL PORT PARAMETERS.....	38
5.2.4. LOCAL IP ADDRESS.....	39
5.2.5. OPERATOR SHEET	39
5.2.6. USER SHEET	40
5.2.7. LUM. PAN. SERIAL PORT PARAMETERS.....	40
5.2.8. PARAMETERS FOR MASTER-ESPROXY CLIENT CONNECTION	41
5.2.9. DEVICE LIST WINDOW	42
5.2.10. PARAMETERS FOR SLAVE-ESPROXY SERVER CONNECTION	44
5.3. CHAT WINDOW	45
5.4. MAIN WINDOW	46
5.4.1. NEW PROJECT.....	46
5.4.2. LOAD PROJECT.....	46
5.4.3. FIRMWARE UPGRADING.....	46
5.5. PROJECT WINDOW	47
5.5.1. ITEMS IN THE TREE LIST	48
5.5.2. PARAMETER SHEET	49
5.5.3. MEASURE SHEET	50
5.6. FILE MENU.....	60
5.6.1. NEW EQUIPMENT	61
5.6.2. DEVICE SCANNING.....	62
5.6.3. NEW PARAMETER SHEET	63

5.6.4.	NEW PARAMETER	64
5.6.5.	LOAD PROJECT.....	64
5.6.6.	LOAD DEVICE	64
5.6.7.	LOAD PARAMETER SHEET	64
5.6.8.	SAVE PROJECT	64
5.6.9.	SAVE ALL	64
5.6.10.	SAVE DEVICE	65
5.6.11.	SAVE PARAMETER SHEET	65
5.6.12.	PARAMETER VERSION UPDATING	65
5.6.13.	REFRESH FIRMWARE	65
5.6.14.	FILE TRANSFER	66
5.6.15.	RENAME	67
5.6.16.	CHANGE ADDRESS	67
5.6.17.	DELETE	67
5.6.18.	PARAMETER SORTING	67
5.7.	PARAMETERS MENU	68
5.7.1.	READ ALL.....	68
5.7.2.	WRITE ALL.....	68
5.7.3.	SAVE ALL	68
5.7.4.	READ SELECTED	68
5.7.5.	WRITE SELECTED	68
5.7.6.	SAVE SELECTED.....	68
5.7.7.	WRITE MODIFIED.....	68
5.7.8.	SAVE MODIFIED	68
5.7.9.	ERROR CONTROL WHILE READING OR WRITING PARAMETER SETS	69
5.8.	PRINT MENU.....	70
5.8.1.	PRINT ALL.....	70
5.8.2.	PRINT NON-DEFAULT PARAMETERS.....	71
5.8.3.	PRINT SELECTION.....	71
5.8.4.	PRINT NON-DEFAULT SELECTION	71
5.8.5.	PRINT DIFFERENT FROM FILE *.PRJ.....	72
5.9.	GENERAL ACQUISITION SETTINGS WINDOW MENU	73
5.9.1.	SETTING LIST	74
5.9.2.	CHANGE SETTINGS.....	75
5.9.3.	SAVE FOLDER SETTINGS.....	75
5.9.4.	RESET COMMANDS.....	76
5.10.	CHAT MENU.....	77
5.11.	TOOLS MENU	77
5.11.1.	MODBUS TEST	77
5.11.2.	COMMAND EXECUTER.....	78
5.12.	CONFIGURATION MENU.....	78
5.12.1.	OPTIONS WINDOW	78

5.13. DATA MENU	81
5.13.1. GRAPH WINDOW	81
5.13.2. GRAPH SETTINGS WINDOW	82
5.13.3. ACQUIRED DATA DISPLAY WINDOW	83
5.14. REMOTEDRIVE/IRISCONTROL ACTIVITY TRACKER MENU.....	84
5.15. SCHEDULER MENU.....	85
5.15.1. SCHEDULER ENABLE	86
5.15.2. JOBS PENDING	87
5.15.3. LOGS	88
5.15.4. DESCRIPTION OF THE OBJECTS IN THE TREE LIST	89
5.15.5. MENU	102
5.16. WINDOW MENU.....	104
5.17. HELP MENU	104
5.18. ACQUIRED DATA PRINT PREVIEW WINDOW	105
5.19. SETTING OF ACQUISITION SAVING WINDOW	106
5.19.1. ENABLED	106
5.19.2. AVERAGE EVERY:.....	106
5.19.3. SAVE TO FILE EVERY:.....	106
5.19.4. FILE NAME:	106
5.20. PARAMETER REFRESH WINDOW	107
5.21. DEVICE FIRMWARE UPGRADE WINDOW	109
5.21.1. DOWNLOAD PROCEDURE FOR DCREG (DC) DRIVES.....	110
5.21.2. DOWNLOAD PROCEDURES FOR SINUS PENTA/PENTA MARINE (PD) AND RELEVANT APPLICATIONS (PR AND PS), IRIS BLUE (IB) AND SOLARDRIVE PLUS (PU)	111
5.22. PARAMETER PRINT PREVIEW WINDOW	112
6. O.S. CONFIGURATION FOR POINT-TO-POINT CONNECTIONS.....	113
6.1. CLIENT	113
6.1.1. WINDOWS XP AND WINDOWS 2000.....	113
6.1.2. WINDOWS VISTA	113
6.2. SERVER	113

1. DEVICE OVERVIEW

1.1. General

The RemoteDrive/IrisControl is an application running on Windows™. In local mode, the RemoteDrive/IrisControl is capable of managing our devices dialoguing with the MODBUS protocol with serial standards RS232C, RS422 and RS485, whereas in remote mode it can operate with the TCP/IP protocol. The great adaptability of the RemoteDrive/IrisControl allows rapidly and efficiently setting and storing to file the whole set of the device parameters, its remote control and the possible upgrading of its firmware. This application is also capable of acquiring, graphically representing and recording to file all the variables detected by the device.

This manual refers to the RemoteDrive/IrisControl software version 2.3X, allowing controlling the devices listed in the following sections.

1.1.1. Devices that can be Controlled by the RemoteDrive

DEVICE	IDENTIFIER
ASAB	AB
ASAC0 / ASAC1	AC
ASAMV	AV
DCREG	DC
Data Logger	DL
Firing Board S41 S42 S51 S52	FB
Sinus K – SW IFD	IK
Sinus K – SW LIFT	LK
Sinus LIFT	LT
Sinus Penta / Penta Marine	PD
Sinus H	VH
Sinus Penta – Regenerative SW	PR
Sinus Penta – Synchronous SW	PS
Sinus K – SW VTC	VK
Sinus M	VM
Sinus N	VN
Solardrive Plus	PU
V317	VU

Please refer to the MODBUS User Manual (if available) or to the User Manual of the device being used for the description of the MODBUS protocol, the list of the parameters that can be exchanged and the relevant addresses.



NOTE

To handle previous versions of the devices stated in the table above, use the configuration files stored to the \Devices folder of the RemoteDrive/IrisControl software.



NOTE

Greater SW versions for the devices stated in the table above or other devices manufactured by Enertronica Santerno S.p.A. may be handled by simply adding a configuration file for each version to the RemoteDrive/IrisControl \Devices folder. Configuration files can be downloaded from santerno.com or can be requested to Enertronica Santerno's Technical Service.

1.1.2. Devices that can be Controlled by the IrisControl

DEVICE	IDENTIFIER
Iris Blue	IB
ASAB	AB
ASAC0 / ASAC1	AC
Data Logger	DL
Firing Board S41 S42 S51 S52	FB
Sinus Penta	PD
Sinus H	VH
Sinus M	VM
Sinus N	VN

Please refer to the MODBUS User Manual (if available) or to the User Manual of the device being used for the description of the MODBUS protocol, the list of the parameters that can be exchanged and the relevant addresses.

**NOTE**

To handle previous versions of the devices stated in the table above, use the configuration files stored to the \Devices folder of the IrisControl software.

**NOTE**

Greater SW versions for the devices stated in the table above or other devices manufactured by Enertronica Santerno S.p.A. may be handled by simply adding a configuration file for each version to the IrisControl \Devices folder. Configuration files can be downloaded from santerno.com or can be requested to Enertronica Santerno's Technical Service.

2. SPECIFICATIONS

2.1. Minimum Hardware and Software Required

The hardware and software required are the same as those needed for a standard computer capable of being connected to the Internet.

2.1.1. Hardware

- PC: Pentium 1GHz or greater
- RAM \geq 256 Mb for Windows 2000, 512 Mb for Windows Xp and 1Gb for Windows Vista or 7
- CD-ROM player
- Modem or network card (depending on the remote connection to establish)
- At least 1 serial port or USB port
- Video card or monitor capable of supporting 800x600 resolution display.

2.1.2. Software

- Operating system: WindowsTM NT4, 2000, Xp, Vista, WindowsTM 7.
- If you are using WindowsTM NT4, Internet Explorer 5.00 or higher is required.

2.2. Standard Supply

The RemoteDrive/IrisControl is supplied on a CD-ROM containing an installation wizard to be saved to disk.

2.3. Main Features

 
The application supports two operating modes: *Local* mode and *Remote* mode.

- In "*Local*" mode, your computer is connected directly to the device.
- In "*Remote*" mode, the following options are available:
 - 1) Two computers can connect to each other in remote mode via the telephone line, the LAN or the Internet. The RemoteDrive/IrisControl must be implemented and running on both computers. The drive must be connected to the serial port of one computer (which is the slave device), whereas the other computer is the master. The master uses the slave computer to control the equipment and is capable of exploiting any functionality as if the equipment was connected to the serial port of the master computer. While connected, a Chat window is displayed for the two operators.
 - 2) When the RemoteDrive/IrisControl is running on a computer, it can be connected to the equipment where ES851 Data Logger board is installed. The computer will be connected as a master via the telephone line, the LAN or the Internet to ES851, which can operate as a slave. In that way, the RemoteDrive/IrisControl allows monitoring ES851 Data Logger and the equipment connected to the card itself.

The remote connection uses Winsock services based on the TCP/IP protocol. Dialoguing includes TCP and UDP packages using the port stated in the Connection Parameters section.

Connection examples are given below.

2.3.1. Local Connection




The computer is connected directly to the device by means of an RS232 serial cable or a USB-RS485 adapter. If ES851 Data Logger is installed on the drive, the local connection is made possible through the serial ports in ES851 (RS232 or RS485 ports) or through the Ethernet port in ES851 and a crossed-over Ethernet cable.

2.3.2. Remote Connection via the LAN Between 2 Computers




The devices can be remote-controlled via the Local Area Network of your company. The LAN must support the TCP/IP protocol.

 2.3.3. Remote Connection via LAN and the Internet Between 2 Computers



Internet allows the remote control of long-distance connections at a relatively low cost. If you access the Internet through a firewall or a proxy server, remember to enable the port used for the RemoteDrive/IrisControl.

 2.3.4. Remote Connection via the Internet between two Computers

**NOTE**

When using the remote control services provided from Enertronica Santerno S.p.A., the Internet connection must be established using the link.elettronicasanterno.it Proxy server (see the REMOTE Slave-ESProxy Server Connection).


2.3.5. Remote Point-to-Point Modem Connection via the Telephone Line between 2 Computers




If the connection to the Internet is too slow or is not available, you can use this type of connection.

The Remote Access Server is to be enabled on the computer called via your modem (see O.S. CONFIGURATION FOR POINT-TO-POINT CONNECTIONS).


2.3.6. Remote Connection via the LAN between the Computer and the Drive Implementing ES851

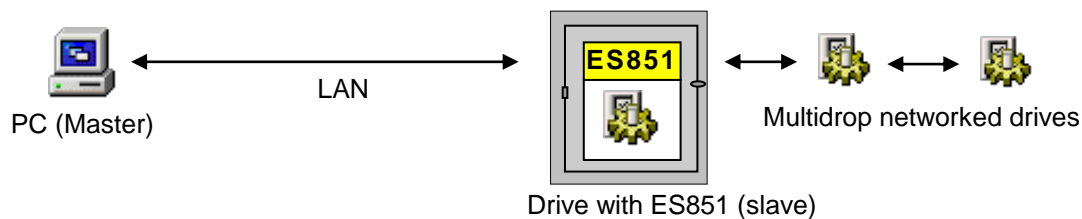

2.3.7. Remote Modem Connection via the Telephone Line between a Computer and the Drive Implementing ES851

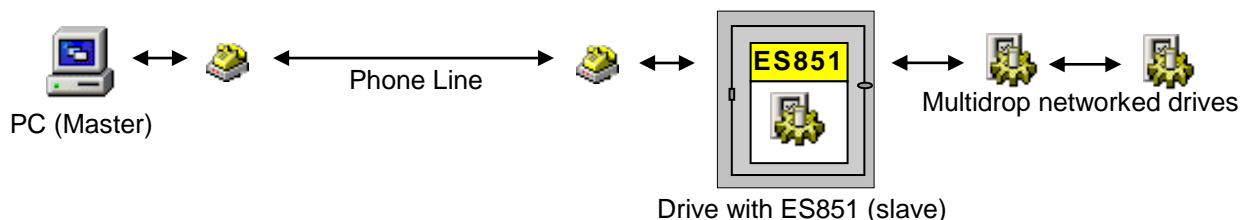

2.3.8. Remote Connection between the Computer and the Drive Implementing ES851 via the Internet using the link.electronicasanterno.it Proxy server

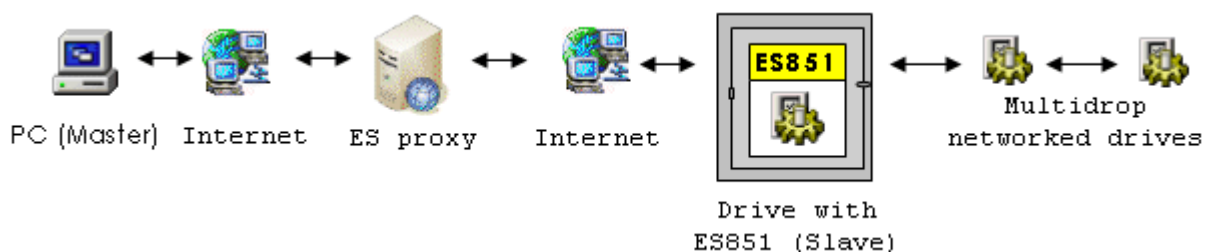

NOTE

This type of connection allows connecting the plant via the Internet using the services provided from the link.electronicasanterno.it Proxy server (see REMOTE Master-ESProxy Client Connection).

3. HARDWARE INSTALLATION – WIRING

3.1. Connection to the Sinus K

For the connection to the serial link, use the CN8 connector located in ES778 control board for sizes S05..S15, or use the connector located in the lower part of the inverter near the terminal board for sizes \geq S20. This is a 9–pole, male D connector having the following features:

Pins	Function
1 – 3	(TX/RX +) Differential input/output + (bidirectional). Positive polarity with respect to pins 2 – 4 for one MARK.
2 – 4	(TX/RX –) Differential input/output – (bidirectional). Negative polarity with respect to pins 1 – 3 for one MARK.
5	(GND) Ground of differential signals.
6 – 7 – 8	Not connected.
9	+5V (not used).

SW1 selectors 1 and 2: ON = TERMINATION and BIAS ON
OFF = TERMINATION and BIAS OFF

You can use the special kit supplied to connect the computer to the inverter. This kit includes a USB-RS485 adapter box and the relevant cable (“SINUS” or RJ45 connector) (see Connection Kits).

3.2. Connection to the Sinus Penta/Penta Marine/Iris Blue/Solardrive Plus

The connection to the serial link, as for Sinus K, is made through connector CN9 located on ES927 control board for sizes S05..S15, or through the connector located in the lower part of the inverter near the terminal board for sizes \geq S20. This is a 9–pole, male D connector having the following features:

Pins	Function
1 – 3	(TX/RX +) Differential input/output + (bidirectional). Positive polarity with respect to pins 2 – 4 for one MARK.
2 – 4	(TX/RX –) Differential input/output – (bidirectional). Negative polarity with respect to pins 1 – 3 for one MARK.
5	(GND) Ground of differential signals.
6	(VTEST) Test supply input – do not connect.
7 – 8	Not connected.
9	+5 V (not used).

SW3 selectors 1 and 2: ON = TERMINATION and BIAS ON
OFF = TERMINATION and BIAS OFF

You can use the special kit supplied to connect the computer to the drive. This kit includes a USB–RS485 adapter box and the relevant cable (“SINUS” or RJ45 connector) (see Connection Kits).

3.3. Connection to the Sinus K/Sinus Penta/Iris Blue – Using ES822 Board

ES822 Serial board allows connecting inverters of the Sinus K, Sinus Penta, Penta Marine, Iris Blue and Solardrive Plus drives through a galvanically isolated interface. We suggest that ES822 board be used to avoid ground loop and possible interface electrical noise. ES822 is provided with an RS485 connector and an RS232 connector for a point-to-point connection to a computer or a device with an RS232 serial interface. Insert ES822 board to Sinus K, Sinus Penta, Penta Marine, Iris Blue and Solardrive Plus inverters to automatically disable the serial interface connectors located on ES822 (**CN8** and **CN9** respectively). Jumper **J1** on ES822 board allows selecting either the RS485 connector (**CN3**) or the RS232 connector (**CN2**).

The RS485 connector is a 9-pole, male D connector having the following features:

Pins	Function
1 – 3	(TX/RX +) Differential input/output + (bidirectional). Positive polarity with respect to pins 2 – 4 for one MARK.
2 – 4	(TX/RX –) Differential input/output – (bidirectional). Negative polarity with respect to pins 1 – 3 for one MARK.
5 – 8	(GND) Ground of differential signals (insulated from the control board)
6 – 7	Not connected.
9	+5V (not used).

SW1 selectors 1 and 2: ON = TERMINATION and BIAS ON
OFF = TERMINATION and BIAS OFF

You can use the special kit supplied to connect the computer to the drive. This kit includes a USB–RS485 adapter box and the relevant cable (“SINUS” or RJ45 connector) (see Connection Kits section).

The RS232 connector is a 9-pole, female (DTE) D connector having the following features:

Pins	Function
1 – 9	Not connected.
2	(TX) Output according to the RS232 standard.
3	(RX) Input according to the RS232 standard.
5	(GND) Ground of TX and RX signals (insulated from the control board).
4 – 6	Linked together for DTR–DSR loopback.
7 – 8	Linked together for RTS–CTS loopback.

Three-wire RS232 is implemented. Handshaking hardware signal control is not implemented. A connection wire of max. 3 m in length is allowed for RS232 interface. No terminator is allowed. Use a modem cable (not crossed-over) to connect your computer to RS232 port.

3.4. Connection to the Sinus Lift

For the connection to the serial link, use the K5 connector located in ES696 control board. This is a 9–pole, male D connector having the following features:

Pins	Function
1	(TX/RX +) Differential input/output + (bidirectional). Positive polarity with respect to pin 2 for one MARK.
2	(TX/RX –) Differential input/output – (bidirectional). Negative polarity with respect to pin 1 for one MARK.
5	(GND) Ground of differential signals.
3 – 4 – 6 – 7 – 8	Not connected.
9	+5V (not used).

J2: A = TERMINATION and BIAS ON
B = TERMINATION and BIAS OFF

J3: A = TERMINATION and BIAS ON
B = TERMINATION and BIAS OFF

You can use the special kit supplied to connect the computer to the inverter. The kit includes a USB–RS485 adapter box and the relevant cable (“SINUS” or RJ45 connector) (see Connection Kits).

3.5. Connection to the DCREG and V317 – Using ES733 Board



NOTE ES733 option board is to be used for a serial link.

Plug the ES733 Board into connector **CN7** of the control board and use the three nylon fasteners to fix it. Also set the jumpers listed below. ES733 board includes two connectors for the control of different electrical standards:

CN2: RS422 (full duplex) / RS485 (half duplex) (set JP1, JP2 and JP3) 9–pole, female connector

Pins	Function
1	GND
2	Not connected
3	RX+ if RS422 is used (full duplex / 4–wire) TX/RX– if RS485 is used (half duplex / 2–wire)
4	TX+ if RS422 is used (full duplex / 4–wire) not connected if RS485 is used (half duplex / 2–wire)
5	GND
6	+5V
7	Not connected
8	RX– if RS422 is used (full duplex / 4–wire) TX/RX+ if RS485 is used (half duplex / 2–wire)
9	TX– if RS422 is used (full duplex / 4–wire) not connected if RS485 is used (half duplex / 2–wire)

CN3: RS232 (set JP3) 9–pole, male connector

Pin	Function
1	DCD
2	RXD
3	TXD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

JP1: 1–2 = RS485 (half duplex / 2–wire)
2–3 = RS422 (full duplex / 4–wire)

JP2: 1–2 = SWAP TX/RX (if RS485 is used, the transmitter and receiver are alternatively enabled)
2–3 = ECHO ON (if RS485 is used, the receiver is always enabled)

JP3: 1–2 = RS232
2–3 = RS422/RS485

JP4: 1–2 = BIAS ON
2–3 = BIAS OFF

JP5: 1–2 = TERMINATION ON
2–3 = TERMINATION OFF

JP6: 1–2 = BIAS ON
2–3 = BIAS OFF

L1: TX (LED)

L2: RX (LED)

For the connection between the computer and the drive to RS485 or RS422 (**CN2**) port, you can use the kit supplied. This includes a USB–RS485 adapter box and the relevant cable (“DCREG” connector) (see Connection Kits).

For the connection to RS232 (**CN3**) port, use a null–modem cable (crossed–over cable).

3.6. Connection to the ASAB, ASAC0 and ASAC1

For the connection to the serial link, use terminals B1(–) and B3(+) located in the lower part of the optional module.



NOTE The optional module must be used for the serial link to ASAB, ASAC0 and ASAC1.

Term.	Function
B1(–)	Differential input/output – (bidirectional). Negative polarity with respect to B3(+) for one MARK.
B3(+)	Differential input/output + (bidirectional). Positive polarity with respect to B1(–) for one MARK.

You can use the special kit supplied to connect the computer to the inverter. This kit includes a USB–RS485 adapter box and the relevant cable (terminals (–) and (+), see Connection Kits. Also, connect the box to the external 230 VAC AC adapter if RS232–RS485 is used.

3.7. Connection to the ASAMV

For the connection to the serial link, use terminals 1(–) and 2(+) in TB1 connector located in COMM BOARD communications board.

TB1:	Function
Terminal	
1(–)	Differential input/output – (bidirectional). Negative polarity with respect to 2(+) for one MARK.
2(+)	Differential input/output + (bidirectional). Positive polarity with respect to 1(–) for one MARK.

You can use the special kit supplied to connect the computer to the inverter. This kit includes a USB–RS485 adapter box and the relevant cable (terminals (–) and (+). (See section 3.12 Connection Kits.) Also, connect the box to the external 230 VAC AC adapter if RS232–RS485 is used.

X1: OFF = TERMINATION ON
ON = TERMINATION OFF

3.8. Connection to the Sinus M

For the connection to the serial link, use terminals S+ and S– located on the device front part:

Term.	Function
S+	Differential input/output + (bidirectional). Positive polarity with respect to S – for one MARK.
S–	Differential input/output – (bidirectional). Negative polarity with respect to S+ for one MARK.

You can use the special kit supplied to connect the computer to the drive/inverters. This kit includes a USB–RS485 adapter box and the relevant cable (terminals (–) and (+). (See Connection Kits.) Also, connect the box to the external 230 VAC AC adapter if RS232–RS485 is used.

3.9. Connection to the Sinus N

For the connection to the serial link, use terminals N(–) and P(+) of the option board.



NOTE The option board must be used for the serial link.

Term.	Function
P	Differential input/output + (bidirectional). Positive polarity with respect to N for one MARK.
N	Differential input/output – (bidirectional). Negative polarity with respect to P for one MARK.

You can use the special kit supplied to connect the computer to the inverter. This kit includes a USB–RS485 adapter box and the relevant cable (terminals (–) and (+). (See Connection Kits.) Also, connect the box to the external 230 VAC AC adapter if RS232–RS485 is used.

3.10. Connection to the Sinus H

For the connection to the serial link, use terminals S+ and S– located on the device front part:

Term.	Function
S+	Differential input/output + (bidirectional). Positive polarity with respect to S– for one MARK.
S–	Differential input/output – (bidirectional). Negative polarity with respect to S+ for one MARK.
SG	Prevent communication failures related to electrical noise.

You can use the special kit supplied to connect the computer to the drive/inverters. This kit includes a USB–RS485 adapter box and the relevant cable (terminals (–) and (+). (See Connection Kits.) Also, connect the box to the external 230 VAC AC adapter if RS232–RS485 is used.

3.11. Connection to Plants Implementing the ES851 Data Logger

ES851 Data Logger board allows both local and remote connections between your computer and a plant.

3.11.1. Local Connections

ES851 is provided with 2 COM ports for a local serial link.

COM 1

COM1 port is located on a male DB9 connector which is connected to ES851 via a flat cable supplied with the board itself.

COM1 port can operate either with RS232 or RS485 standards.



CAUTION

COM1 port can be changed to RS485 port only from ES851/1 version or greater. For ES851/0 boards, COM1 port supports RS232 standard only.

COM 1 RS232

COM1 is factory set to slave RS232 Modbus communication standard. This allows connecting your computer to the plant using COM1 port of ES851 and the COM port of the computer via the null-modem cable supplied with the Connection Kit for Plants Implementing ES851.

Pin	Function
1	CD – Carrier Detect
2	RD – Received Data
3	TD – Transmitted Data
4	DTR – Data Terminal Ready
5	GND – Ground
6	DSR – Data Set Ready
7	RTS – Request To Send
8	CST . Clear To Send
9	RI – Ring Indicator

COM1 RS485

The factory setting can be modified and the COM1 port can be changed into an RS485 serial port (to be stated when ordering the equipment) with the following pin out:

Pins	Function
1 – 3	(TX/RX +) Differential input/output + (bidirectional). Positive polarity with respect to pins 2 – 4 for one MARK.
2– 4	TX/RX –) Differential input/output – (bidirectional). Negative polarity with respect to pins 1 – 3 for one MARK.
5	(GND) Board ground, not isolated.
6	Not connected.
7 – 8	(GND) Board ground, not isolated.
9	+5V (not used).

SW4 selector switch 1: ON = COM1 RS232
OFF = COM1 RS485
SW4 selector switches 3 and 4: ON = TERMINATION ON
OFF = TERMINATION OFF

**NOTE**

In addition to operating SW4 selector switch, move the flat cable supplied from CN3 (default) connector to CN11 connector to change COM1 from RS232 to RS485. Also, some software parameters must be changed (please refer to ES851 Data Logger's User Manual).

This pin out is compatible with the "SINUS" head of the special multipole cable supplied with the Connection Kit for Plants Implementing ES851. Just connect the male DB9 connector of the flat cable to the "SINUS" head of the multipole cable.

COM 2

COM2 port in ES851 allows the RS485 standard only, but is preset for the Profibus standard as well. Its pin out is the following:

Pins	Function
1 – 2	Not connected.
3	(TX/RX +) Differential input/output + (bidirectional).
4	RTS Profibus
5	(GND) Isolated signal ground
6	+5V
7	Not connected.
8	(TX/RX –) Differential input/output – (bidirectional).
9	Not connected.

SW2 selector switches 3 and 4: ON = TERMINATION ON
OFF = TERMINATION OFF

Because a dedicated pin out is used, you must use the special interface cable supplied with the Connection Kit for Plants Implementing ES851. Connect one end of the interface cable to the female DB9 connector located on ES851 and connect the other end of the interface cable to the "SINUS" head of the multipole cable supplied with the Connection Kit.

**CAUTION**

COM2-RS485 port default setting is the master Modbus; to implement the slave mode, change the relevant software parameter (see ES851 Data Logger's User Manual).

ETHERNET

You can also connect the equipment in local mode via the Ethernet port of ES851 through the crossed-over Ethernet cable supplied with the Connection Kit for Plants Implementing ES851. The default IP address of ES851 is 192.168.0.2.

3.11.2. Remote Connections

When using ES851, you can connect even only one computer to the plant.
The following connecting modes are available:

1. Via Modem (analog or GSM modem)
2. Via LAN and VPN-LAN.
3. Internet-Proxy.

MODEM CONNECTION

When using a modem connection, ES851 shall be connected via the RS232 port to a GSM or an analog modem through a straight RS232 cable. Program ES851 accordingly.

If provided with an analog or GSM modem, the remote computer can be connected to the plant in Rem(Master) /Client mode described in the Reversed REMOTE Connection (MASTER) section.

LAN or VPN-LAN

When using the Ethernet port in ES851 board and a straight Ethernet cable, the plant can be connected to a LAN which is allocated to a static IP address and to a gateway.

The remote computer can access the board in Rem(Master)/Client mode described in the Reversed REMOTE Connection (MASTER) section. The remote computer must be connected to the same LAN as ES851 or must be connected to the LAN via a VPN.

INTERNET-PROXY


If you purchased the link.elettronicasanterno.it package, an ES852 board can be connected to a PC via the Internet in Rem(Master)/Client Proxy mode as described in REMOTE Slave-ESProxy Server Connection.

3.12. Connection Kits

3.12.1. Connection Kit for PC-Drive Direct Connection

The connection kit for the direct connection of a PC to a drive includes the following:

1. USB–RS485 adapter box and relevant standard USB cable;
2. special-purpose cable with 2 different PC connectors and 4 different connectors for the connected equipment (see figure below);
- 3.

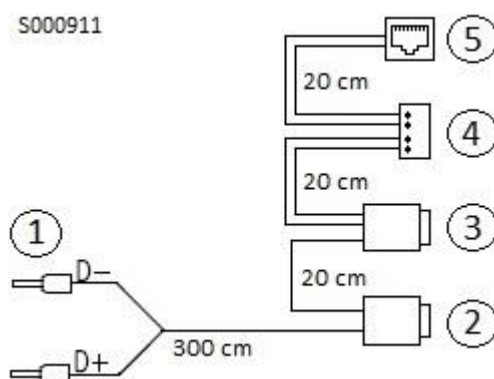


Where:

1. (+) and (–): to USB/RS485 CONVERTER
2. “SINUS” connector (female DB9 connector): to SINUS PENTA / PENTA MARINE / SOLARDRIVE PLUS / SINUS LIFT / IRIS BLUE
3. “DCREG” connector (male DB9 connector): to DCREG / V317
4. 2 pole-terminal: to SINUS M/N/H, ASAB/C
5. Female RJ45 connector: for connection through the display/keypad cable to SINUS PENTA/ PENTA MARINE/ SOLARDRIVE PLUS/ SINUS LIFT/ IRIS BLUE

3.12.2. Cable Connecting the PC to the Drive with Multimotor Function Active (Iris Blue) or IP54 Version

 Serial link cable equipped with male DB9 connector and female RJ45 connector:




Where:

- 1: Male DB9 connector: for the connection to a “SINUS” connector. See the description of the connector in the Connection Kits section.
- 2: Female RJ45 connector: for serial link from keypad cable.

3.12.3. Connection Kit for Plants Implementing ES851

If the ES851 datalogger is installed, the connection kit is equipped with some additional cables in respect to the kit covered in the Connection Kits section:

 - a) Standard crossover Ethernet cable, type EIA/TIA 568-A/B, class 5.
- b) RS232 9-pole standard null-modem cable (crossover cable).
- c) Special cable for COM2-ES851 interface to be connected to the “SINUS” connector of the cable described in the section above for slave Modbus connections via RS485 to ES851 (see figure below).



Where:

- 1) “SINUS”
- 2) “ES851”

3.13. General Notes



NOTE

In case of RS485 multidrop connection to multiple devices, the device with the longest connection to the computer must have the line termination and bias termination on.
The intermediate-located devices must have the line termination and bias termination off.



NOTE

For the following devices: Sinus M, Sinus N and Sinus H drives and ASAMV Soft Starter, the bias cannot be enabled/disabled. Only the line terminator can be enabled/disabled.




NOTE

The line termination and bias for ASAB and ASAC0/1 soft starters cannot be disabled.

4. INSTALLING THE SOFTWARE – CONNECTING PROCEDURES


4.1. Local Connection

1. Check the serial connection between the computer and the device. If you are using the RS485 or RS422 protocol, check to see if the configuration is correct and if the adapter box is powered.
2. Start the RemoteDrive/IrisControl, choose the language and click **Next**.
3. Set the connection type as follows:

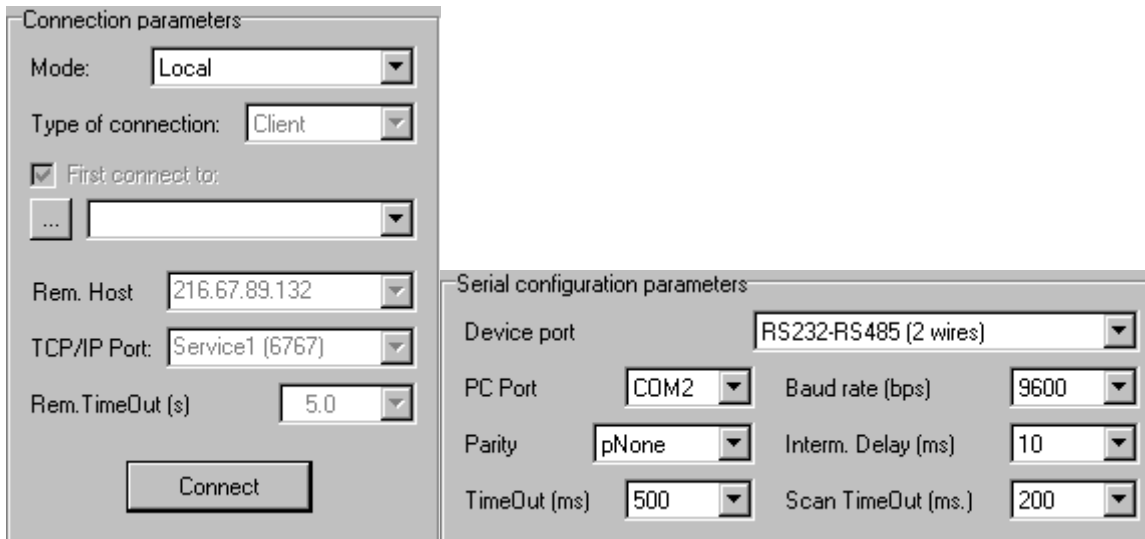

Set the protocol considering the selected connection and serial port. Baud and Parity must match with the values set through the device keypad.


4. Establish the connection (click **Connect**) and check if the connection is on on the status bar of the application (in the bottom right corner): **Connected to: [COM2]**
5. Click **Next**.
6. You entered the main application area. Follow the instructions given in the Main Window section.

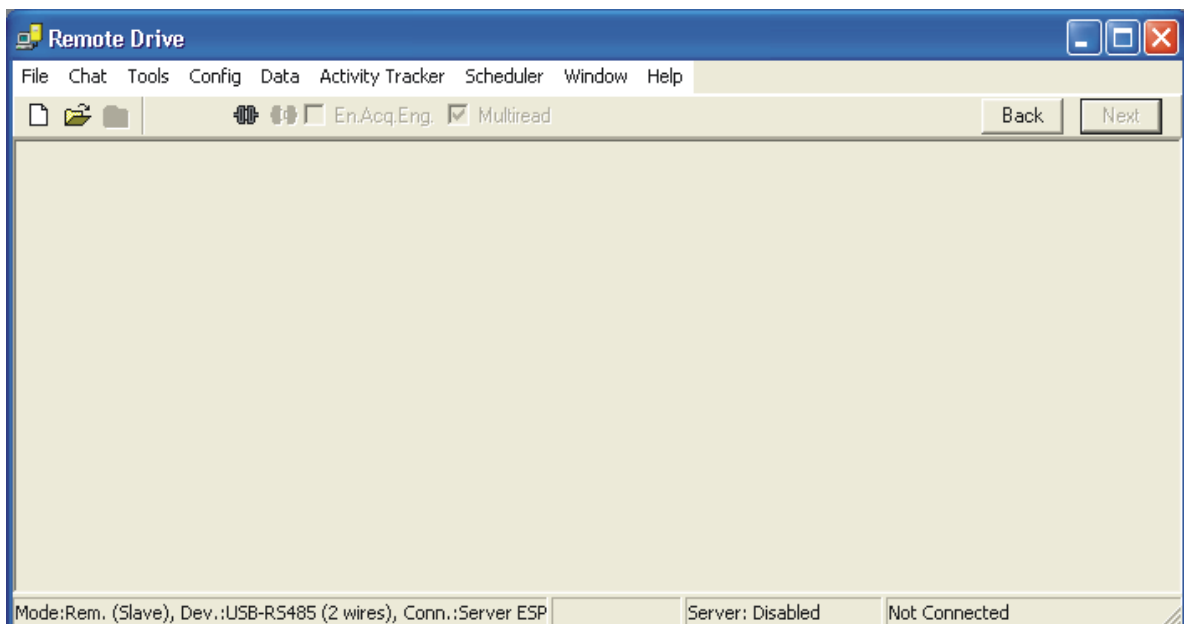


4.2. REMOTE Connection

The goal here is to contact remote service through the Internet at the address specified in the “**Rem. Host**” field where a PC is available with an active RemoteDrive/IrisControl as a master ready to control the device.

4.2.1. Remote Connection (SLAVE)


1. Check the serial connection between the computer and the device. If you are using the RS485 or RS422 protocol, check to see if the configuration is correct and if the adapter box is powered.
2. Start the RemoteDrive/IrisControl, choose a dialog language and click .
3. Set the connection type as follows:

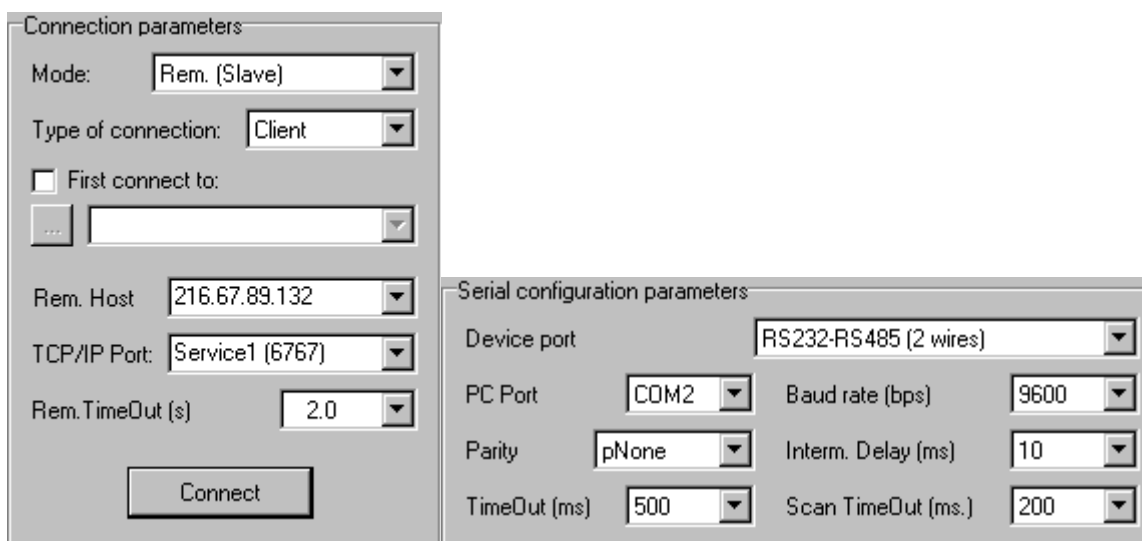

The dialog box is titled "Connection parameters" and is divided into two main sections. The left section contains fields for "Mode" (set to "Rem. (Slave)"), "Type of connection" (set to "Client"), a checkbox for "First connect to:" (unchecked), "Rem. Host" (set to "216.67.89.132"), "TCP/IP Port" (set to "Service1 (6767)"), and "Rem.TimeOut (s)" (set to "2.0"). A "Connect" button is at the bottom. The right section is titled "Serial configuration parameters" and contains fields for "Device port" (set to "RS232-RS485 (2 wires)"), "PC Port" (set to "COM2"), "Baud rate (bps)" (set to "9600"), "Parity" (set to "pNone"), "Interm. Delay (ms)" (set to "10"), "TimeOut (ms)" (set to "500"), and "Scan TimeOut (ms.)" (set to "200").

 

In the Rem. host and TCP/IP Port fields, enter the IP address and the PC port of the computer you are connecting to. The figure above shows that the connection to Enertronica Santerno's Customer Service is already established (Hostrem.: remote1.elettronicasanterno.it, TCP/IP: 6767 or 6768 or 6769 Port).

Set the device port based on the connection you chose and on the correct serial port of the computer. The baud rate and parity must be the same values as the ones set via keypad.



The "User sheet" form contains various input fields for user information. It includes "Customer ID" (1), "Confirmation password" (masked), a "Save password" checkbox (checked), and a "Send" button. Other fields include "*Company" (Tecnotess), "Address" (via Grandi 3 Milano), "*First Name" (Achille), "*Last Name" (Giacomoni), "Telephone" (025437843), "Fax" (025437845), "E-Mail" (agiacc@tecnotess.it), "VAT N." (46564344545), "F.C." (GMACQQ34F22A123Z), and "Bank" (Banca Popolare Milano). There are also fields for "IBAN Code" (ASFGFHJTTYUU) and "BIC Code" (2323243). A large text area for "*Call Reason" is present, along with a note "(*) Required Data".

Fill in the User Sheet.

4. Without closing the RemoteDrive/IrisControl, establish the connection to the Internet. This connection is the same as the one you use to navigate or to send and receive e-mail messages.
5. Click **"Connect"**. Check if the connection is on on the status bar of the application (in the bottom right corner): .
This can be seen when the Chat window automatically opens.
6. Click .
7. You entered the main application area. Follow the instructions given in the Main Window section. When in slave mode, remember that you can write or save any parameter only after enabling the corresponding option in the Configuration menu. A password is required to access this option.


4.2.2. Remote Connection (MASTER)


Generally, the master computer receives the slave calls (e.g. the master computer is controlled by an operator from Enertronica Santerno S.p.A.), so it must be activated before the slave starts calling. The master computer shall send the information the slave computer requires to establish a connection (local IP address, TCP/IP port).




NOTE

The following data items are required for remote customer service: IP = remote1.elettronicasanterno.it and TCP/IP Port = 6767, or 6768, or 6769.




1. Start the RemoteDrive/IrisControl, choose the language and click .
2. Fill in the connection sheet as follows:

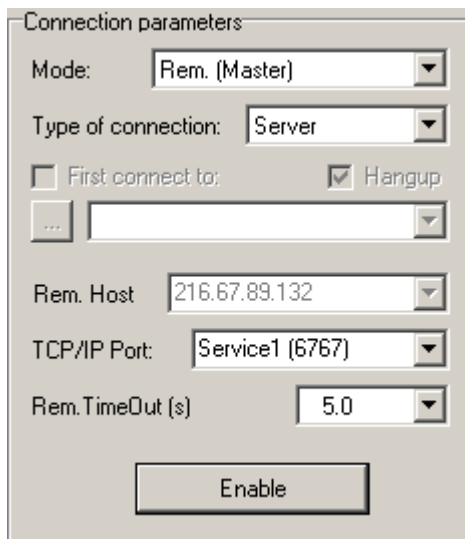

Fill in the Operator Sheet.

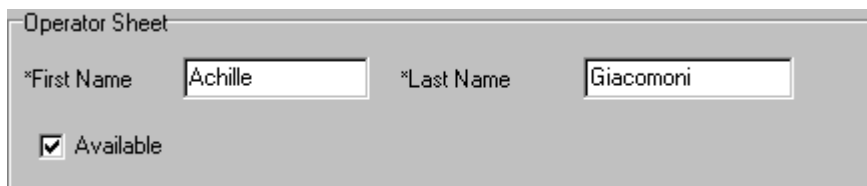

   
3. Without closing the RemoteDrive/IrisControl, establish the connection to the Internet. You can use the same Internet connection as the one you use to navigate or to send and receive e-mail messages.
4. Send your local IP address to the slave computer. Your local IP address must be PUBLIC and STATIC for Internet connections and for using the TCP/IP port, that must be open for input data and output data both in TCP/IP mode and UPD mode.


5. Click **"Enable"**. The RemoteDrive/IrisControl is now enabled to receive a connection, as shown on the status bar:  If the connection is on, the status bar will display the following string: .
6. Once the connection is established, click .
7. You entered the main application area. Follow the instructions given in the Main Window section. The connection to the Internet will slow down the data transfer procedure; this is due to the connection quality.

4.3. Reversed REMOTE Connection


This type of connection is required for remote monitoring when no operator is needed. With this connection mode, the master device places the calls, which will be received by the slave device.

 
4.3.1. Reversed REMOTE Connection (MASTER)



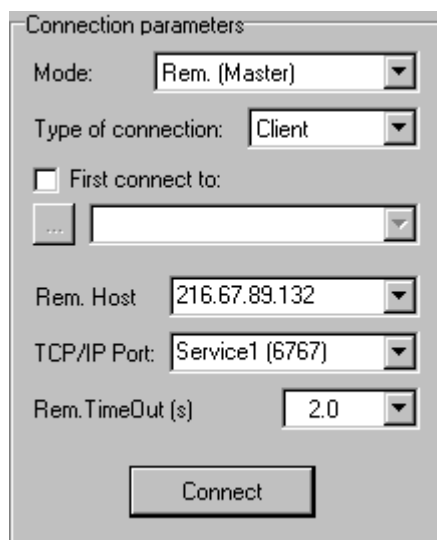 1. Start the RemoteDrive/IrisControl, choose a dialog language and click .
2. Fill in the connection sheet as follows:





Connection parameters


Mode: 


Type of connection: 

 ☐ First connect to:
 


Rem. Host: 

 TCP/IP Port: 

 

Rem.TimeOut (s): 

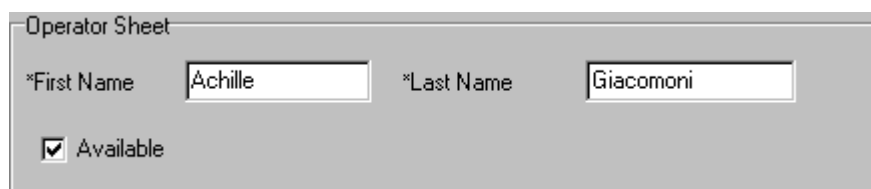

Fill in the Operator Sheet:



Operator Sheet

*First Name:  *Last Name: 

☒ Available

3. Do the following based on the type of connection:
 - a) **Remote computer-Local computer via LAN:** In **Host rem**, enter your IP address; in TCP/IP Port, enter the port of the computer you are connecting to.
 - b) **Remote computer-Local computer via the Internet/point-to-point modem:** Without closing the RemoteDrive/IrisControl, establish the connection to the Internet or the modem connection, or tick "First connect to" and select the desired modem connection.
 In **Host rem.**, enter the IP address of the computer you are connecting to. When an Internet connection is established, the IP address must be PUBLIC and STATIC, otherwise, no connection is

 
 
possible between the two computers. In **TCP/IP Port**, enter the port of the computer you are connecting to.

c) **Remote computer-Local computer/ES851 via modem:** Without closing the RemoteDrive/IrisControl, establish the point-to-point connection, or tick "First connect to" and select the desired modem connection.

In **Rem. host**, when ticking "First connect to ", the 10.0.0.1 address is automatically displayed. This is the default address for modem connections to the plants provided with ES851 Data Logger. The **TCP/IP Port** is set to 6767 by default.


In **Rem. TimeOut**, increase the delay time (10 seconds if you are connecting to a GSM modem, 5 seconds if you are connecting to an analog modem).

d) **Remote computer-ES851 via LAN or LAN-VPN:** in **Rem. host**, enter your IP address; in **TCP/IP Port**, enter the port of ES851 Data Logger you are connecting to.

4. Click "Connect" and check if the connection is established (see bottom right corner of the status bar of the application): 
5. The Chat window automatically opens.
6. If enabled on slave-side, you are asked to enter an access password (Options Window) required to complete the access procedure.
7. Click .
8. You gained the main work area of the application; follow the instructions given in the Main Window.

4.3.2. Reversed REMOTE Connection (SLAVE)


1. Check serial link between your computer and the equipment. If RS485 or RS422 protocols are used, make sure that their configuration is correct and check if the adaptor box is powered on.
2. Start the RemoteDrive/IrisControl, choose the language and click **Next**.
3. Set the type of connection as follows:

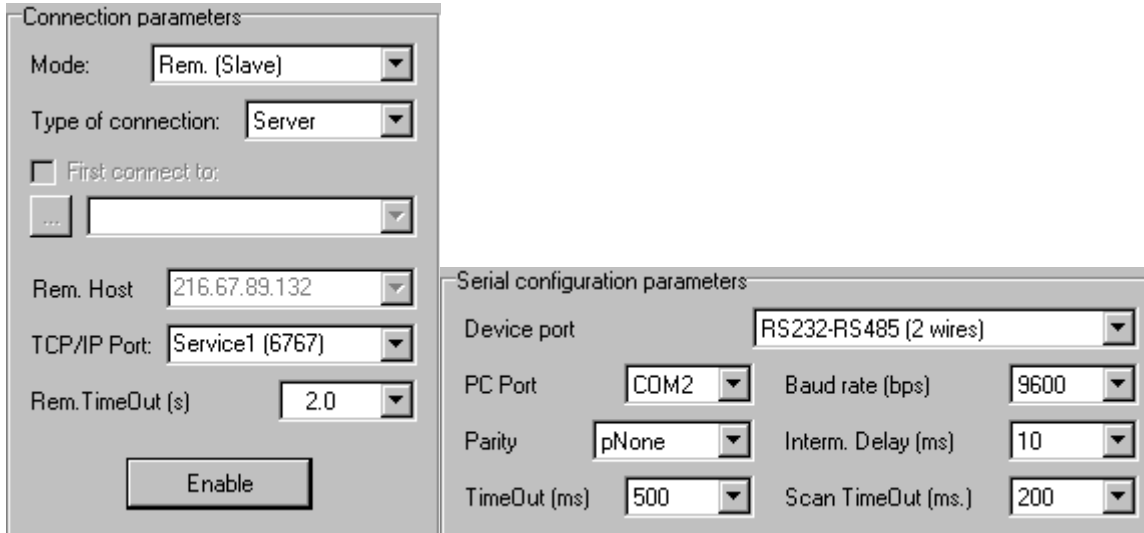

The screenshot shows two panels in the RemoteDrive/IrisControl configuration window. The left panel, titled 'Connection parameters', includes fields for 'Mode' (set to 'Rem. (Slave)'), 'Type of connection' (set to 'Server'), a checkbox for 'First connect to:' (unchecked), 'Rem. Host' (216.67.89.132), 'TCP/IP Port' (Service1 (6767)), 'Rem. TimeOut (s)' (2.0), and an 'Enable' button. The right panel, titled 'Serial configuration parameters', includes fields for 'Device port' (RS232-RS485 (2 wires)), 'PC Port' (COM2), 'Baud rate (bps)' (9600), 'Parity' (pNone), 'Interm. Delay (ms)' (10), 'TimeOut (ms)' (500), and 'Scan TimeOut (ms.)' (200).

Do not change the default setting for the TCP/IP port; otherwise, set the value defined by the network administrator.

For serial link configuration parameters, set the port of the device based on the selected connection, and set the correct serial port for the computer. The Baud rate and Parity must match with the values set via keypad for the equipment being used.



The screenshot shows the 'User sheet' form. It includes fields for 'Customer ID' (1), 'Confirmation password' (*****), a 'Save password' checkbox (checked), and a 'Send' button. Below these are fields for '*Company' (Tecnotess), 'Address' (via Grandi 3 Milano), '*First Name' (Achille), '*Last Name' (Giacomoni), 'Telephone' (025437843), 'Fax' (025437845), 'E-Mail' (agiac@tecnotess.it), 'VAT N.' (46564344545), 'F.C.' (GMACQQ34F22A123Z), and '*Call Reason'. There are also fields for 'Bank' (Banca Popolare Milano), 'IBAN Code' (ASFGFHJTYYU), and 'BIC Code' (2323243). A note at the bottom left states '(*) Required Data'.


Fill in the User Sheet.


4. Connect to the Internet without closing the RemoteDrive/IrisControl.
5. Click "Enable". The RemoteDrive/IrisControl is now enabled to receive connections, as stated in the status bar: **Server: Enabled**. If the connection is established, the status bar shows **Connected by: 192.168.0.13**.

The local operators can use the RemoteDrive/IrisControl with the same functionality as the local connection (they can open projects, read parameters, acquire information...). Only, write access to the device is protected by a dedicated password (Configuration Menu).

4.4. REMOTE Master-ESProxy Client Connection

This type of connection allows the remote connection via the Internet to the devices implementing ES851 or the RemoteDrive/IrisControl configured as ESProxy slave servers implementing the "link.elettronicasanterno.it" pack.

1. Start the RemoteDrive/IrisControl, choose a dialog language and click .
2. Set the type of connection as follows:

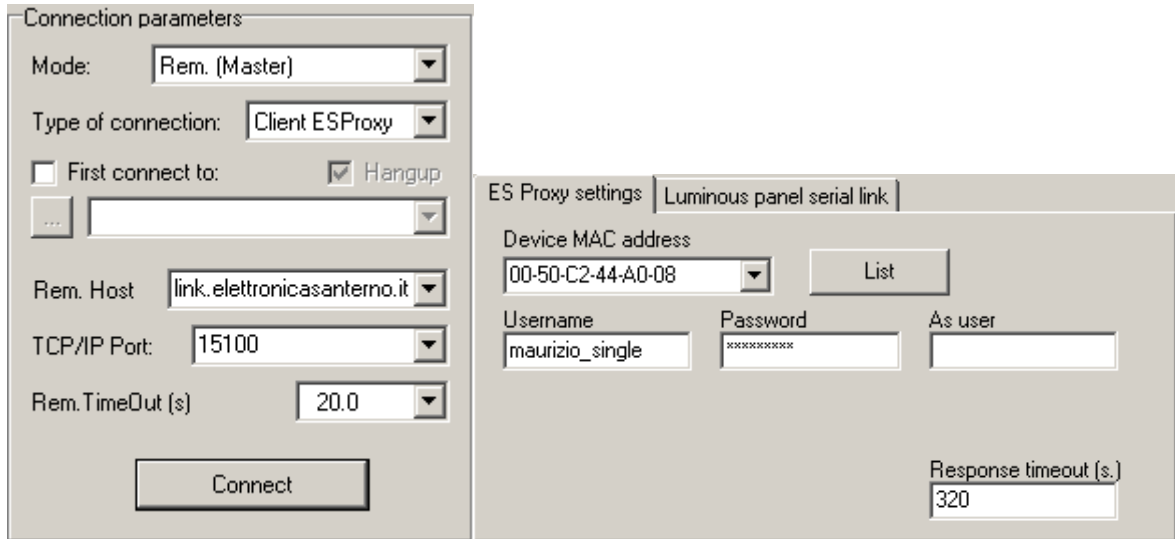

Fill in the Operator Sheet.

When selecting ES Proxy Client, the remote host and the TCP/IP port are automatically set up for the Proxy-Internet connection.


3. Enter the Rem. TimeOut (the min. timeout to be entered is 20s. Set at least 50s for GPS Internet connections).
4. Enter the username and password of the Internet account provided from Enertronica Santerno S.p.A..



NOTE

The RemoteDrive/IrisControl is case-sensitive. Pay attention when entering your username and password.

5. Enter the MAC address of the computer or of the ES851 Data Logger you are connecting to. If the MAC address of ES851 is not known, press the List button to view the available boards (see the Device List Window section).
6. Click "**Connect**"; the window below appears:

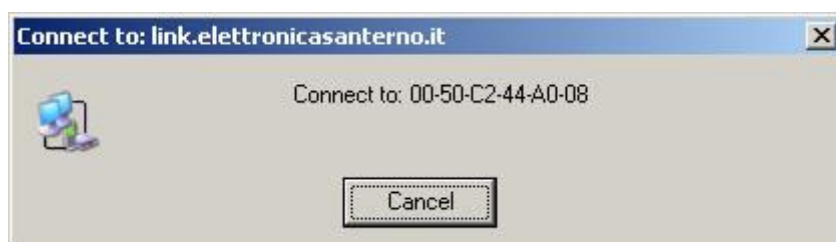

Once the connection is established, the RemoteDrive/IrisControl will expect a response from ES851 Data Logger or from a remote computer implementing the RemoteDrive/IrisControl:




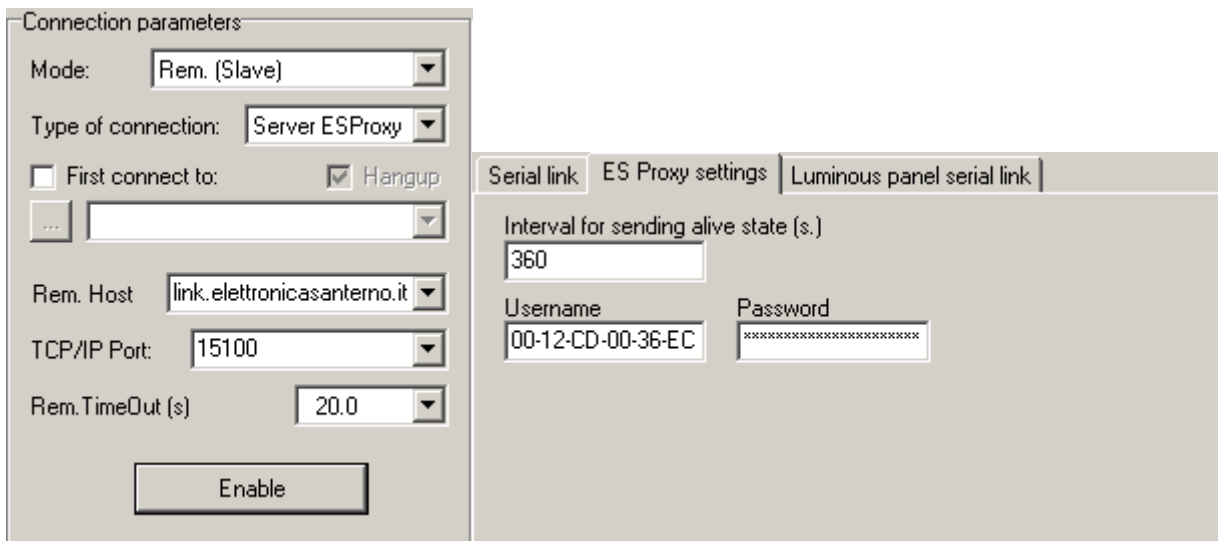
If the connection is successful, the connection window closes and the following message is displayed on the status bar: Device with MAC:00-50-C2-44-A0-08 is connected.

7. Click Next.
8. You entered the main application area. Follow the instructions given in the Main Window section.

4.5. REMOTE Slave-ESProxy Server Connection

This is the typical configuration for the local supervisor computer of the plant and supports remote connections via the Internet from the RemoteDrive/IrisControl configured as Rem. (Master) - ESProxyClient. It operates only after enabling the link.elettronicasanterno.it pack.

1. Start the RemoteDrive/IrisControl, choose a dialog language and click .
2. Set the type of connection as follows:



The screenshot shows the 'Connection parameters' dialog box. On the left, the 'Mode' is set to 'Rem. (Slave)', 'Type of connection' is 'Server ESProxy', 'First connect to' is unchecked, 'Rem. Host' is 'link.elettronicasanterno.it', 'TCP/IP Port' is '15100', and 'Rem. TimeOut (s)' is '20.0'. An 'Enable' button is at the bottom. On the right, the 'ES Proxy settings' tab is active, showing 'Interval for sending alive state (s.)' as '360', 'Username' as '00-12-CD-00-36-EC', and 'Password' as a masked field.

 
 

 
Fill in the User sheet.

3. Enter the username and password of the Internet account provided from Enertronica Santerno S.p.A. to identify your own RemoteDrive/IrisControl application.



NOTE

 

The RemoteDrive/IrisControl is case-sensitive. Pay attention when entering your username and password.

4. Click **"Enable"**. The RemoteDrive/IrisControl can now support Internet connections; the status bar will show . Based on the **Timeout for sending the Alive status**, the RemoteDrive/IrisControl will cyclically send information about its status to "link.elettronicasanterno.it", as you can check from the status bar:
 This indicates that the alive status will be sent in 358 sec.
 The alive status is being sent.
 This indicates that the connection to "link.elettronicasanterno.it" is established.
5. Both when expecting a connection and when a connection is established, The local operators can use the RemoteDrive/IrisControl with the same functionality as the local connection (they can open projects, read parameters, acquire information...). Only, write access to the device is protected by a dedicated password (Configuration Menu).


5. USER INTERFACE

The RemoteDrive/IrisControl includes three main windows. When the program is started, the “Dialog language” window is displayed first.




The   buttons allow switching from the “Dialog language” window to the window relating to the type of connection to the ordinary operating area (or Main Window).

 5.1. Choosing a Dialog Language

When the RemoteDrive/IrisControl is started, the “Dialog language” window is displayed first. Click a flag to choose a dialog language, or click the  button.


The RemoteDrive/IrisControl supports 7 foreign languages.

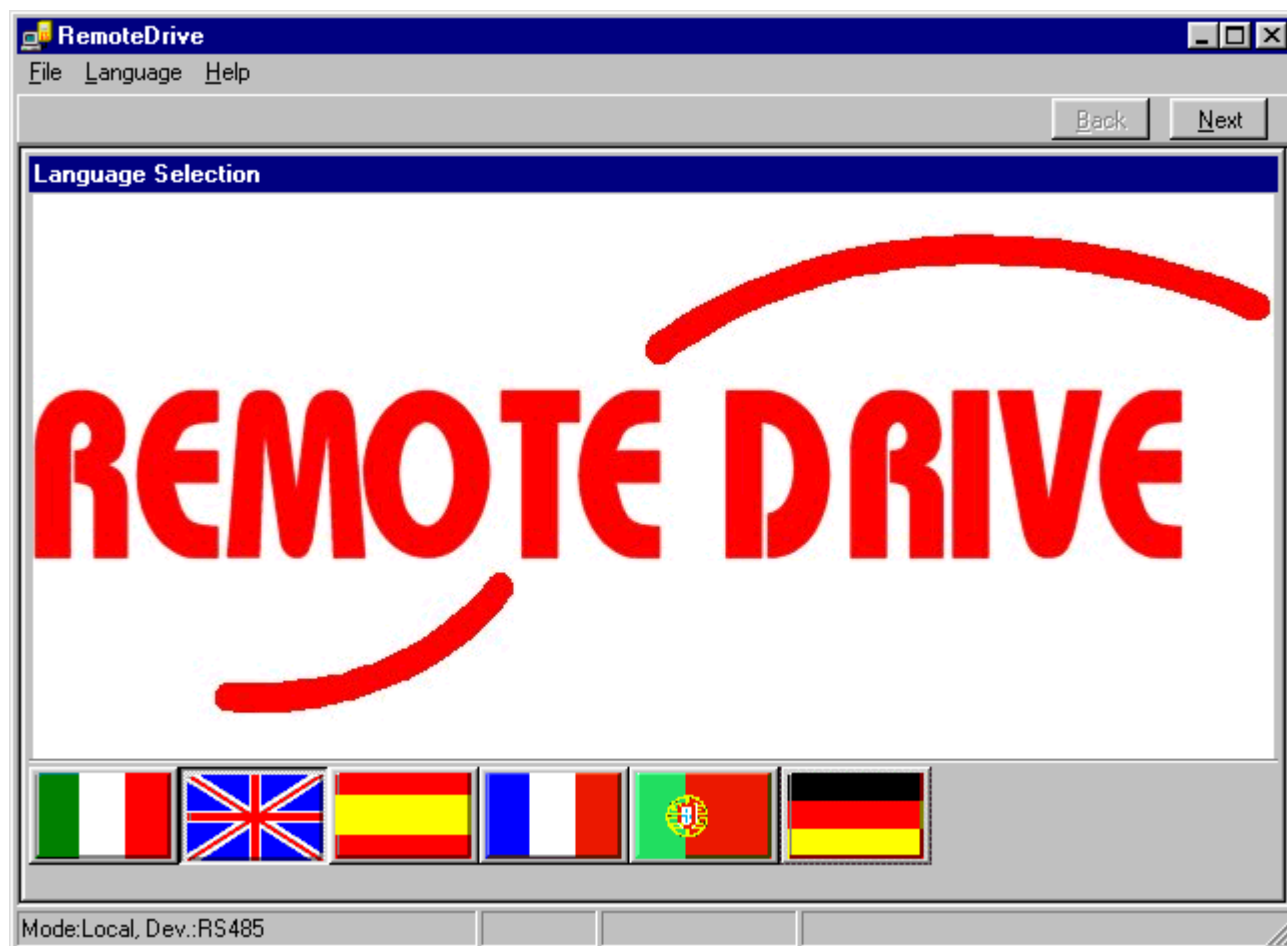




5.2. Selecting the Type of Connection

If you click **Next**, the “Connection selection” window appears.

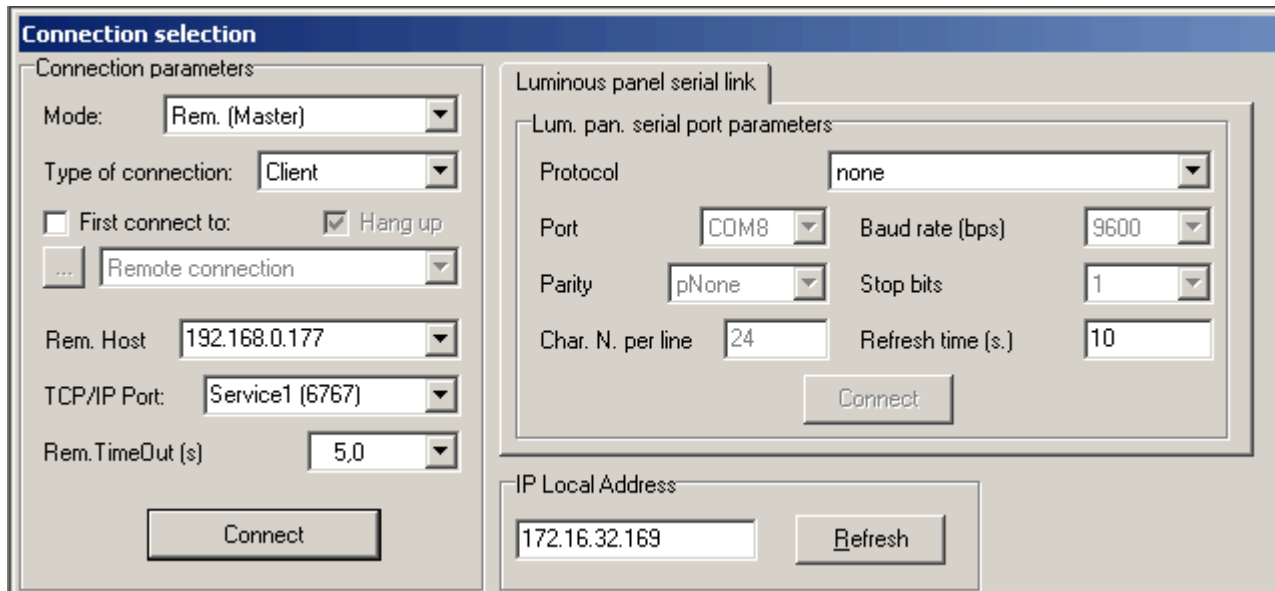

This window allows selecting the type of connection and the master or slave configuration of the computer with respect to the device or to another computer. The display of the required parameters will change depending on the selected mode (only the parameters used are active).

5.2.1. Connection Parameters

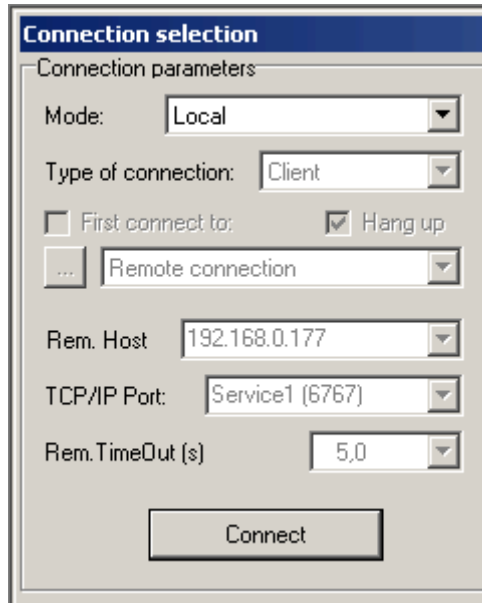

5.2.1.1. Operating Modes

1. Local

Local mode: the computer is connected directly to the equipment.

2. Remote (Master)

The computer controls the equipment through another computer configured as a slave or through ES851 Data Logger.

3. Remote (Slave)

The computer receives any query from the master computer and sends them to the equipment. Any response will be sent to the master computer. In slave mode, you can read any measures and parameters; also, you can write parameters after entering the write-enable password from the Configuration Menu.

5.2.1.2. Type of Connection

This parameter is enabled in remote connection mode only; it determines if the calls are to be sent or received by the computer:

1. Client

The call must be sent by the computer. Before calling, make sure that the computer configured as a server is enabled to receive the call.

2. Server

The computer is configured to receive the calls sent by the client computer.

3. ESProxy Client

The computer calls the Remote device (ES851 Data Logger or a remote computer) using the interconnection service offered from the Proxy server (link.elettronicasanterno.it).

4. ESProxy Server

The computer sends information about its status and its availability for connections using the interconnection service offered from the Proxy server (link.elettronicasanterno.it).

5.2.1.3. Remote Host Address

This parameter is activated with the **Client** and **ESProxy Client** connections. You can enter the IP address of the server computer; when the **ES Proxy Client** is selected, this parameter corresponds to the domain name of the Proxy server "link.elettronicasanterno.it".

5.2.1.4. TCP/IP Port

TCP/IP port used for the connection. The port number ranges from 1 to 65535 and can be configured by selecting a number that is not used by any other TCP/IP services. When the **ESProxy Client** and **ESProxy Server** connections are used, this is the TCP port of the Proxy server "link.elettronicasanterno.it" (15100).

5.2.1.5. Remote Timeout

Maximum delay (in ms) of the response sent by the server after a client's query. Once this timeout is over, a timeout message will be displayed.

5.2.1.6. Connect/Enable Button

In local mode, it enables or stops the serial connection. In remote mode, if the **Client** connection is established, it enables or stops the connection to the server computer or to ES851 Data Logger. If the **Server** connection is established, it enables or disables the computer to receive a call from the client computer.


5.2.1.7. First connect to

This is available only if "Type of connection **Client**" is selected. ☒ First connect to:

If the "First connect to" box is selected, a remote connection is automatically established before connecting the equipment. This connection is required if the equipment to be queried is connected to a modem, or whenever a remote connection is needed.




This combobox allows choosing one remote connection among the

available connections set in the **Windows Network Connections** window. Alternatively, click  to create a new connection or to alter any existing connection. See the Remote Access Configuration section.

To avoid automatically stopping the remote connection when the equipment is disconnected, do not select the ☐ Hang up checkbox.

5.2.2. Remote Access Configuration

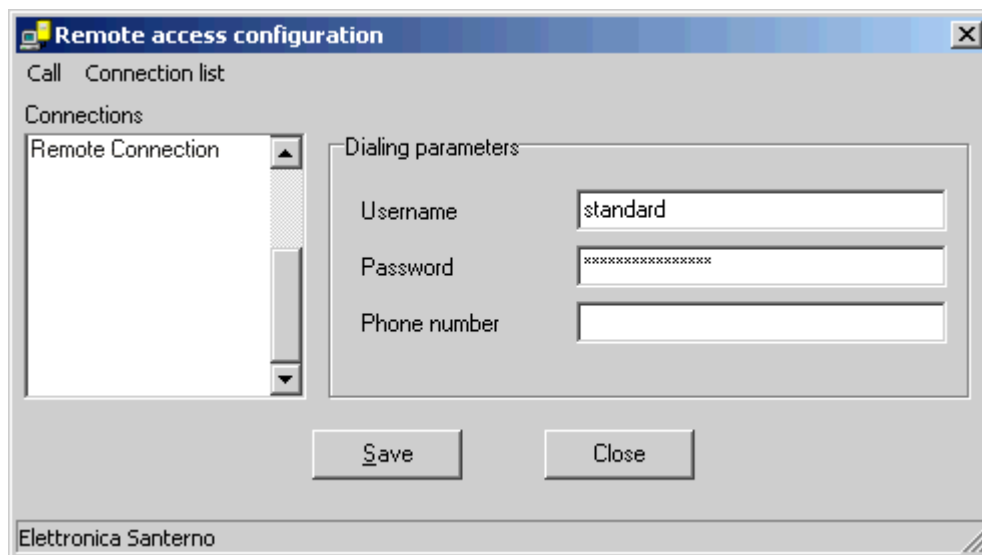

The “Remote access configuration” window is a simplified interface for the “**Windows network connections**” window.

For each connection, you can set and alter the following data: Username, Password, Phone number.


Use the **Call->Dial** command to test the selected connection.

5.2.2.1. Connection List Window




CAUTION


This window can be accessed only when running on Windows 2000, Windows NT4 and Windows XP. This window is not available if you are using Windows Vista as the operating system.

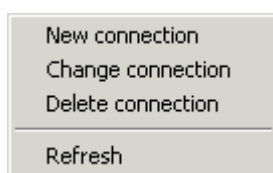


From the **Connection list** menu, use the **Connection list->New connection** to create additional connections, as this function automatically recalls the utilities of the operating system to create a new connection.

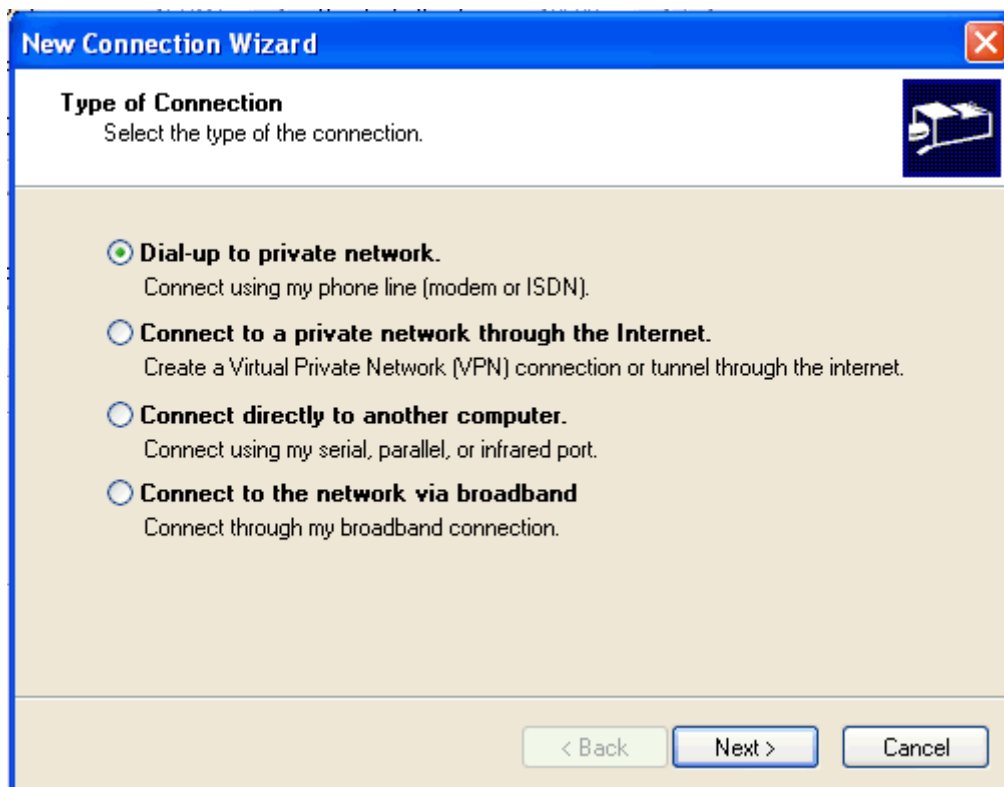

You can also alter advanced connection parameters using the **Connection list -> Change connection** command.

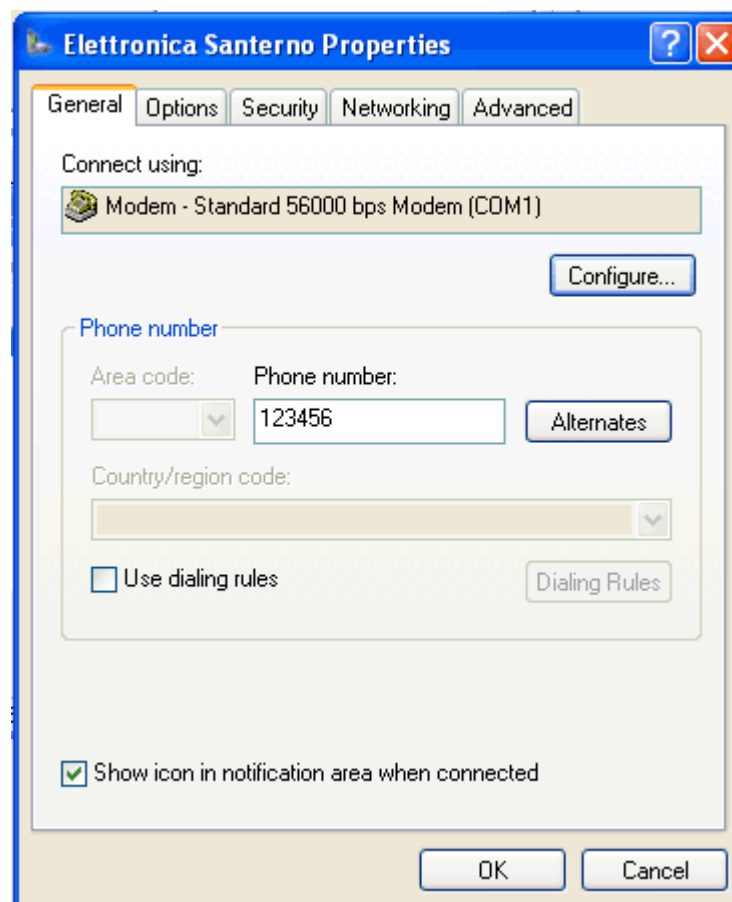

5.2.3. Serial Port Parameters

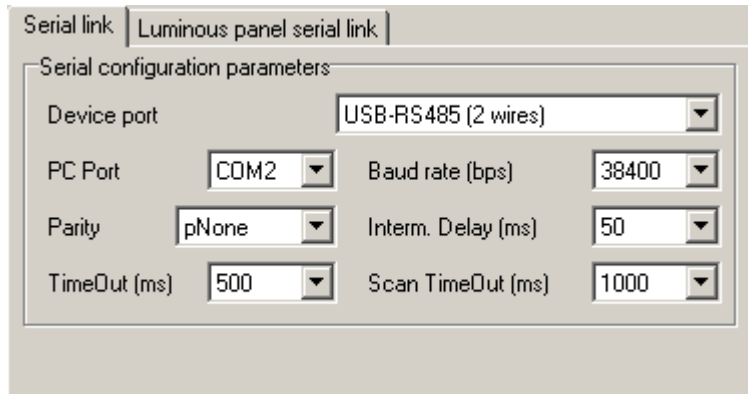

These are the parameters required for configuring the serial port of the computer connected to the equipment in local mode and in slave mode.

5.2.3.1. Device Port

1. **RS232**
Three-wire RS232C standard is used.
2. **USB-RS232**
RS232C protocol using a USB port of the computer through a USB/RS232 adapter box.
3. **RS232-RS422 (4-wire)**
Four-wire RS422 protocol using a USB port of the computer through a USB/RS422 adapter box.



NOTE

A connection cable different from the one supplied with the RemoteDrive/IrisControl must be used.

4. **USB-RS422 (4-wire)**
Four-wire RS422 protocol using a USB port of the computer through a USB/RS422 adapter box.



NOTE

A connection cable different from the one supplied with the RemoteDrive/IrisControl must be used. The configuration of the jumper in the adapter box must be changed accordingly.

5. **RS232-RS485 (2-wire)**
not supported
6. **USB-RS485 (2-wire)**
Two-wire RS485 protocol using a USB port of the computer through a USB/RS485 adapter box.
7. **RS232-Keypad** (DCREG and V317 only)
Special protocol for the firmware updating through the keypad connector. It uses RS485 standard; the adapter box is then needed.



NOTE

A connection cable different from the one supplied with the RemoteDrive/IrisControl must be used.

8. **USB-Keypad** (DCREG and V317 only)
As step 7 above (RS232-Keypad), but the USB port of the computer is used. The USB/RS485 adapter box is needed.



NOTE

A connection cable different from the one supplied with the RemoteDrive/IrisControl must be used.

5.2.3.2. PC Port

Serial port of the computer connected to the equipment.

5.2.3.3. Baud Rate

Baud rate of the serial port. It must be the same as the one selected for the equipment.

5.2.3.4. Parity

Sets the parity bits. They must be the same as the parity bits selected for the equipment.

5.2.3.5. Intermediate Delay

Minimum delay between a response and a new query. This is a waiting time, expressed in ms, between the last response received by the equipment and a new query sent by the PC. This is useful when you use the **RS485** protocol and the equipment connected during the response maintains the transmission for a time longer than the time required for the data transfer.

 
5.2.3.6. Timeout

Max. allowable time between a computer query and a device response. When this timeout is over, an alarm message is displayed.

5.2.3.7. Scan Timeout

Max. allowable time between the PC query and the device response during the scanning of the devices connected to the network.


5.2.4. Local IP Address



A dialog box titled "IP Local Address" with a text input field containing "192.168.0.4" and a "Refresh" button.

It appears in Remote mode and states the IP address for the computer in the current connection session.

5.2.5. Operator Sheet

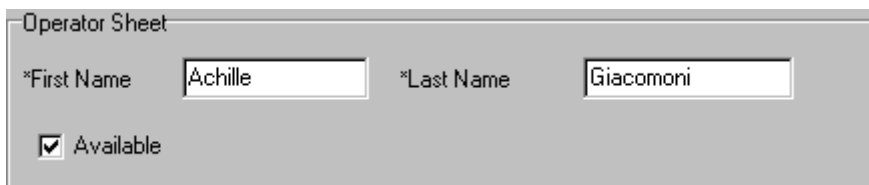


A dialog box titled "Operator Sheet" with two text input fields: "*First Name" containing "Achille" and "*Last Name" containing "Giacomoni". Below these fields is a checkbox labeled "Available" which is checked.

It appears in Master mode and must be filled in because it states - for the slave computer operator - the name of the service technician you called. As soon as the connection is established, it will appear in the Chat window on the slave computer.

Available: it always indicates if the operators can receive a call or if they are unavailable at the moment.

5.2.6. User Sheet

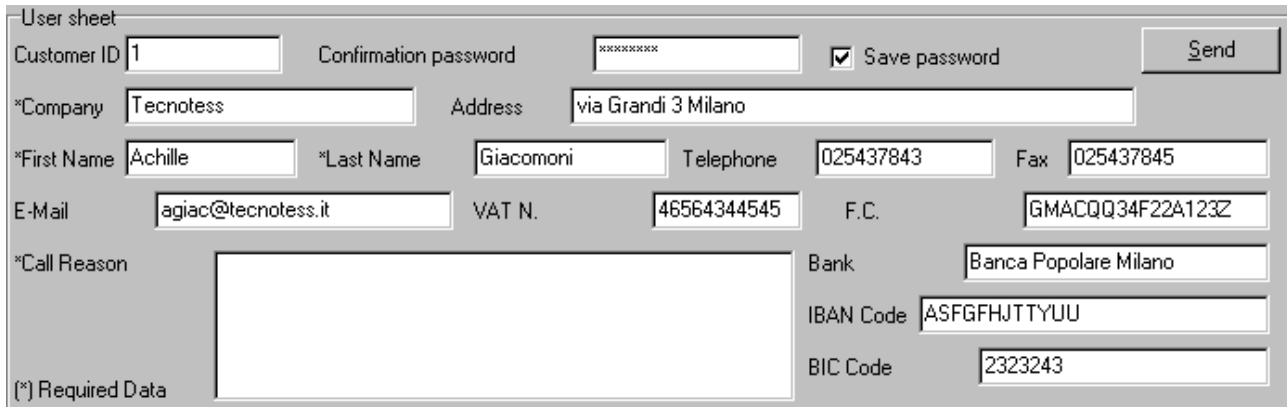

User sheet

Customer ID Confirmation password ☒ Save password

*Company Address

*First Name *Last Name Telephone Fax

E-Mail VAT N. F.C.

*Call Reason

Bank

IBAN Code

BIC Code


(*) Required Data

It appears in Slave mode and must be filled in because it identifies the company, the operator and the reason of the call. If you prefer using a token-assistance contract, you must state the user code and password. In that case, once the connection has been established, the token totalizer will be displayed in the top right corner of the window (counting starts after 10 seconds).

Tokens: Seconds:

The **Send** button allows automatically recording the user personal data and fiscal data in the service database — after sending a query to the personnel in charge.

5.2.7. Lum. Pan. Serial Port Parameters

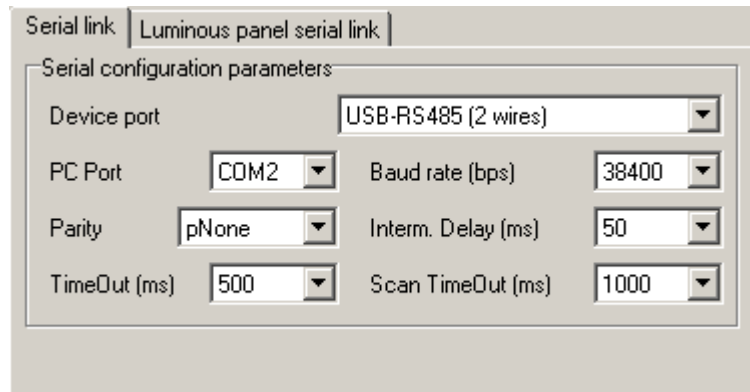

Serial link

Serial configuration parameters

Device port

PC Port Baud rate (bps)

Parity Interm. Delay (ms)

TimeOut (ms) Scan TimeOut (ms)

These are the parameters required when configuring the computer serial port connected to the luminous panel (LED display).

5.2.7.1. Protocol

Selects the driver allowing controlling the display. The driver consists in .dll files. The filenames correspond to the model of LED display contained in the **LedPanelsDLL** folder.

5.2.7.2. Port

Serial port of the PC connected to the LED display.

5.2.7.3. Baud Rate

Baud rate of the serial port. It must be the same as the baud rate selected for the LED display.

5.2.7.4. Parity

Sets the parity bits. They must be the same as the parity bits selected for the LED display.

5.2.7.5. Stop Bits

Sets the number of stop bits.

5.2.7.6. Character N. per Line

Maximum allowable number of characters per line that can be displayed.


5.2.7.7. Refresh Time (s.)

Time when the last message sent to the LED display is reproduced.

5.2.7.8. Connect Button

Once the LED display parameters are programmed, click the **Connect** button to communicate with the display.

5.2.8. Parameters for MASTER-ESProxy Client Connection

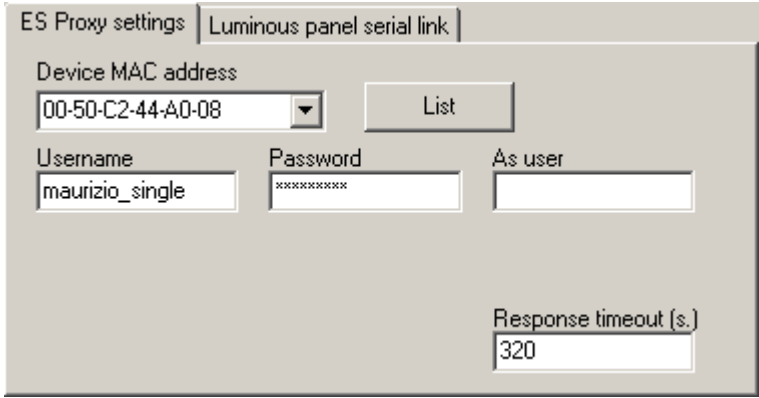

Parameters required for the connection to ES851 Data Logger or to a computer where the RemoteDrive/IrisControl is configured as an ESProxy Slave Server through a Proxy server via the Internet (see the REMOTE Slave-ESProxy Server Connection).

5.2.8.1. MAC Address of the Device

MAC address of ES851 Data Logger or ID of the RemoteDrive/IrisControl, configured as ESProxy Slave Server, you want to connect to.

5.2.8.2. Username and Password

Username and password required for accessing the ESProxy Server.

5.2.8.3. List Button

Opens the window containing all the devices you can connect to (see the Device List Window).



NOTE Enter the correct username and password to correctly execute this command.

5.2.8.4. As User


If special rights are granted to the users, they can connect to the Proxy Server entering the username specified in this box.

Do not use: this is available for the Customer Service only.

5.2.8.5. Resp. T.out(s.)

Maximum delay (in seconds) of the response sent from the device you are connecting to. The allowable timeout ranges from 0 to 100000; the default setting is 320.

5.2.9. Device List Window

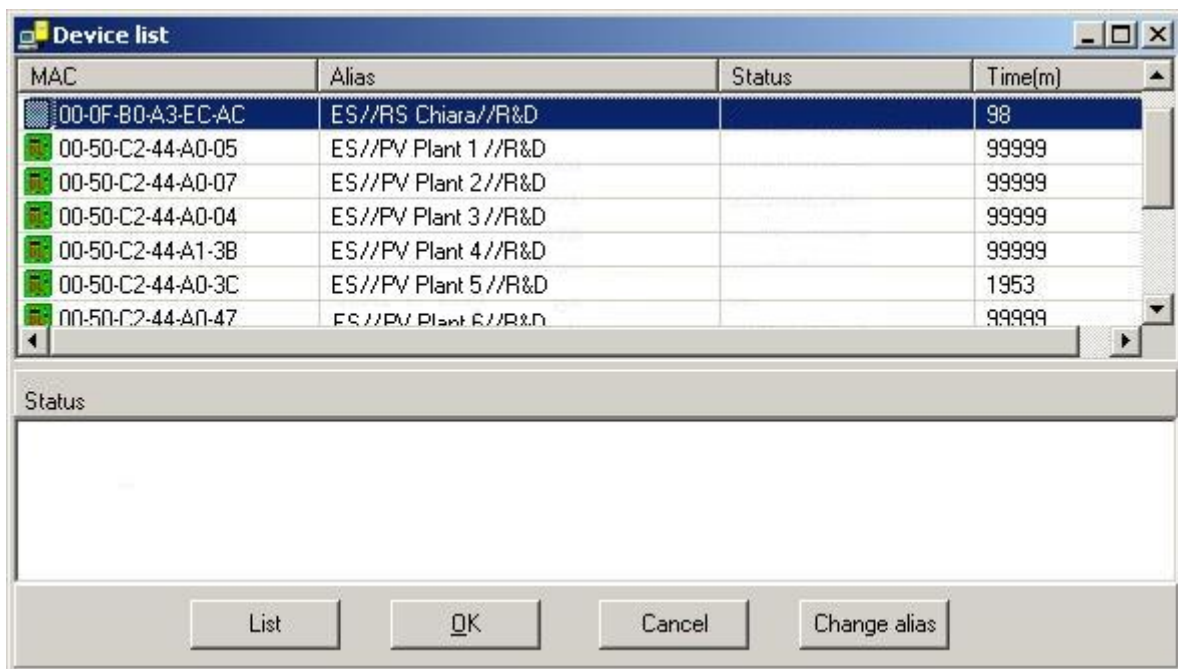

This window shows the whole list of the devices assigned to the user set in Username and Password in the ESProxy Configuration window in Master-ESProxy Client. A device can be an ES851 Data Logger board or a computer where the RemoteDrive/IrisControl is configured as ESProxy Server Slave.

The following items are provided:

- **MAC:** MAC address of the device.
- **Alias:** Description of the device. The “link.elettronicasanterno.it” service provides a default description for each device. To edit this description, see the Change Device Alias Window.
- **Status:** Lists the different errors and states of the device. If this line is highlighted, errors and states are reproduced in the “**Status:**” box below the table.
- **Time(m):** Time (in minutes) elapsed from the last status message sent from the device.

5.2.9.1. List Button

If you press the List button, the portal refreshes the device list and the new list is displayed.



NOTE Enter the correct username and password to correctly execute this command.

5.2.9.2. OK Button

This button allows copying - in the MAC Address of the Device box (ESProxy Configuration window) - the MAC address of the device selected in the list and closes the Device List Window.


5.2.9.3. Cancel Button

Closes the window.

5.2.9.4. Change Alias Button

Allows opening the window to change the device alias.

5.2.9.5. Change Device Alias Window

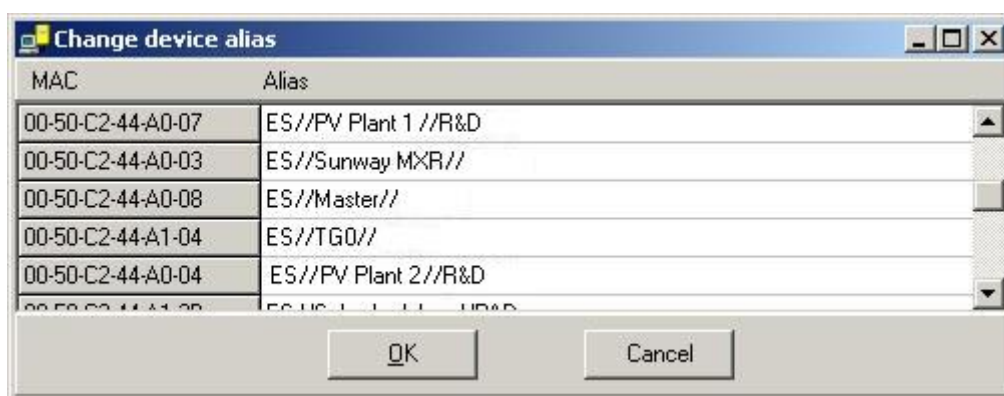

This window allows changing the alias assigned to each device. It provides a blank line for each device where you can add comments for the device identification.


Press OK to confirm changes. Any changes will be saved to the “**boardsalias.txt**” file in the RemoteDrive/IrisControl folder.



NOTE

The link.elettronicasanterno.it service provides a Default Alias list which is automatically displayed and which can be changed from the **Change device alias window**.

5.2.10. Parameters for Slave-ESProxy Server Connection

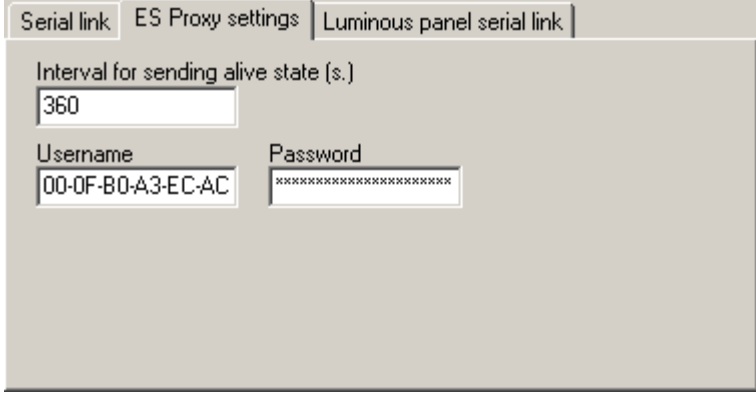

Serial link	ES Proxy settings	Luminous panel serial link
Interval for sending alive state (s.)		
<input type="text" value="360"/>		
Username		Password
<input type="text" value="00-0F-B0-A3-EC-AC"/>		<input type="password" value="xxxxxxxxxxxxxxxx"/>

Parameters required for the connection via Internet of the computer from a computer configured as Master ESProxy Client (see the REMOTE Slave-ESProxy Server Connection section).

5.2.10.1. *Timeout for Sending the Alive Status*


Timeout (in seconds) elapsing when the alive status of the computer is sent more than once. The computer periodically sends its alive status to allow the activity to be monitored via the Internet. Sending the alive status permits the Proxy server to consider the RemoteDrive/IrisControl as ready to receive connections.

The alive status includes information about the operating conditions and error messages (if any).

5.2.10.2. *Username and Password*

Username and password of the Internet account identifying the RemoteDrive/IrisControl of the computer connected as Slave - ESProxy Server. As a username, enter the MAC address of the computer. The password to be used will be provided by Enertronica Santerno S.p.A. once the Username is known.

5.3. Chat Window

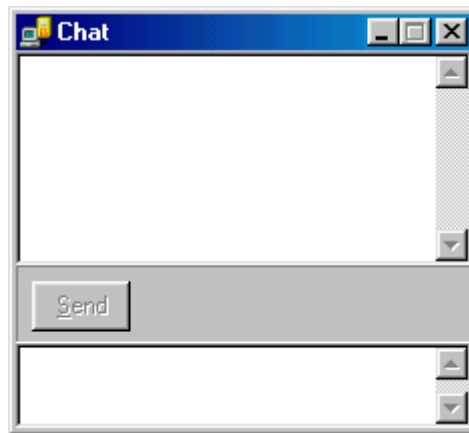


The Chat window appears when you select a remote connection mode. It is active only once the connection has been established and is used to dialog with the operator of the remote computer.


The top box lists history messages from top to bottom. Each message is preceded by Date, Time and Sender. The RemoteDrive/IrisControl is the <System> sender.

Use the bottom box to write the message. The message may be composed of multiple lines. The cut and paste function is supported.


5.4. Main Window

The main window contains the menus for using the RemoteDrive/IrisControl functions. This is the third window appearing when clicking the  button.

The Main Window is an MDI-type window (MDI means Multiple Document Interface) containing all the application windows. The command menu changes depending on the active window.

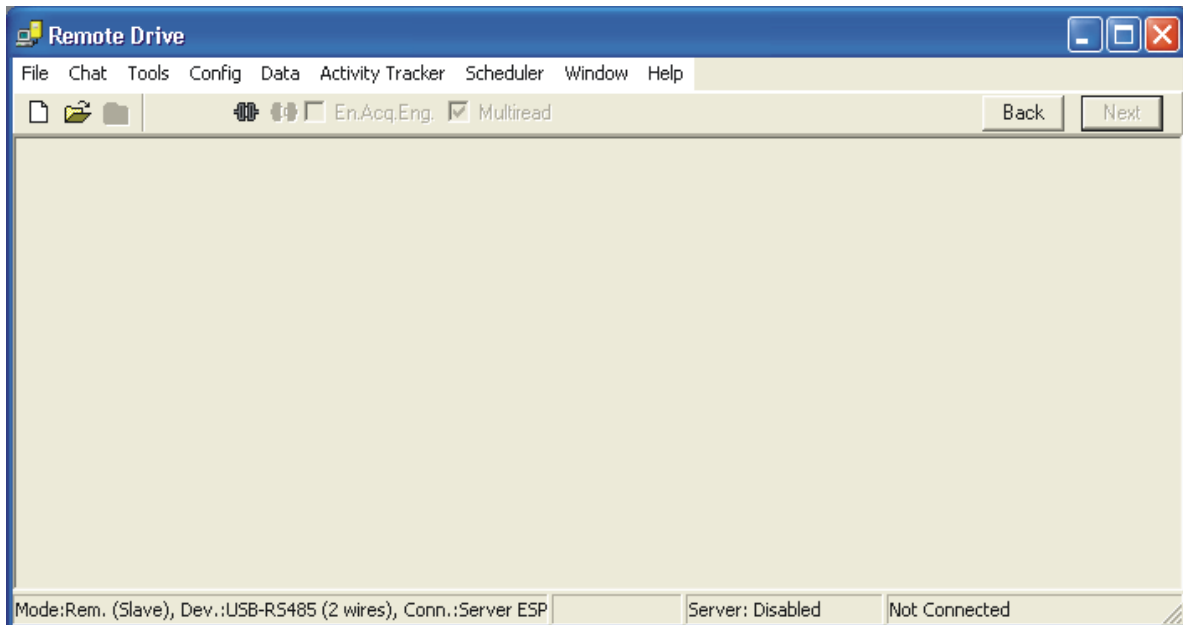

Click File; the dropdown menu below appears:

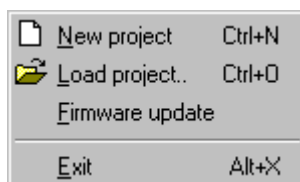

5.4.1. New Project

Opens the project window. See the Project Window section.

5.4.2. Load Project

Loads a project from file. See Load Project from the File Menu.

5.4.3. Firmware Upgrading

Opens the window of the firmware download utility of the equipment. See Device Firmware Upgrade Window.


5.5. Project Window



NOTE





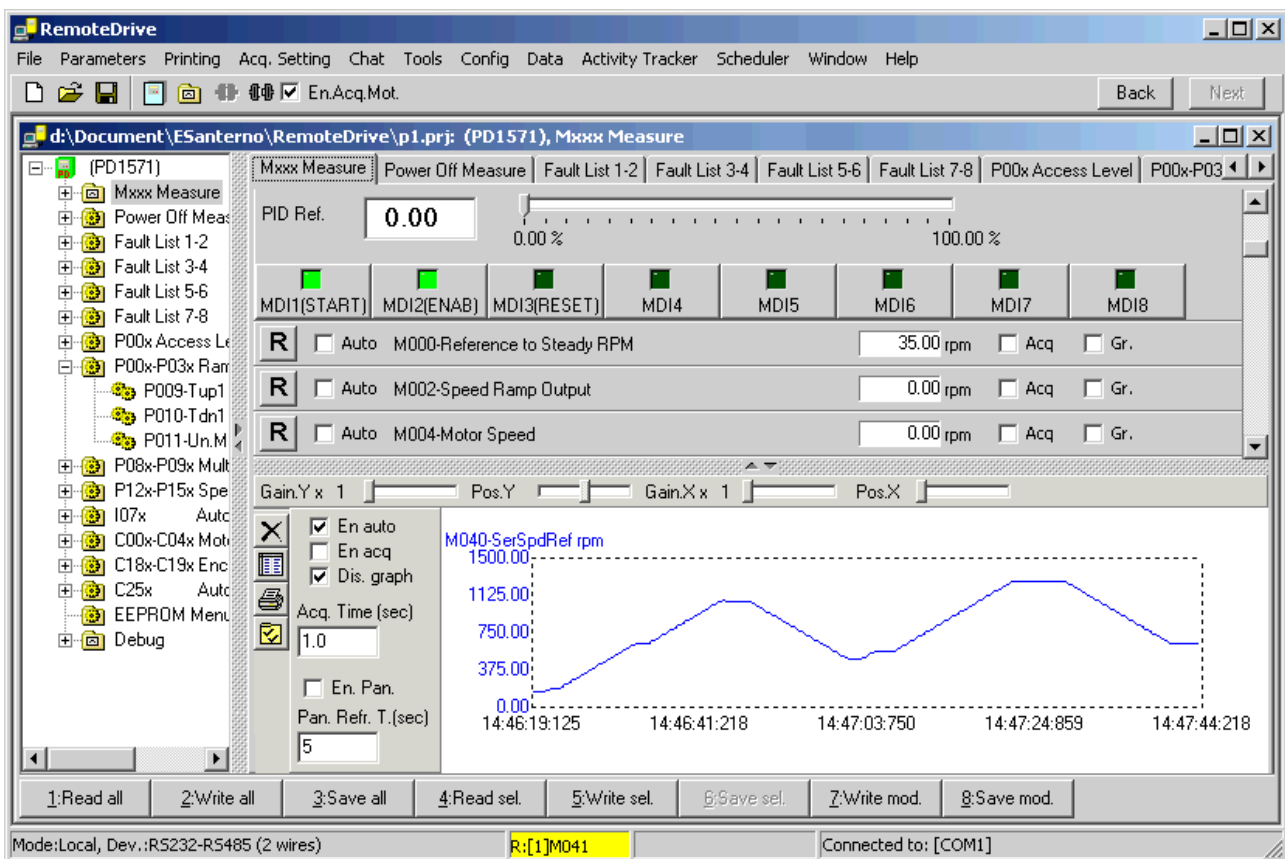

The screens shown in this section are given as examples, as they relate to special equipment (DCREG). Therefore, not all the screens displayed by the RemoteDrive/IrisControl are like the ones shown in this section.

This window displays the parameters for one or multiple devices and opens within the Main Window. This window may be customized. You can select the number of devices to display and the number of parameters for each device. The structure is called a project and may be saved to disk and be reloaded when required.



The project window is divided into two sections: a tree structure (left) summarizing the devices and the relevant parameters, and a sheet structure (right) grouping the different parameters by characteristic.

Command Bar

-  En.Acq.Eng. All-purpose enable of the acquisition engine.
-  Command: New Equipment.
-  Goes to the next measure sheet of the project.
-  Connection shortcut command.
-  Disconnection shortcut command.
-  ☒ Multiread Status of the Multiread option (see the Options Window).








**NOTE**

This option can be activated only when using RemoteDrive/IrisControl 2.30 or greater versions and ES851 Data Logger 166x or greater versions.

**CAUTION**

If a remote connection is established to an ES851 Data Logger board implementing SW versions DL 160x or DL 165x or to a RemoteDrive/IrisControl implementing SW versions 2.12 or 2.01 or previous versions, the **Multiread** option **MUST** be disabled because it is NOT supported. When the Multiread option is activated, NO readout is allowed.

5.5.1. Items in the Tree List

Level	Object	Reference in the File Menu	Description
1	  [1] Motor.1 [DC306]	Device	MODBUS address, name, device type + firmware version
2	 KEY MENU - P00x  MEASURE MENU - Mxxx	Parameter sheet	The parameter sheet may be of two types:  parameters  measures.
3	 P000-Key	Parameter	Parameter name, truncated description of the parameter.

You may save and load the entire tree list or some part of it. There is no limitation for the device number, the parameter sheets and the parameters to be entered in the tree list, but a lot of them will make the application run slowly.

Limitation only concerns **Measure Sheet**: the RemoteDrive/IrisControl supports up to 100 measure sheets with at least 50 measure parameters for each sheet.

5.5.2. Parameter Sheet

LOOPS CONFIGURATION MENU - C05x		SPEED FEEDBACK CONFIGURATION MENU - C07x	
R	W	S	C070-Feedback Selection 2:Tach 80-250V
R	W	S	C072-Encoder Pulses/Rev 1024 Pulses
R	W	S	C074-Tacho Transduction Ratio 60.00 V / 1000 R


Contains the device configuration parameters. Normally, the configuration parameters can be read, edited, written and saved to Eeprom.


R Read

W Write


S Save to Eeprom

The parameter value highlighted in red  Pulses means that its value cannot be read. The represented value is the default value.

The parameter value with a yellow background  Pulses means that the parameter has been changed but has not been written.

The parameter value with an aqua background  Pulses means that the parameter has been changed and written but has not been saved to Eeprom.

5.5.3. Measure Sheet

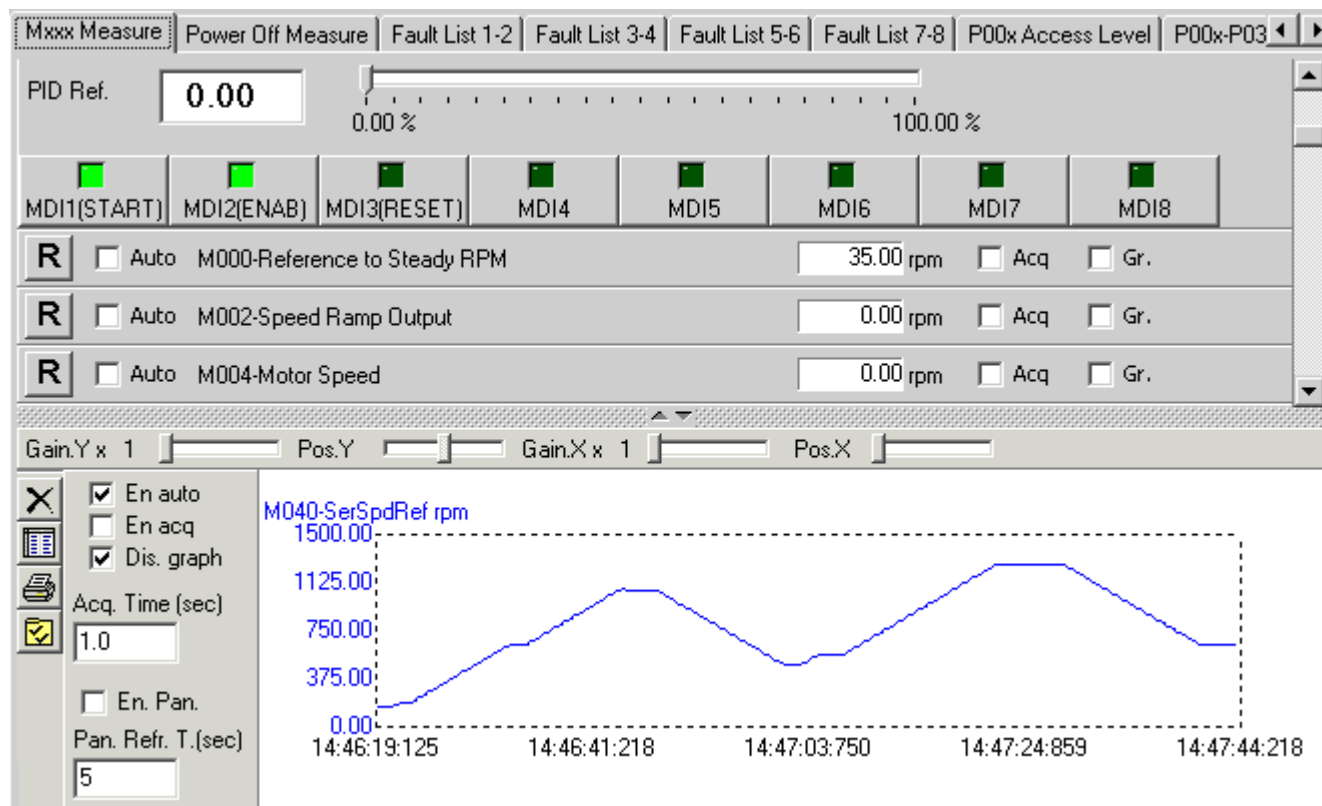

This sheet allows displaying, acquiring, and graphically representing the time trend of all the device measure parameters.

The acquisition results may be printed or saved to disk in RTF or CSV format.

You can record the device history data and associate the acquisition of a certain number of measures with its editing.

A console for the device remote control is also available (see Remote Console Panel).

5.5.3.1. Measure Panel

R	<input type="checkbox"/> Auto	M000-Reference Applied to the Ramps	-15.33 %	<input checked="" type="checkbox"/> Acq	<input checked="" type="checkbox"/> Gr.
----------	-------------------------------	-------------------------------------	----------	---	---

R Reads the current measure.

☐ Auto Performs the measures in automatic mode at time intervals specified by **Acq. Time**.

☐ Acq. Records the measure. Recording may be done in two ways: either at time intervals specified by **Acq. Time**, only if **En Acq** is active, or at each device state change, only if ☐ Acq. is active in the panel displaying the device state.

☐ Gr. Graphically represents the time trend only if the **Dis. graph** option is active (see Graph Panel and Acquisition Table).

5.5.3.2. Logic State Display Panel

R	<input type="checkbox"/> Auto	M030-Digital Input State from Serial Connection	ENABLE	<input checked="" type="checkbox"/>	<input type="checkbox"/> Acq	<input type="checkbox"/> Gr.	START	<input checked="" type="checkbox"/>	<input type="checkbox"/> Acq	<input type="checkbox"/> Gr.
			MDI1	<input checked="" type="checkbox"/>	<input type="checkbox"/> Acq	<input type="checkbox"/> Gr.	MDI2	<input checked="" type="checkbox"/>	<input type="checkbox"/> Acq	<input type="checkbox"/> Gr.
			MDI3	<input checked="" type="checkbox"/>	<input type="checkbox"/> Acq	<input type="checkbox"/> Gr.	MDI4	<input checked="" type="checkbox"/>	<input type="checkbox"/> Acq	<input type="checkbox"/> Gr.
			MDI5	<input checked="" type="checkbox"/>	<input type="checkbox"/> Acq	<input type="checkbox"/> Gr.	MDI6	<input checked="" type="checkbox"/>	<input type="checkbox"/> Acq	<input type="checkbox"/> Gr.

R Refreshes all the logic states for digital variables.

☐ **Auto** Cyclically reads all the logic states. The time interval for cyclic reading is set in **State Acq Time** in the Options Window section.

☐ **Acq.** Enables recording any logic state. Recording may be done in two ways: either at time intervals specified by **Acq. Time**, only if **En Acq** is active, or at each device state change, only if ☐ **Acq.** is active in the panel displaying the device state.

5.5.3.3. Panel for Device State Display

R	<input type="checkbox"/> Auto	Device status	A022 Drive It Trip	<input type="checkbox"/> Acq
----------	-------------------------------	---------------	--------------------	------------------------------

R Refreshes the device state.

☐ **Auto** Cyclically reads the device state. The time interval for cyclic reading is specified by **State Acq. Time** in the Options Window section.

☐ **Acq.** Enables the state recording. The actual acquisition will take place only once the recording state has changed. The recording state is checked at each time interval specified by **State Acq Time**. As stated in the Measure Panel section, you can acquire any measure when the state changes by enabling the relevant

☐ **Acq.** option.

5.5.3.4. Remote Console Panel

SLRef	<input type="text" value="-0.74"/>	<div><div></div></div>	-100.00 %							100.00 %
<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
ENABLE	START	MDI1	MDI2	MDI3	MDI4	MDI5	MDI6			

This console allows controlling the device by enabling specific parameters. Eight control buttons are available in conjunction with a cursor or a text box to edit the reference.

5.5.3.5. Measure Panel with Custom Properties and Output to Led Display (ME00X0 Device)



These measure panels allow changing the properties of the displayed measure.

See the section above for the functions of the **R**, ☐ Auto, ☐ Acq, and ☐ Gr. options (see Measure Panel). The ☐ Led. option is also available.

LED Option

When enabling the ☐ Led. and **En. Pan.** options (see the Graph Panel and Acquisition Table section), the value and the unit of measure of the read measure are published to the Led display at time intervals set in **Pan. Refr. T.** (see the Graph Panel and Acquisition Table section).




CAUTION

In order to dialog with the Led display, the Lum. Pan. Serial Port Parameters window must be set up and the **“Connect”** option in that window must be activated.

For example, the ME00X0 device is a dummy device including only custom measure panels. It can be used to summarize the overall data of a plant composed of multiple devices (e.g. overall plant power, overall plant energy).

If the measure panel can be customized, the **Features** function appears when right-clicking the panel. Click the Features function; the window below appears:

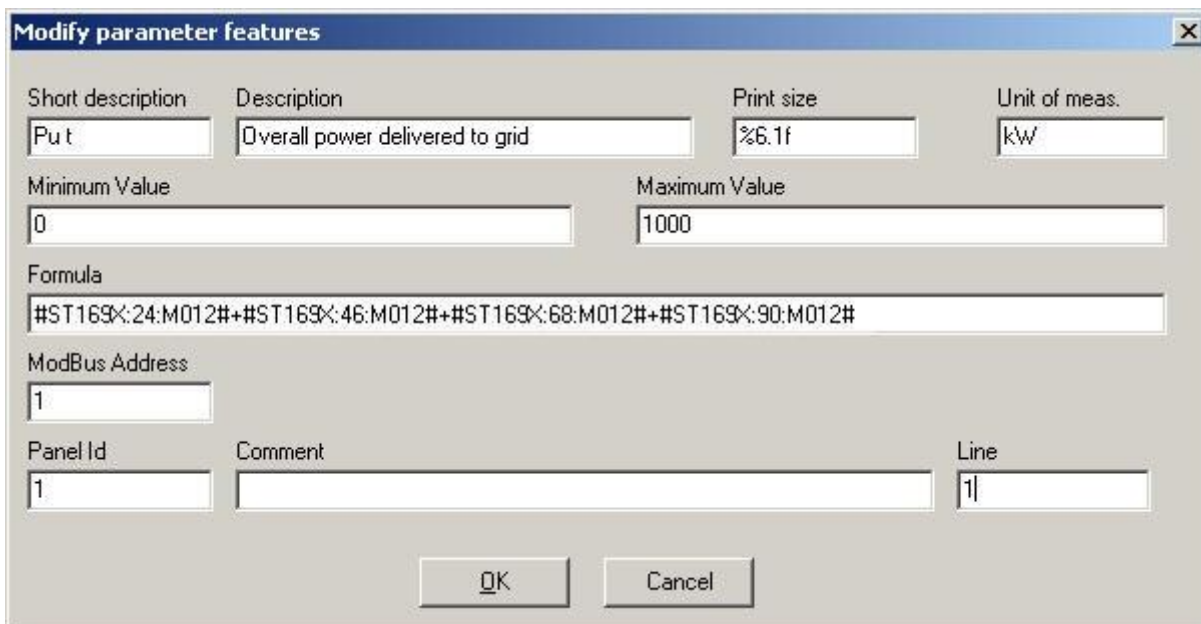

Description of the custom properties**Short description**

Parameter description in the Tree list.

Description

Parameter description in the panel.

Print size

The print size may be float (%f) or hexadecimal (%h).

The **float** format includes a decimal separator: “%<width>.<decimals>f”, where <width> indicates the number of digits included in the figure displayed, including the decimal portion, whereas <decimals> indicate how many digits follow the decimal separator.

Float format example:

100.123 with “%10.2f” will be printed as “ 100.12”

The **hexadecimal** representation is as follows: “%<width>h”, where <width> is the number of digits composing the number to be displayed.

Hexadecimal format example:

The digit “3F5” written as “%5h” will be printed as “ 3F5”.

Two preset formats are available to display the work times, the times when alarms tripped, etc. They are marked with an **S** or an **M**.

When **S** is used, the following string is displayed : “h..h:mm:ss”; when **M** is used, the following string is displayed: “h..h:mm:ss:zzz”, where “zzz” stands for “milliseconds”.

The numeric value to submit to both formats is expressed in seconds.

Unit of meas.

Unit of measure of the numeric representation.

Minimum Value

Minimum allowable value for the measure (used for processing the graph scale).

Maximum Value

Maximum allowable value for the measure (used for processing the graph scale).

Formula

String representing the formula to be processed to obtain the parameter value. You can refer to parameters for different devices at different addresses. References must be expressed as follows:

#d:a:p#

where **d** specifies the equipment identifier, **a** specifies the address, and **p** specifies the parameter identifier.

Example: #ST169X:2:M003#.

A value read directly from Modbus can be referenced to within the formula. The syntax of the function is as follows:

@t:a:n

t indicates how to process the read value. The values that can be assigned to **t** are the following: **S** = integer signed (16bit), **U** = integer unsigned (16bit), **f**= float (32 bit);

a is the device address.; **n** is the Modbus address in decimal format.

Example: @S:1:1000+@U:2:1200*@f:3:100

Example of formula application to obtain the sum of the power values delivered to the grid (Parameter properties panel in the picture above):

#ST169X:24:M003#+#ST169X:46:M003#+#ST169X:68:M003#+#ST169X:90:M003#

ModBus Address

If the VALUEMB variable is included in the formula, the variable value will be read from the address contained in this box.

Panel Id

This is the identifier for the Led display). It identifies the panel where the message shall be published to when multiple Led displays are linked to the serial cable.

Comment

Text entered on the left of the value displayed on the Led display.

Line

Indicates the location in the message queue to be sent to the Led display.

When multiple messages are to be viewed on the same line on the Led display, they are displayed in sequence as they have been sent. **Line** determines the location of the message in the message sequence (if Line=1, this will be the first message to be displayed; if Line=3, this will be the third message to be displayed). If the panel includes multiple lines, messages will be displayed in the corresponding line (the number sequence is from top to bottom).

All changes will be saved to the project file.



CAUTION

The Led display can be refreshed and managed also from the Scheduler Menu.


5.5.3.6. P_Name Panel

Photovoltaic Plant

☐ Led

The P_Name panel is used for viewing text strings. Strings can be published to the Led display by enabling the LED option.

Right-click the panel. The  function appears. Click this function to display the following window:

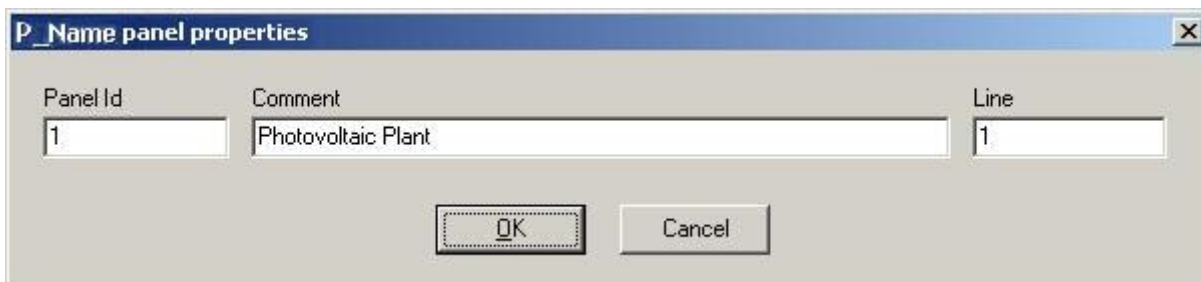

Panel Id	Comment	Line
1	Photovoltaic Plant	1

OK Cancel

Panel Id

The same features as **ID Panel** are implemented for the measure panel with custom properties and output to Led display.

Comment

String displayed on the panel.

Line


The same features as **Line** are implemented as for the measure panel with custom properties and output to Led display.



NOTE

The P_Name panel is present in dummy device ME0010. Two additional P_Name panels can be added using the New Parameter function from the File Menu.

5.5.3.7. Status Panel

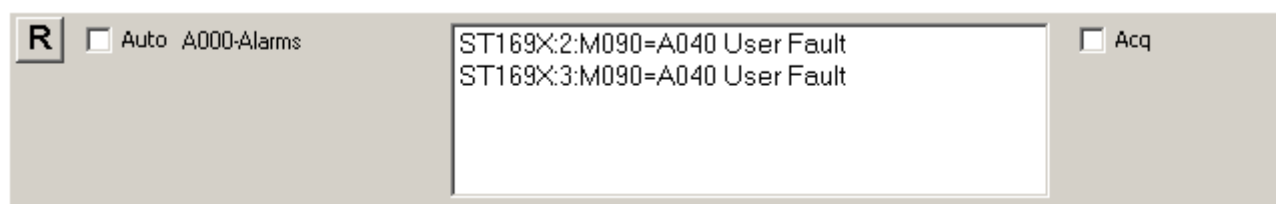

The Status panel monitors the status of one or multiple devices. The figure above, which is given as an example, shows the list of the active alarms, along with the equipment identifier, the equipment address, the parameter identifier and the string related to the alarm tripped.



Refreshes the alarms tripped.




Cyclically reads the alarm conditions of the equipment. The time interval for cyclic reading is set in **State Acq Time**.



Enables the state recording. The actual acquisition will take place only once the recording state has changed. The recording state is checked at each time interval specified by **State Acq Time**.

To view the measures to be checked, open the Properties window. Right-click the panel; the function appears. Left-click this function to display the following window:

Features

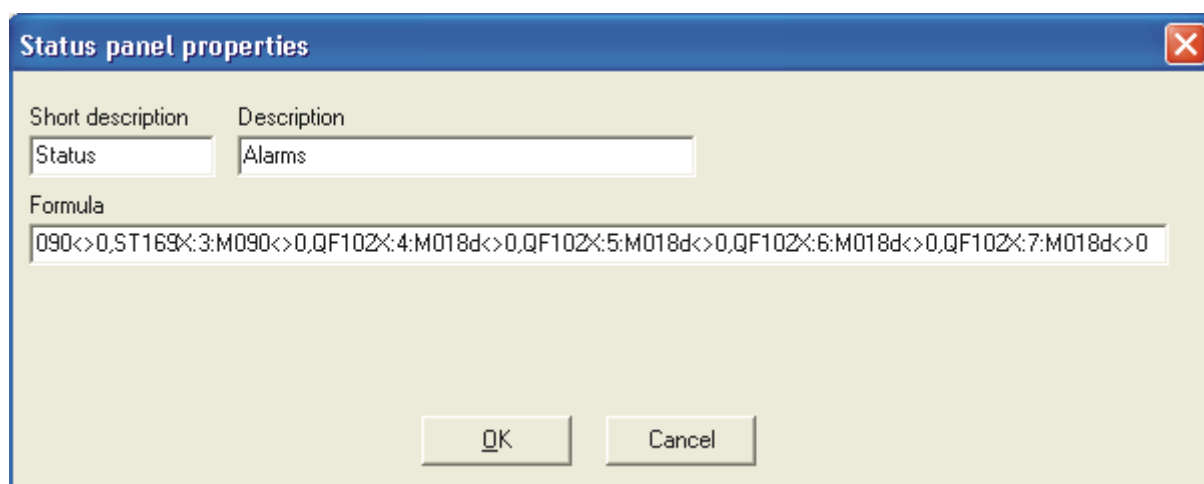

Short description

Parameter description in the Tree list.

Description

Parameter description in the panel.

Formula

String defining the list for the state measures to be checked.

Syntax:

<Reference to the state measure><><Numeric value representing the “OK status” condition>, <Reference to the state measure><><Numeric value representing the “OK status” condition>...
References to the state measures are to be expressed as follows:


d:a:p, where **d** specifies the equipment identifier, **a** specifies the address, and **p** specifies the parameter identifier.

Example:

ST169X:2:M090<>0,ST169X:3:M090<>0.

**NOTE**

The Status panel is present in dummy device ME0010. Two additional Status panels can be added using the New Parameter function from the File Menu.

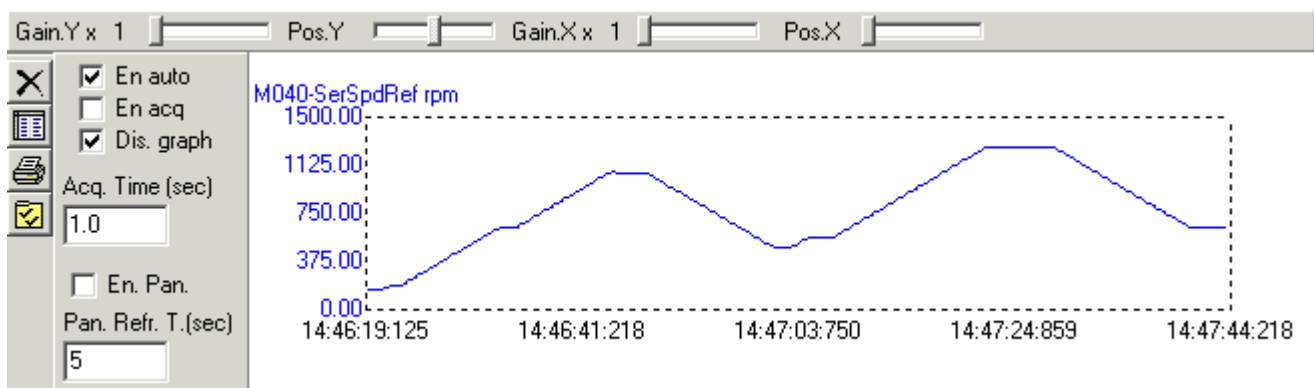5.5.3.8. Graph Panel and Acquisition Table**Gain. Y**

Vertically zooms to the graph of the selected variable.

Pos. Y

Adjusts the vertical position of the graph of the selected variable.

Gain. X

Horizontally zooms to the graph of the selected variable.

Pos. X

Adjusts the horizontal position of the graph of the selected variable.

Dis. graph:

Displays the graph for the time trend of the variables acquired when ☒ **Dis. graph** is enabled. See the Measure Panel section.

**NOTE**

When multiple graphic representations are displayed, you can view the values of a selected variable on the Y axis by clicking the box of the value (for analog values) or by clicking the icon representing the logic state. You can also click the pattern in the graph to view the values of a selected variable.

En. Acq.

Enables the variable acquisition when ☐ En acq is enabled.

The buffer of the acquired value contains max. 100000 terminals per 50 channels. It is a loop-type buffer and may be displayed by clicking the Table button.

En. Auto.

Enables the automatic reading of the variable view when ☐ En auto is active.

**NOTE**

During automatic acquisition, some reading errors will be ignored and the buffer will include the last valid acquired value. If the connection is stopped, the device managing the automatic acquisition will stop and will restart once the connection is established again.

Acq. Time

Time interval (in seconds) between two acquisition procedures.

En. Pan.

Enables message output to the wall displays. This is available when the ☐ Led. option is active.

**CAUTION**

In order to dialog with the wall display, the **Lum. Pan. Serial Port Parameters** window must be set up and the **Connect** option in that window must be activated.

Pan. Refr. T.

Time interval (in seconds) required to refresh data to be sent to the wall displays.

**Delete**

Clears the acquisition buffer.

**Table**

Opens a print preview window showing the current acquisitions (section Acquired Data Print Preview Window).

**Print**


Prints the graph. Printing is possible when no acquisition is in progress.

**Set Acquisition Saving**

Opens the window allowing scheduled saving of the acquisitions for a given measure sheet (section Setting of Acquisition Saving Window).

When multiple graphic representations are displayed, you can view the values of a selected variable on the Y axis by clicking the box of the value (for analog values) or by clicking the icon representing the logic state. You can also click the pattern in the graph to view the values of a selected variable.

5.5.3.9. Panel for Log Upload from ES851

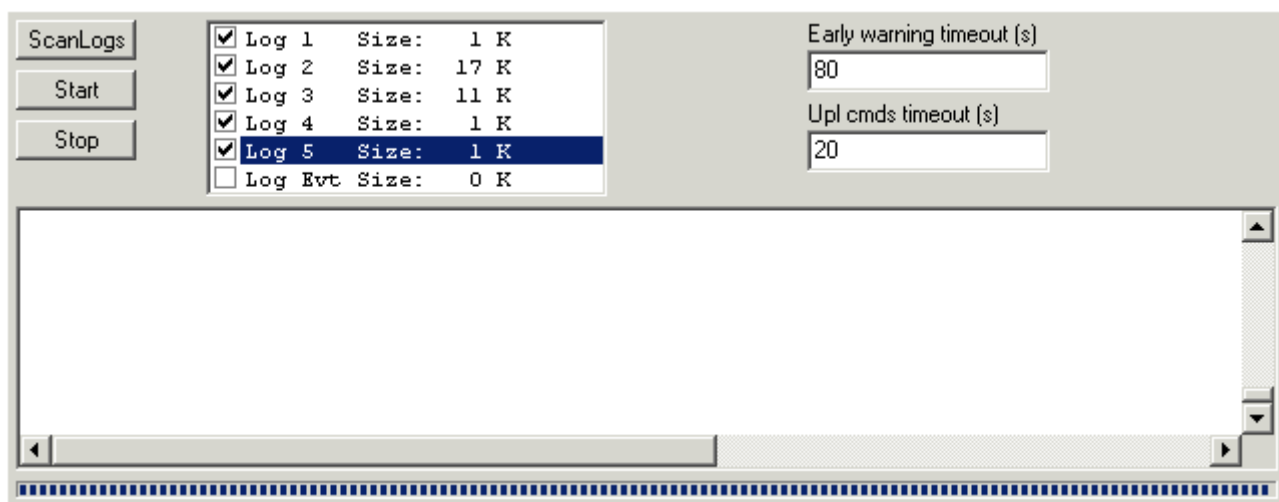

Panel allowing uploading the logs acquired from ES851 Data Logger.

ScanLogs

Lists the quantity of data items to upload for each log.

Start

Starts the upload procedure: only the selected logs will be uploaded. Logs will be saved as separate CSV files (for acquisition logs, the suffix "1", "2"... will be added to the filename entered by the user, whereas the suffix "Evt" will be added to the event log).

Stop

Stops the upload procedure.

Do not change the default values set in **Early warning timeout** and **Upl cmds timeout**.

FBLH

Activates the FBLH protocol: this increases the Upload performance in case of slow Internet connections. The FBLH protocol is activated for remote connections only and is unavailable for local connections.



NOTE When uploading, any other task is inhibited.



NOTE The Delete Logs function can be changed **ONLY** from the Config. Menu (see the Options Window section).

Files on ES851


File: Lists the files contained in the memory (Flash card) of ES851 Data Logger. The option box allows deleting each file (Del. button). The progressive numbers of the stored files are also displayed.

Cod. : Device codification.

Device: name of the device the filename relates to.


Type: type of file.

Date and Hour: time when files are stored to ES851.

 : refreshes the list of the files saved to ES851.

 : deletes the selected files from the Flash card of ES851.

5.6. File Menu

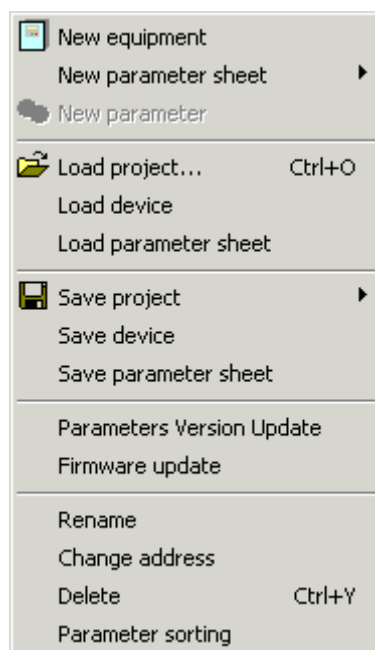

The File menu includes all the commands required for the control of the tree list for the following parameters: creation, saving, loading, deletion and editing.




NOTE

When you save the parameter list, you save the parameter value and its features, such as: its ID (e.g. P000), type (e.g. DC), firmware version (e.g. 306) and MODBUS address of the device it refers to. The same is true for the parameter loading.

The values of the parameters loaded from file are not automatically written in the device. If this is required, you have to write them using the “Write Selected” or “Write All” commands.

5.6.1. New Equipment

The window below allows adding a new device and the relevant parameters to the TreeList.

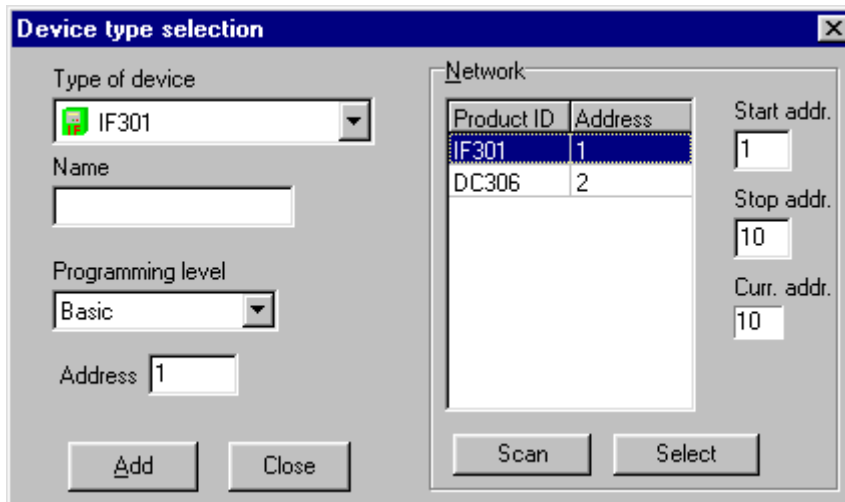

Product ID	Address
IF301	1
DC306	2



NOTE

When uploading the parameter list, the application will try to read the device value. If you are in off-line mode, the off-line error message will be displayed and the parameter will be set to the default value.

Type of device

The “**Type of device**” combobox allows selecting the device type and firmware version. The selection of one of the available versions automatically creates the relevant parameter list, whose structure depends on the programming level chosen by its combobox.

The list includes “**hybrid**”, allowing creating a hybrid device (with no preset parameter list tree). Therefore, you can build a totally custom parameter list.

Name

Name of the device (optional).

Programming level

Determines the parameter list that will be entered in the parameter structure: for example, the “**Basic**” programming includes the main parameters, whereas the “**Engineering**” programming includes a list with all the available parameters.

Address

MODBUS address of the device.

5.6.2. Device Scanning

AUTOMATIC MODE:

The **Network** groupbox in the **Device type selection** window (New Equipment section) allows scanning the connected devices. The acknowledged devices will be listed in the table, where you can select one of them along with the programming level (Basic, Advanced, Engineering). You can then add the device to the project by clicking the **Add** button.

Start Addr. and **Stop Addr.** allow selecting the address field to scan (the max. value for **Stop Addr.** is 247).

Click Scan to start scanning and Stop Scan to stop scanning.



NOTE

Only when the option is activated, devices are scanned after a unique query. If the scanning range is high, the response delay should exceed the time set in **Remote Timeout**. As a result, the RemoteDrive/IrisControl should generate an error window. If so, set a higher value for **Rem.Timeout** in the Selecting the Type of Connection window.

MANUAL MODE:


The devices that do not support the automatic detecting mode can be added to the project if selected from the **Type of device** combobox in the **Device type selection** window (section New Equipment). Their **Address** is required. Click **Add** to add the device to the project.

5.6.3. New Parameter Sheet


Creates a new parameter sheet in the selected device.

You can create a standard or custom parameter sheet. The standard sheet may be chosen from a preset list. If the device is not hybrid, the list will include only the sheets associated with the device type and firmware version; otherwise, the list will contain the parameter sheet of the devices controlled by the software. If you select a sheet and confirm your selection, the sheet will be created with all the parameters it contains. If you open the sheet and select one of the parameters it contains, once you confirm your selection, the system will create the sheet containing only the selected parameter.

If you change the address, this change will affect any parameters in the created sheet.

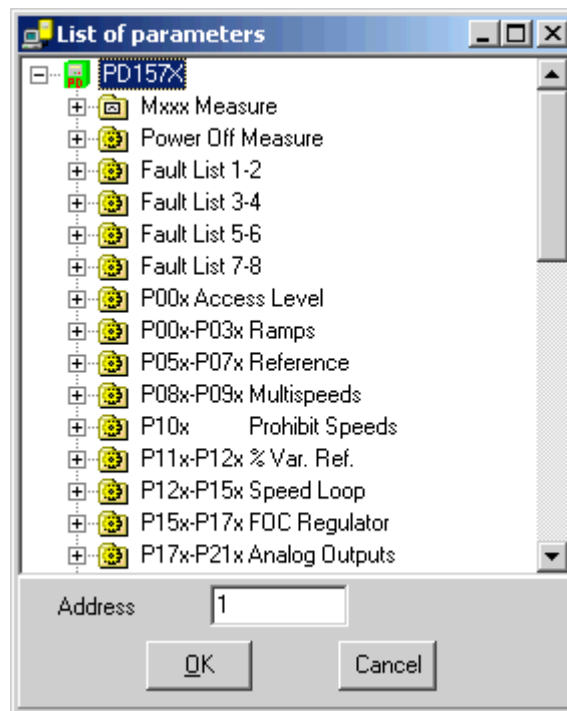

The custom sheet is blank and is to be filled in by the user. When a custom sheet is created, the following window will appear:

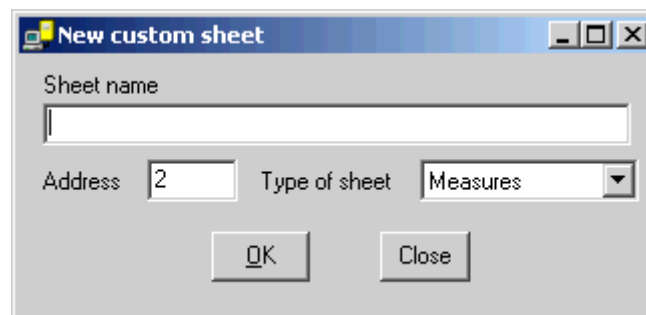

Sheet name:

Name assigned to the sheet.

Address:

Address proposed each time a parameter is added to the sheet.

Type of Sheet:

It can be a Measure or Parameter sheet.

5.6.4. New Parameter

Adds a parameter to the selected sheet:

- If the sheet is a standard one for a non-hybrid device, the parameter list related to the parameter sheet will be displayed.
- If the sheet is a custom one for a non-hybrid device, the list of the parameters related to the device owning the sheet will be displayed.
- If the sheet is owned by a hybrid device, the whole parameter list will be displayed, i.e. all the parameters for the devices controlled by the application will be displayed.

5.6.5. Load Project

Loads from disk the data and structure of a project. The current project window is deleted. The extension of the project files is "prj".


5.6.6. Load Device

Loads from disk the data and structure of a device and enters it in the project. The extension of the device files is "dev".

5.6.7. Load Parameter Sheet

Loads from disk the data and structure of a parameter sheet and enters it in the selected device. The extension of the parameter sheet files is "sht".

5.6.8. Save Project

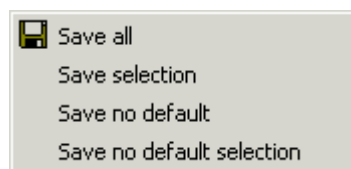

NOTE

Certain parameters depend on some other parameters (such as scale factors, units of measure...), so the **"Save Selected"**, **"Save No Default"** and **"Save Sel. No Default"** options allow saving also the secondary parameters depending on the parameters to be saved. The SUPPORT PARAMETERS sheet containing secondary parameters is automatically created from the RemoteDrive/IrisControl when saving the main parameters.

5.6.9. Save All

Saves the whole project.

5.6.9.1. Save Sel.

Saves the parameters relating to the selected objects.

5.6.9.2. *Save No Default*

Saves the parameters having different values than the default values.

5.6.9.3. *Save Sel. No Default*

Saves the parameters relating to the selected objects having different values than the default values.
For each option, the following items are also saved: display settings, connection settings, position and size of the windows relating to the current project.
Project files have a “prj” extension.

5.6.10. **Save Device**

Saves to disk the data and structure of the selected device. The extension of the device files is “dev”.

5.6.11. **Save Parameter Sheet**

Saves to disk the data and structure of the selected parameter sheet. The extension of the parameter sheet files is “sht”.



CAUTION


The Save Parameter Sheet command allows saving only the parameters contained in a given sheet. If they depend on other parameters, their correlation is lost.

5.6.12. **Parameter Version Updating**

Opens the window allowing parameter version updating. See the Parameter Refresh Window.

5.6.13. **Refresh Firmware**

Opens the firmware download utility of the equipment; see the Device Firmware Upgrade Window.

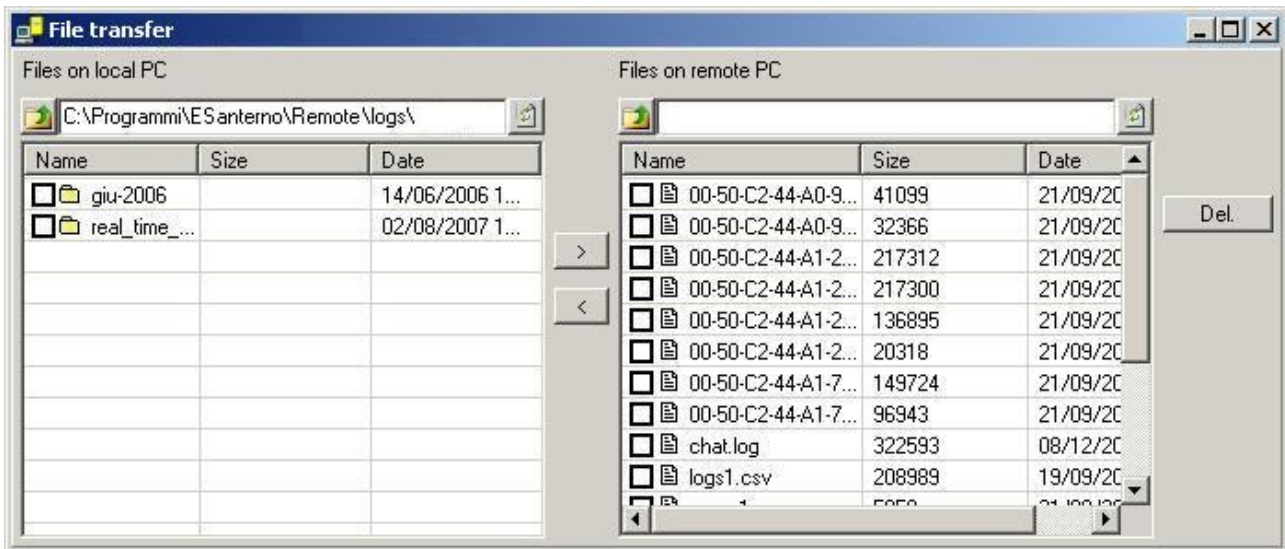5.6.14. File Transfer

Window for file transfer from the RemoteDrive/IrisControl.

**NOTE**

This window is available only when the connection to another RemoteDrive/IrisControl is in Remote-Master mode (see the Operating Modes section).



Current path on the Master computer.



Current path on the Slave computer.

The root folder of the path on the Slave computer is the Logs folder within the folder where the RemoteDrive/IrisControl is installed.

**NOTE**

Navigation is allowed ONLY within the Logs folder in the RemoteDrive/IrisControl implemented on the slave computer.



Goes to the containing folder.



Refreshes the file list.



Transfers the selected files from the Master computer to the folder on the Slave computer.



Transfers the selected files from the Slave computer to the folder on the Master computer.

**NOTE**

Folders cannot yet be transferred.



Deletes the selected files from the Slave computer.

**NOTE**

The files on a CD-ROM cannot be transferred from the Master computer to the Slave computer.

5.6.15. Rename

Allows entering a new name for the selected sheet or device.

5.6.16. Change Address

Changes the address for all the parameters of the selected object (sheet, parameter or equipment).


5.6.17. Delete

Deletes the selected object (sheet, parameter or equipment).

5.6.18. Parameter Sorting

Sorts the parameter list (Tree List) in alphabetical order.

5.7. Parameters Menu

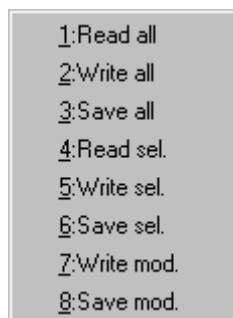

Menu for the parameter read and write commands:

5.7.1. Read All

Reads from the equipment all the parameters listed in the TreeList.

5.7.2. Write All

Writes to the equipment all the parameters listed in the TreeList.

5.7.3. Save All

Saves to the Eeprom memory of the equipment all the parameters listed in the TreeList.

5.7.4. Read Selected

Reads from the equipment the parameters related to the selected object.

5.7.5. Write Selected

Writes to the equipment the parameters related to the selected object.

5.7.6. Save Selected

Saves to the Eeprom memory of the equipment the parameters related to the selected object.

5.7.7. Write Modified


Writes to the equipment the modified parameters that have never been written.

5.7.8. Save Modified

Saves the modified parameters to the Eeprom memory of the equipment.

5.7.9. Error Control While Reading or Writing Parameter Sets

One of the following windows is displayed in case an error occurs when a parameter set is read or written:

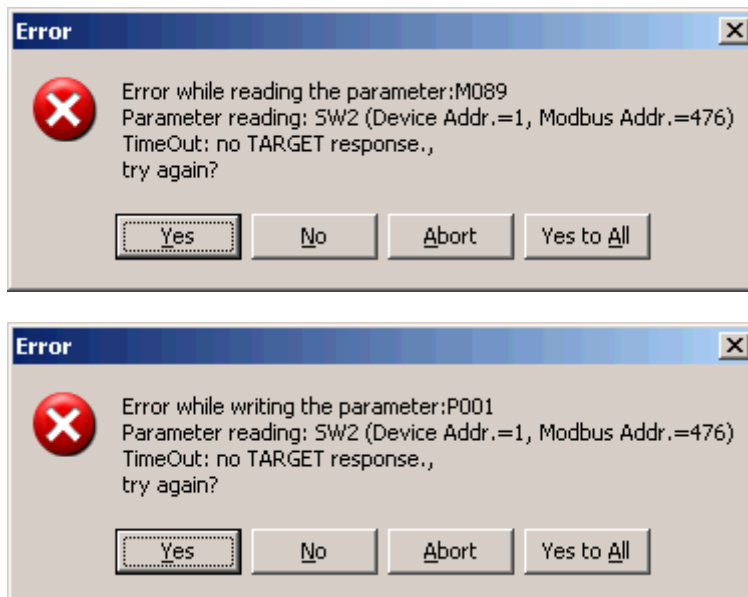

Select:

Yes to repeat the operation responsible for the error; if a positive result is obtained, the next parameters are processed, otherwise an error window appears.

No: interrupts the process for the current parameters and goes on with the next parameter.

Abort: the process is interrupted and cannot be resumed.

Yes to All: goes on with the next parameter and overrides the parameter that caused the error, but with a more effective read cycle: the error condition will occur after the following sequence:
<4 attempts> ---- <pause 2 seconds> ---- <4 attempts> ---- <pause 2 seconds> ---- <4 attempts>
This is particularly useful for disrupted environments:

This is particularly useful for disrupted environments.



NOTE

To reduce or suppress error messages, either decrease the ModBus.block max. length while reading (see the Options Window section) or increase Timeout values (see the Remote Timeout or Timeout depending on the type of connection).

5.8. Print Menu

Print all
Print no default
Print selected
Print no default selected
Print different from prj file

Parameter print command menu.



NOTE


Unread values, usually due to communication errors, will be represented with a sequence of asterisks "*****".

5.8.1. Print All

USER PARAMETER LIST				Date:04/02/2004
PAR. Meaning	Value	PAR. Meaning	Value	
[1]- (DC307)				
MEASURE MENU - Mxxx				
X001-RemConsole		X002-Dev.Status	A002 Heatsink Trip	
M000-Vref	0.00 %	M001-nFdbk	0.21 %	
M002-Verr	0.00 %	M003-Iref	0.00 %	
KEY MENU - P00x				
P000-Key	1:Program Enable	P003-ProgLevel	0:Basic	
SPEED LIMITS MENU - P01x - P02x				
P010-nFdbkMax	2500 RPM	P011-VarmMax	400 V	

Prints the whole list of the parameters contained in the TreeList.

5.8.2. Print Non-Default Parameters

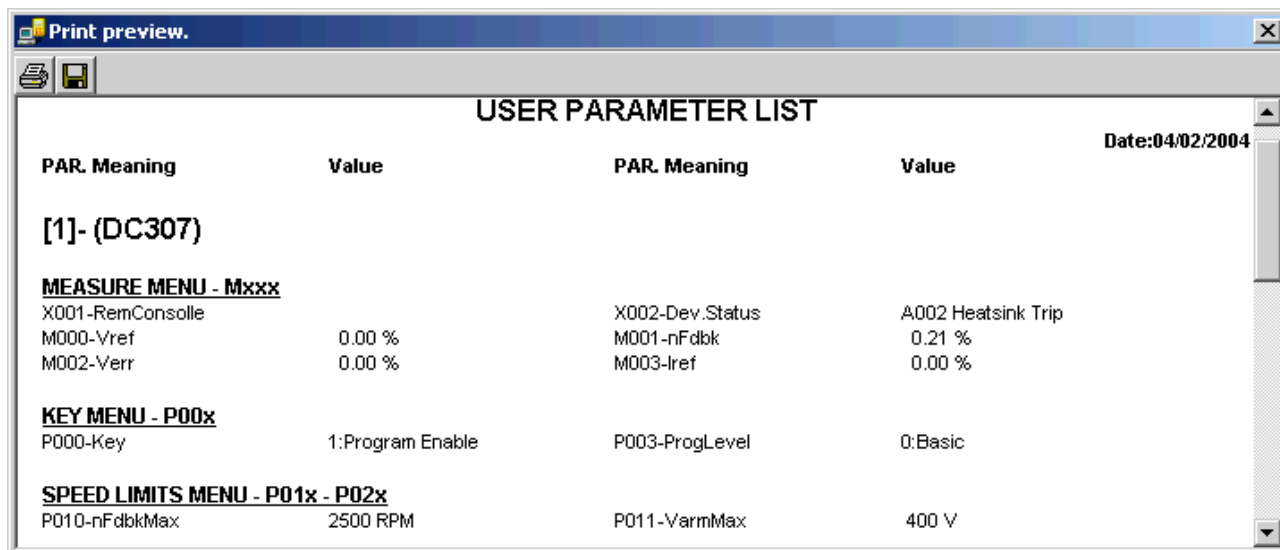


Print preview.

USER PARAMETER LIST Date:04/02/2004

PAR. Meaning	Value	PAR. Meaning	Value
[1]- (DC307)			
MEASURE MENU - Mxxx			
X001-RemConsole		X002-Dev.Status	A002 Heatsink Trip
M000-Vref	0.00 %	M001-nFdbk	0.21 %
M002-Verr	0.00 %	M003-Iref	0.00 %
KEY MENU - P00x			
P000-Key	1:Program Enable	P003-ProgLevel	0:Basic
SPEED LIMITS MENU - P01x - P02x			
P010-nFdbkMax	2500 RPM	P011-VarmMax	400 V

Prints the whole list of the parameters represented in the TreeList whose value mismatch with the default value.

5.8.3. Print Selection

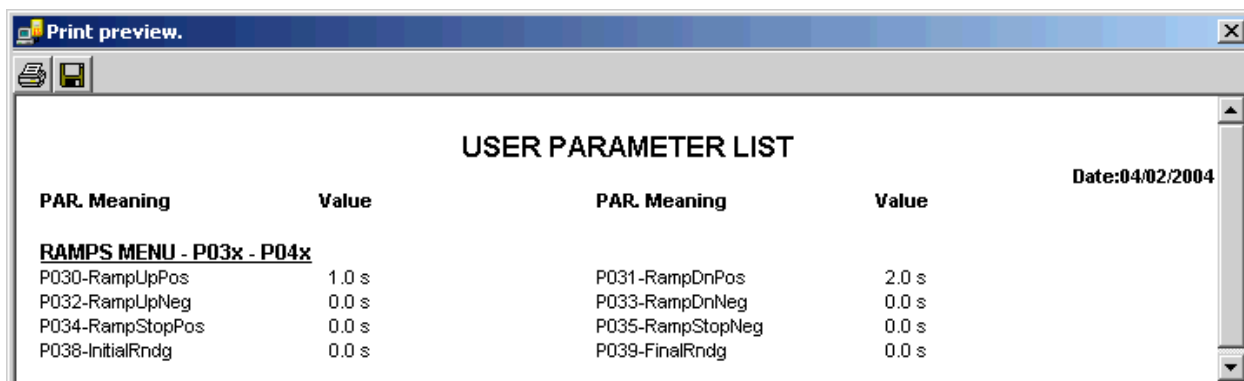


Print preview.

USER PARAMETER LIST Date:04/02/2004

PAR. Meaning	Value	PAR. Meaning	Value
RAMPS MENU - P03x - P04x			
P030-RampUpPos	1.0 s	P031-RampDnPos	2.0 s
P032-RampUpNeg	0.0 s	P033-RampDnNeg	0.0 s
P034-RampStopPos	0.0 s	P035-RampStopNeg	0.0 s
P036-InitialRndg	0.0 s	P039-FinalRndg	0.0 s

Prints the parameter list related to the selected object.

5.8.4. Print Non-Default Selection

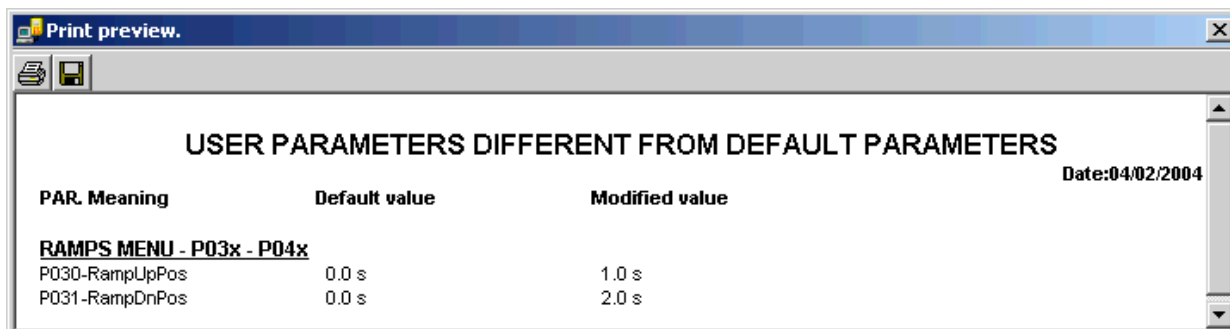


Print preview.

USER PARAMETERS DIFFERENT FROM DEFAULT PARAMETERS Date:04/02/2004

PAR. Meaning	Default value	Modified value
RAMPS MENU - P03x - P04x		
P030-RampUpPos	0.0 s	1.0 s
P031-RampDnPos	0.0 s	2.0 s

Prints the parameter list related to the selected objects whose value mismatch with the default value.


5.8.5. Print Different from File *.prj

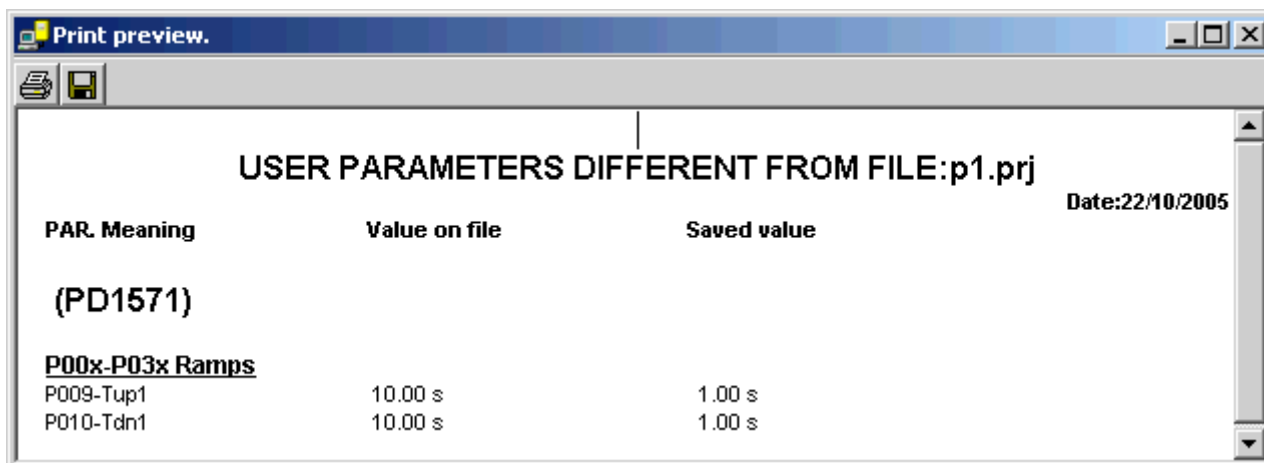

Compares the values of the project parameters stored to the values saved to a specified file and prints the list of the different parameters. If a stored parameter has no corresponding value, it is marked with "<not found>".

The stored values are the values stored in the computer, not in the equipment.

5.9. General Acquisition Settings Window Menu

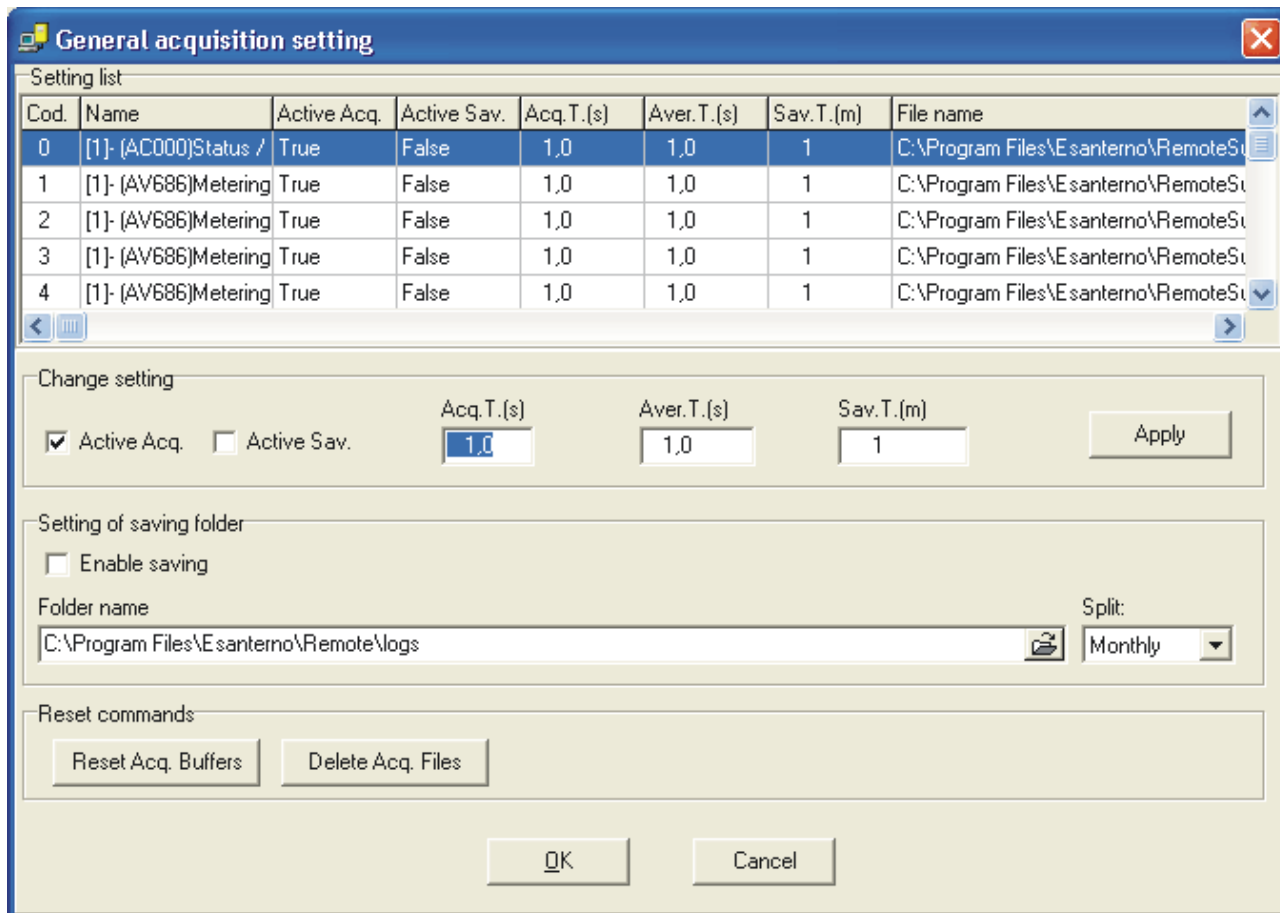

The screenshot shows the 'General acquisition setting' window. It features a table with columns: Cod., Name, Active Acq., Active Sav., Acq.T.(s), Aver.T.(s), Sav.T.(m), and File name. Below the table are sections for 'Change setting' (with checkboxes for Active Acq. and Active Sav., and input fields for Acq.T.(s), Aver.T.(s), and Sav.T.(m)), 'Setting of saving folder' (with an 'Enable saving' checkbox, a folder name input field, and a 'Split' dropdown menu), and 'Reset commands' (with buttons for 'Reset Acq. Buffers' and 'Delete Acq. Files'). At the bottom are 'OK' and 'Cancel' buttons.

Cod.	Name	Active Acq.	Active Sav.	Acq.T.(s)	Aver.T.(s)	Sav.T.(m)	File name
0	[1]- (AC000)Status /	True	False	1,0	1,0	1	C:\Program Files\Esanterno\RemoteSu
1	[1]- (AV686)Metering	True	False	1,0	1,0	1	C:\Program Files\Esanterno\RemoteSu
2	[1]- (AV686)Metering	True	False	1,0	1,0	1	C:\Program Files\Esanterno\RemoteSu
3	[1]- (AV686)Metering	True	False	1,0	1,0	1	C:\Program Files\Esanterno\RemoteSu
4	[1]- (AV686)Metering	True	False	1,0	1,0	1	C:\Program Files\Esanterno\RemoteSu

Change setting

☒ Active Acq. ☐ Active Sav. Acq.T.(s) 1,0 Aver.T.(s) 1,0 Sav.T.(m) 1 Apply

Setting of saving folder

☐ Enable saving

Folder name C:\Program Files\Esanterno\Remote\logs Split: Monthly

Reset commands

Reset Acq. Buffers Delete Acq. Files

OK Cancel

The window called General Acquisition Settings prepares the system to an acquisition process allowing saving to one folder any data resulting from the different measure sheets, as stated in the Save Folder Settings section.



NOTE

The settings selected in this window will affect the **Acq.T.** parameter and the acquisition saving settings window for each selected sheet.

Procedures for the Acquisition Process

1. Stop the acquisition engine.
2. Use ☐ Acq. to choose the measure parameters to be acquired from the measure sheets; see the Measure Panel section.
3. Open the Acquisition General Settings menu (the average time CANNOT be shorter than the acquisition time. The save time must always exceed the average time).
4. Set the average acquisition times and save times; see the Change Settings sections.
5. Define the name of the folder for the acquisition files and enable saving from the Save Folder Settings box (see the Save Folder Settings section).
6. Set the split type for the acquisition log (see the Split section).
7. Reset the acquisition buffers; if necessary, delete the old acquisition files from the Reset Commands box; (see the Reset Commands section).
8. Press to close this menu and to store the new settings.
9. Start the acquisition engine.

5.9.1. Setting List

The “Settings List” table lists all the measure sheets in the project. Each line corresponds to one sheet.

Description of the columns in the table:

5.9.1.1. *Cod.*

Progressive number of the measure sheet.

5.9.1.2. *Name*

Name of the measure sheet.

5.9.1.3. *ActiveAcq.*

Indicates if the acquisition is active: *True=Active*, *False=Inactive*. It corresponds to the **En. Acq.** option in Graph Panel and Acquisition Table.

5.9.1.4. *SaveActive*

Scheduled saving to file is active: *True=Active*, *False=Inactive*. It corresponds to the **Enabled** option from the “Acquisition Save Settings” window.

5.9.1.5. *T.Acq(s.)*

Delay between two acquisition events expressed in seconds. It corresponds to: **Acq.Time** in Graph Panel and Acquisition Table.

5.9.1.6. *Aver.T.(s.)*

Average time. Delay allowing processing the average number of the registered samples. This is expressed in seconds. It corresponds to the Average Every: option.

**NOTE**

The average time CANNOT be shorter than the acquisition time.

5.9.1.7. *Sav.T.(m.)*

Delay for the acquired data to be saved to file. This is expressed in minutes and corresponds to the Save to File Every: option.

**NOTE**

The average time CANNOT be shorter than the acquisition time.

5.9.1.8. File Name

Path with the name of the CSV file for the acquisitions related to the measure sheet. It corresponds to the File Name: option.

5.9.2. Change Settings

Panel allowing changing the values in the table. Select a line in the table to automatically reproduce the relevant parameters in the panel.

Press Apply to confirm changes.

If multiple lines are selected in the table, changes will be applied to all the selected lines. The file name cannot be changed. To change the file name, use the File Name: option.

5.9.3. Save Folder Settings

This panel configures the autorecovery function of the acquisition in progress to a unique folder to be entered in **Folder Name**.

When this function is activated (**Save enable**), the file name used for saving the acquisition process of each measure sheet can no longer be customized, but will be forced to the following format depending on the type of folder split you selected:

Monthly:

<contents in Folder Name> + \ + <year month as yyyy_mm> + \ + <name of the equipment> + <name of the measure sheet> + <CSV extension>.

Weekly:

<contents in Folder Name> + \ + <year month as yyyy_mm> + \ + <number of the week starting from the beginning of the current year as week_nn> + \ + <name of the equipment> + <name of the measure sheet> + <CSV extension>.

Daily:

<contents in Folder Name> + \ + <year month as yyyy_mm> + \ + <day of the month as dd_nn> + \ + <name of the equipment> + <name of the measure sheet> + <CSV extension>.

Any space in the folder names is replaced by “_”.

Examples for the RemoteDrive:

- C:\Programmi\ESanterno\RemoteDrive\logs\2007-11\INVERTER_1__(ST150X)Misure_inverter.csv
- C:\Programmi\ESanterno\RemoteDrive\logs\2007-11\week_43\INVERTER_1_(ST150X)Stato_funzionamento.csv
- C:\Programmi\ESanterno\RemoteDrive\logs\2007-11\dd_09\INVERTER_1__(ST160X)Misure_ambientali.csv

Examples for the IrisControl:

- C:\Program Files\ESanterno\IrisControl\logs\2015-11\INVERTER_1__(IB140X)Measurements_inverter.csv
- C:\Program Files\ESanterno\IrisControl\logs\2015-11\week_43\INVERTER_1_(IB140X)Operation_Status.csv
- C:\Program Files\ESanterno\IrisControl\logs\2015-11\dd_09\INVERTER_1__(IB140X)Environmental_Measurements.csv

The “mm”, “nn”, “yyy” strings are created based on the clock of the laptop being used. This means that the files containing the acquired data will be divided into subfolders by year/month/ week/day when they have been saved.

**CAUTION**

When this function is activated, do not open the files above with applications privileging this type of files (e.g. MS Excel), otherwise the RemoteDrive/IrisControl will not be capable of saving those files.

**CAUTION**

If you want to use the automatic upload function from a remote computer, DO NOT change the default folder name!

5.9.3.1. Split

Indicates the type of folder split for the acquisition files: *<Monthly,Weekly,Daily>*

- Monthly: every month, a new folder is created. It contains data of the current month.
- Weekly: every week, a new folder is created. It contains data of the current week.
- Daily: every day, a new folder is created. It contains data of the current day.

5.9.4. Reset Commands

5.9.4.1. Reset Acq. Buffers

Resets all the acquisition buffers for the measure sheets.

5.9.4.2. Delete Acq. Files

Deletes all files containing the acquisitions of the current folder (use with caution!).

Example:

With reference to the example above, this would delete the contents of “C:\Program Files\ESanterno\RemoteDrive\logs\PV_PLANT \Aug-2005”. Backup files (*.bak) are not deleted.

 
or

“C:\Program Files\ESanterno\IrisControl\logs\PV_PLANT\Aug-2005”. Backup files (*.bak) are not deleted.


5.10. Chat Menu

If a Remote Connection is active, this menu recalls the Chat window (see the Chat Window section).

5.11. Tools Menu




5.11.1. ModBus Test

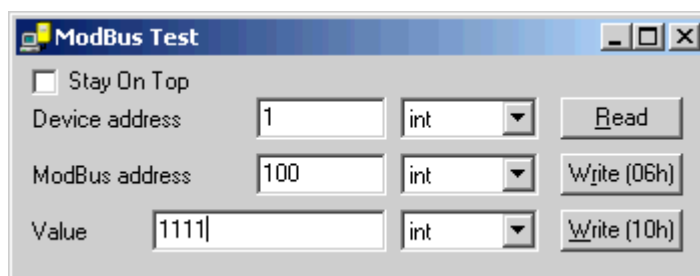


Test window allowing reading/writing values directly from/to Modbus.

Acknowledged formats:


int	16-bit decimal, plus/minus
uint	16-bit decimal integer
hex	16-bit hexadecimal
bin	16 binary
char	Pair of ASCII characters (high byte: left-hand character; low byte: right-hand character)
float	4-byte float standard IEEE-754

 


Brings the window to front.

 

 Allows reading using the following command: 03 (0x03) Read Holding Registers (1).



 Allows writing using the following command: 06 (0x06) Write Single Register (1).




Allows writing using the following command: 16 (0x10) Write Multiple registers (1).

(1) Please visit:


http://www.modbus.org/docs/Modbus_Application_Protocol_V1_1a.pdf

5.11.2. Command Executer

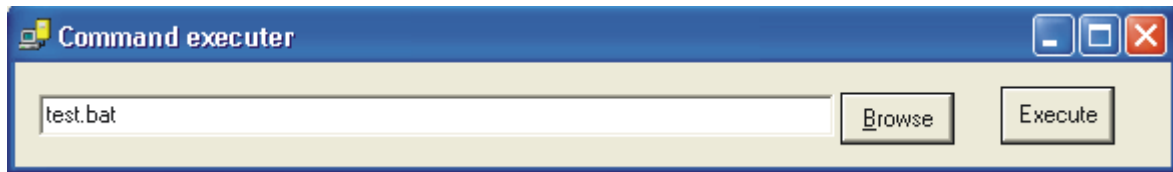


Allows executing a batch file directly from the RemoteDrive/IrisControl.

5.12. Configuration Menu

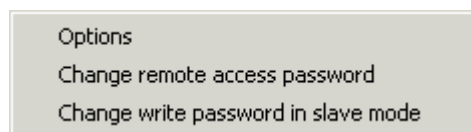

The Configuration menu includes the Options window. If the remote access password and the 'write password in slave mode' are enabled, this menu allows accessing the editing windows for those passwords.

5.12.1. Options Window

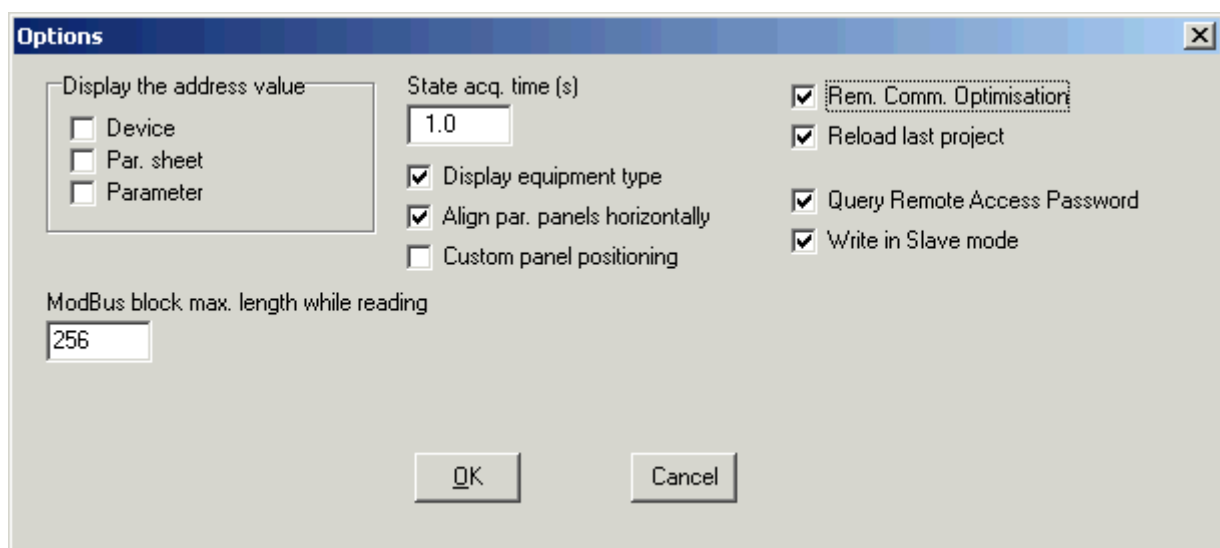

Display the address value:

Selection options to enable or disable the device address, parameter sheets and parameters in the TreeList.

ModBus block max. length while reading:

Sets the maximum number of subsequent words that can form one block (minimum value:1; maximum value: 256).

This means that a high value increases the reading speed of the parameters from Modbus. If the bus is disrupted, set low values to improve communications.



CAUTION

This value shall be lower than or equal to the maximum size of the Modbus block managed by the device.

State acquisition time

Time interval, in seconds, of the device state polling. This time interval applies to all the state parameters contained in any acquisition sheet, and is independent of the acquisition time.

Display device type

Views the type of device in brackets near the name Device 1 [PD1571]




NOTE

Editing will have effect when the project is next loaded.

Arrange Par. Panels Horizontally


Arranges measure panels from upwards to one column

☒ Align par. panels horizontally

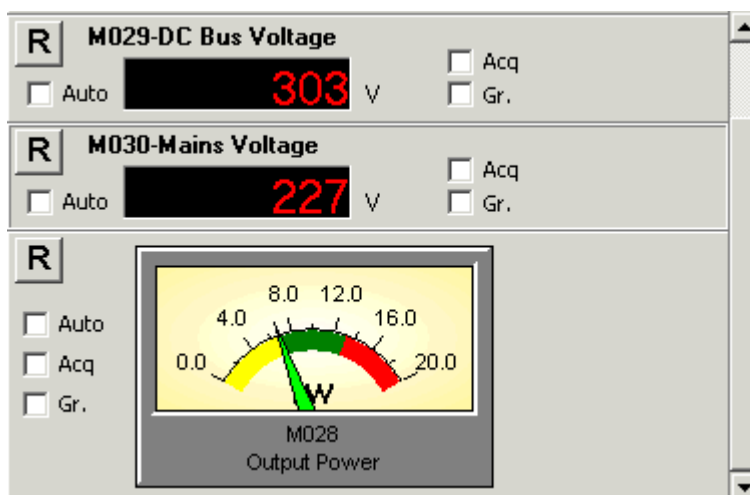

If inactive, it arranges panels from left to right depending on the horizontal space available in the sheet:

☐ Align par. panels horizontally

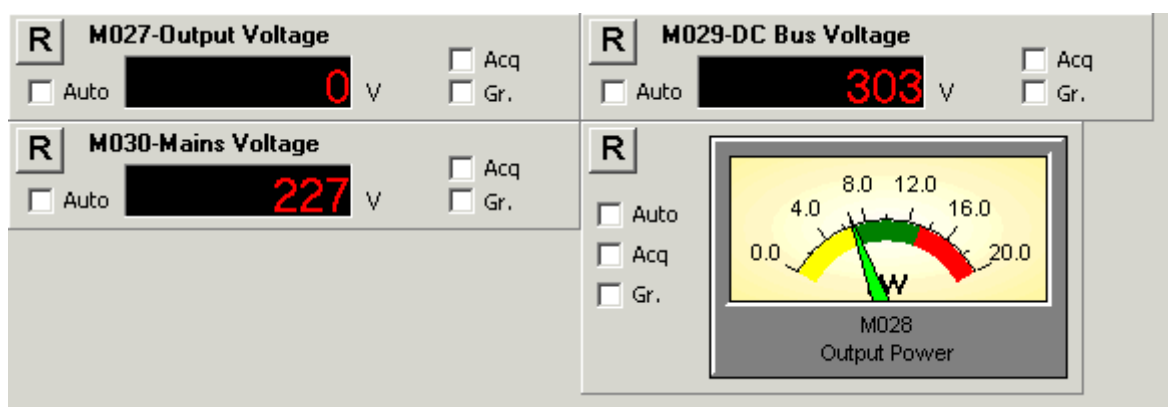

NOTE

This is active for measure sheets only . Editing will have effect when the parameter sheet is next changed.

Custom Panel Position

The position of the measure panels is customizable and is stored to the project file.

To move one panel to a different position, use the mouse to drag the selected panel while holding down the **Ctrl** key (always point to the background of the selected panel).

Reload latest project

At startup, it reloads the last project that has been saved. If the project is saved when the connection is activated, it also re-establishes the connection.

Reload latest scheduler

At startup, it reloads the last scheduler (*sch) project that has been loaded.

Query Remote Access Password

Allows setting an access password from remote in Slave server mode (see the Operating Modes section).

Initially, the default password is used, then the user-defined password (from the **Config. -> Change Remote Access Password** menu) will be used.

Write in Slave Mode

Enables writing and saving parameters in slave mode (see the Operating Modes section). A password is required when first writing; initially, the default password is used, then the user-defined password (from the **Config. -> Change Write Password in Slave Mode** menu) will be used.

**NOTE**

If writing is not enabled in Slave Mode, writing or saving will be disabled when using a RemoteDrive/IrisControl configured as Slave.

Multiread

When a remote connection is established in Master or Slave mode, this checkbox allows activating the Multiread protocol. This protocol allows multiple reading events upon one TCP query. This improves reading parameter sets when slow Internet connections are used.

**CAUTION**

Activate the **Multiread** function only when connecting to compatible RemoteDrive/IrisControl or ES851 SW versions:
RemoteDrive/IrisControl ver. ≥ 2.30
ES851 ver. $\geq \text{DL166X}$

Max. range for packet split

The RemoteDrive/IrisControl enhances reading parameter sets from Modbus based on their adjacent addresses. The “**Max. range for packet split**” is the max. allowable range. Non-contiguous parameters are also considered as adjacent, provided that the value set in “**Max. range for packet split**” is not exceeded. Data exchanged on the bus are then reduced to a minimum.

 
Automatic choice of FBLH

Automatically activates the FBLH option in the Panel for Log Upload from ES851.

Delete logs

Automatically activates the Delete Logs option in the Panel for Log Upload from ES851.

5.13. Data Menu



Menu for the analysis of acquired data.


New graph

Opens a new window for the graph display (see the Graph Window section below).

Acquired data display table

Opens a new window for the data display (see the Acquired Data Display Window section).

5.13.1. **Graph Window**

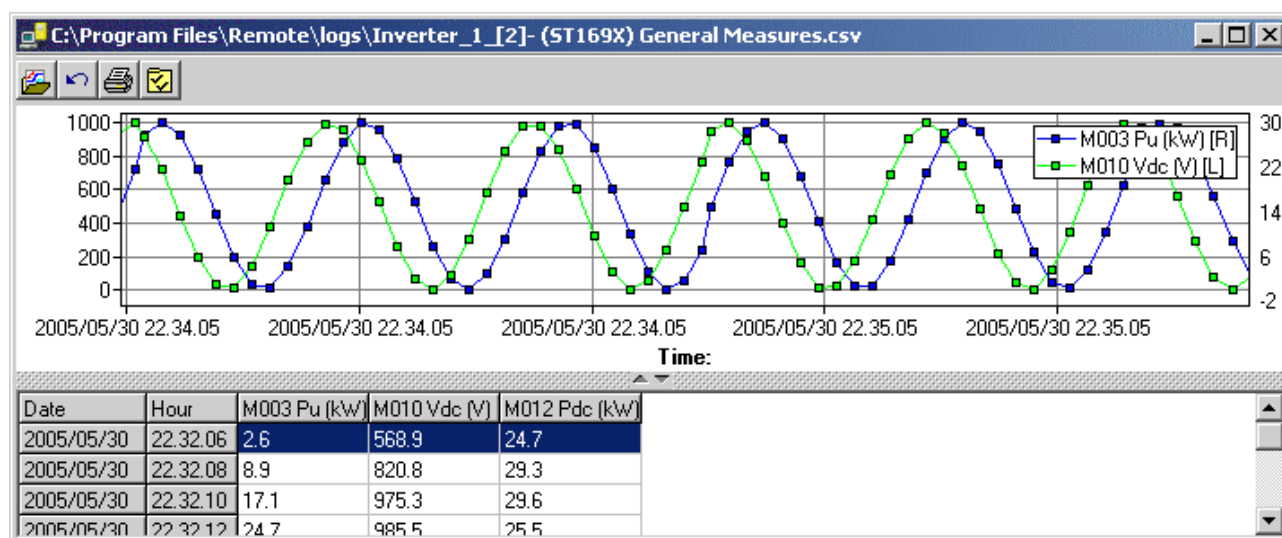

Data acquired from the RemoteDrive/IrisControl or ES851 to CSV files are viewed and graphically represented in the Graph window.

Zoom in: select a graph region with the mouse and hold down the Shift key.

To move the graph: drag the graph with the mouse and hold down the Ctrl key.

To return to the initial condition: hold down the Shift key and left-click.



Selects a CSV file.



Refreshes display; this is useful to collect the latest data when the file is being acquired.




Prints the graph.



Graph settings, see the Graph Settings Window.

5.13.2. Graph Settings Window

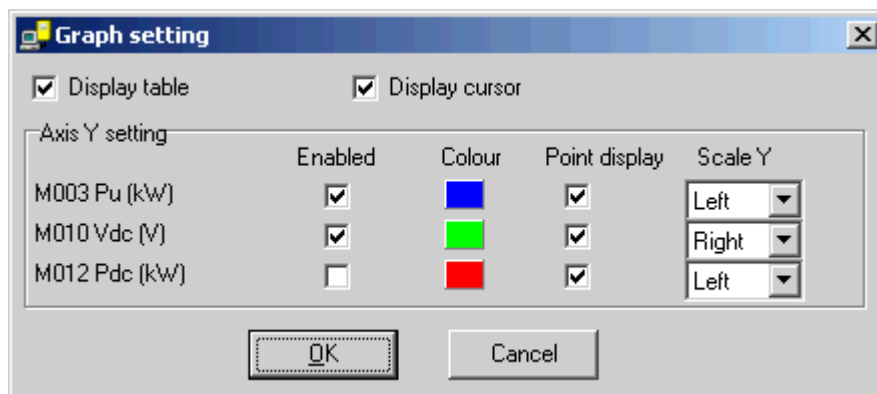**Display table**

Views the table with graphically represented values.

Display cursor

Views a cursor to localize the graph region corresponding to the line selected in the data table.

Axis Y setting:

Two scales are available, one on the right and one on the left of the graph. Measures can be evenly distributed onto the scales using this menu.

Enabled

Views the graph of the selected variable.

Colour

Colour of the pattern corresponding to the selected variable: left-click a colour to apply it to the pattern.


Point display

Highlights the points corresponding to the data in the table.

Scale Y

Selects the scaling of the selected variable on the right/left Y axis in the graph.

5.13.3. Acquired Data Display Window

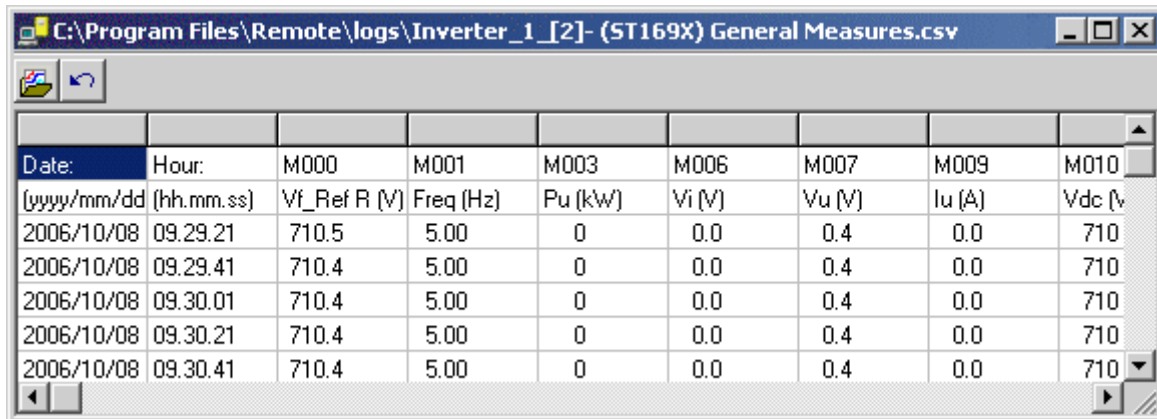

Date:	Hour:	M000	M001	M003	M006	M007	M009	M010
(yyyy/mm/dd)	(hh.mm.ss)	Vf_Ref R (V)	Freq (Hz)	Pu (kW)	Vi (V)	Vu (V)	Iu (A)	Vdc (V)
2006/10/08	09.29.21	710.5	5.00	0	0.0	0.4	0.0	710
2006/10/08	09.29.41	710.4	5.00	0	0.0	0.4	0.0	710
2006/10/08	09.30.01	710.4	5.00	0	0.0	0.4	0.0	710
2006/10/08	09.30.21	710.4	5.00	0	0.0	0.4	0.0	710
2006/10/08	09.30.41	710.4	5.00	0	0.0	0.4	0.0	710

Views the data acquired in CSV files. This window displays data that cannot be graphically represented (such as event files acquired from ES851).




Select a CSV file.



Refresh view; allows reading the latest data being acquired.

5.14. RemoteDrive/IrisControl Activity Tracker Menu

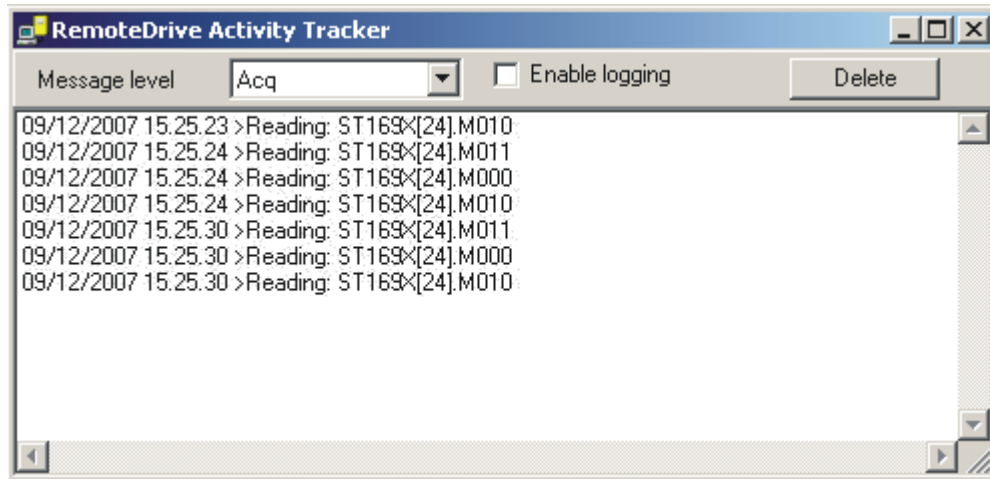

This window is related to the RemoteDrive/IrisControl logbook.

When enabled, the logbook stores the RemoteDrive/IrisControl activity (parameter read/write, communication errors, and so on).

Each recorded message is displayed with the date and time and is stored in the "LogBook.txt" file. This file is never deleted; the application only adds new messages to the file. Logging is disabled by default, and is to be enabled only when required. If the RemoteDrive/IrisControl activity is heavy, the "LogBook.txt" file size will remarkably increase. If you are not interested in the contents of the "LogBook.txt" file, you can delete them; the application will automatically rebuild them when required.

Message level:

Four message classes are available:

1. **"Acq"**: views errors and events for saving the current acquisitions to file
2. **"Basic"**: views errors and ordinary read/write parameters to Modbus
3. **"Advanced"**: like "Basic", plus contents of remote communications messages.
4. **"Engineering"**: like "Advanced", plus detailed Modbus activity.


Enable logging:

Enables the function of the RemoteDrive/IrisControl Logbook.

Delete


Deletes the logbook. Before being deleted, messages are added to the contents in the "LogBook.txt" file.

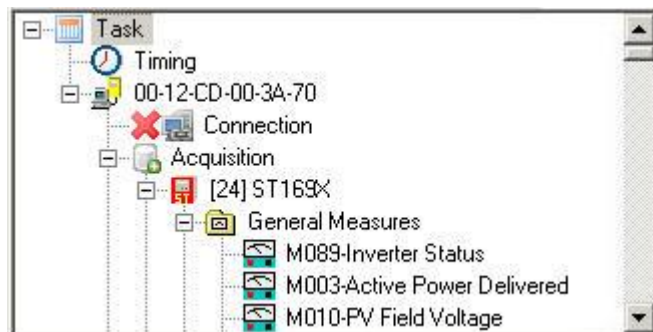

Programming is configured by composing a tree list of objects implementing special functions.



 Some objects can contain other objects or parameters relating to the implemented functions. When an object is selected, the box on the right views the objects it contains or its related parameters.


5.15.1. Scheduler Enable



Enable button  and Disable button  for the scheduler.

When the scheduler is active, the timing objects for the different tasks are checked every minute. When the date and time of the computer match with the parameters for the Timing objects, all the Gateway objects belonging to the current task are added as Jobs to the “**Jobs pending**” table.

5.15.2. Jobs Pending

Jobs pending		
Job	Attempt [N.]	within... [sec]
 00-12-CD-00-3A-70	00001	00000

The **Jobs pending** table contains a list of the queued processes (Gateways) waiting for implementing their tasks (the execution sequence is from top to bottom).


When a job is successfully executed, it is automatically deleted from the list.

When the execution of a job fails, the system performs 7 attempts at increasing time intervals; if all the attempts fail, the job is deleted from the list.

1st attempt within:	0 sec.
2nd attempt within:	30 sec.
3rd attempt within:	180 sec.
4th attempt within:	6 min.
5th attempt within:	15 min.
6th attempt within:	2 hours
7th attempt within:	12 hours

The **green arrow** indicates the job being executed; the **Attempt [N.]** column indicates the number of the attempt being executed; the **within..[sec.]** column indicates the time when the next job is executed. If timing is set to **Every** (see the Timing section), the job is permanently maintained in the list and the countdown for its execution is displayed. If a timing other than Every is selected, the first attempt enters the list only when it is occurring. If the first attempt fails, the job is maintained in the list with the relevant attempt n. and countdown.

 
The task being executed is stated in the box below:



The **“Stop”** button allows suspending the task; if so, the job is not deleted from the list, but it is executed later.

To manually remove a job, select a job, right-click and choose **Delete**.

5.15.3. Logs

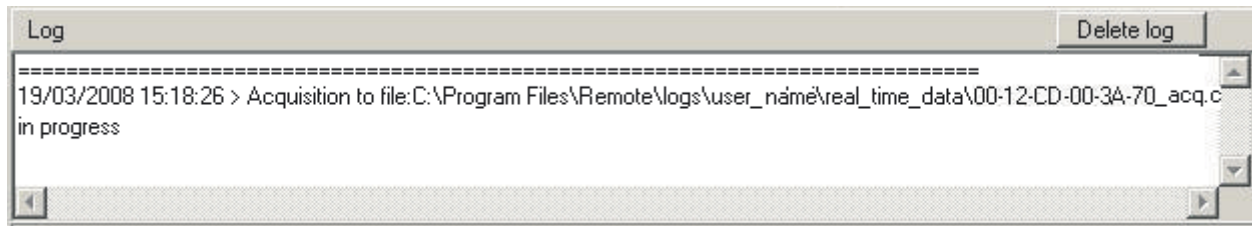

Lists the activity of the current job. It is automatically deleted before executing a new job. All activities are recorded to the following files:



LogScheduler.txt and OldLogScheduler.txt contained in the RemoteDrive/IrisControl folder.


LogScheduler.txt containing the scheduler activity of the current month.

OldLogScheduler.txt containing the scheduler activity of the previous month.


5.15.4. Description of the Objects in the Tree List

5.15.4.1. Task

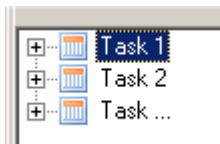

 The  Task object is the main object in the tree list and contains all the objects corresponding to the tasks to be executed within a given time defined in the  Timing object.




The tree list can include multiple **Task** objects. The only limitation is the time required for executing all the activities contained in a task.



5.15.4.2. Timing


The  Task object contains the  Timing object, which determines the time when the activities contained in a task are executed.

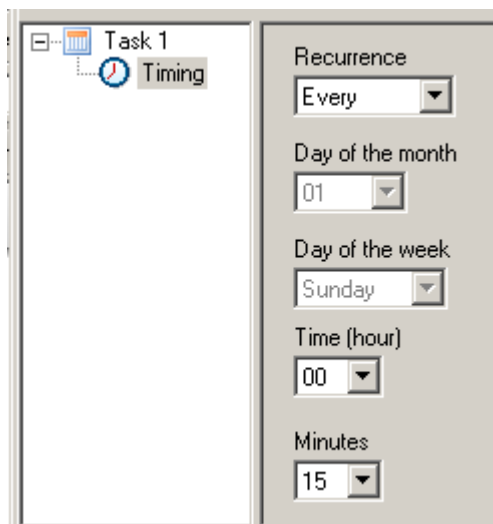

The following parameters are required for defining the task recurrence:

- Monthly, Weekly, Daily, Every (dedicated to real-time parameter acquisitions).
- Day of the month: this is active only when the recurrence is Monthly.
- Day of the week: this is active only when the recurrence is Weekly.
- Hours and minutes: always active.

5.15.4.3. RD/RS Gateway



 RD Gateway contains the objects allowing performing the activities (connection, upload logs, acquisition, FTP transfer, wall display) to a RemoteDrive/IrisControl configured as a server.




Activities are performed from top to bottom.



NOTE

The  Connection object is a preset object and must be the first object in the list of the contained objects. It can be disabled with the  Disable button, for example when the scheduler is activated on a RemoteDrive/IrisControl always connected to the target RemoteDrive/IrisControl implemented on a slave computer. When a connection different from the one activated for the RemoteDrive/IrisControl is required, the scheduler shall disable and re-enable the connection to the RemoteDrive/IrisControl, which will be inactive for the time required for the scheduling procedure.

5.15.4.4. ES851 Gateway



 ES851 Gateway contains the objects allowing performing the activities (connection, upload logs, acquisition, FTP transfer, wall display) to ES851 Data Logger.




Activities are performed from top to bottom.




NOTE

The  Connection object is a preset object and must be the first object in the list of the contained objects. It can be disabled with the  Disable button, for example when the scheduler is activated on a RemoteDrive/IrisControl always connected to the remote device the scheduler shall operate on. When a connection different from the one activated for the RemoteDrive/IrisControl is required, the scheduler shall disable and re-enable the connection to the RemoteDrive/IrisControl, which will be inactive during the time required for the scheduling procedure.

5.15.4.5. Connection

The  Connection object determines the connection activity and contains the connection parameters. The connection to the device is established until all the activities contained in the listed objects are complete or until the FTP object is attained.

If the RemoteDrive/IrisControl was previously connected, the scheduler stops the connection and re-establishes a connection when all the activities are complete.

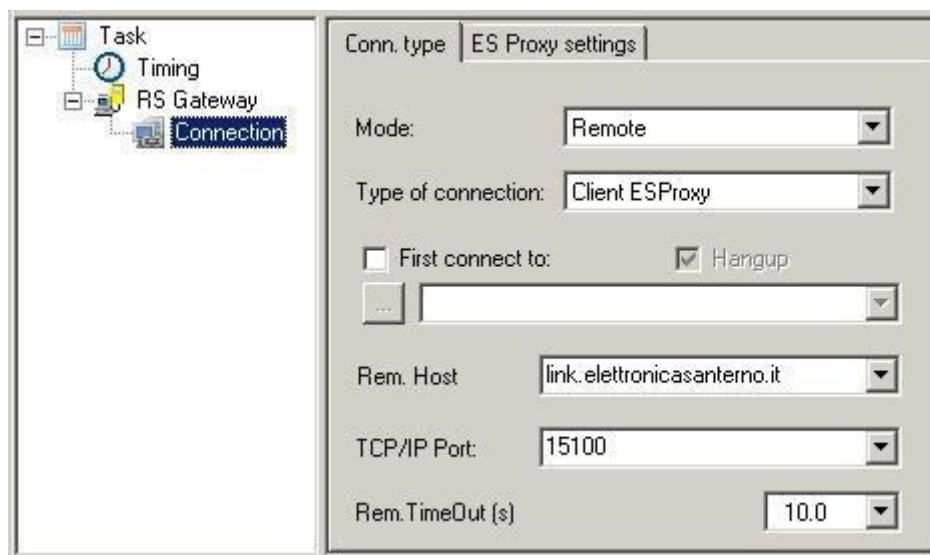

The screenshot shows the 'Connection' configuration window. On the left, a tree view shows 'Task' containing 'Timing', 'RS Gateway', and 'Connection'. The 'Connection' object is selected. The main panel is titled 'Conn. type ES Proxy settings'. It contains the following fields:


- Mode: Remote (dropdown)
- Type of connection: Client ESProxy (dropdown)
- ☐ First connect to: ☒ Hangup
- Rem. Host: link.elettronicasanterno.it (dropdown)
- TCP/IP Port: 15100 (dropdown)
- Rem. TimeOut (s): 10.0 (dropdown)




The screenshot shows the 'Connection' configuration window. On the left, a tree view shows 'Task' containing 'Timing', 'ES851 Gateway', and 'Connection'. The 'Connection' object is selected. The main panel is titled 'Conn. type ES Proxy settings'. It contains the following fields:


- Device MAC address: 00-50-C2-44-A0-3D (dropdown) with a 'List' button
- Username: mmontanari (text field)
- Password: xxxxxxxx (password field)
- As user: (text field)
- Response timeout (s.): 320 (text field)

The connection parameters to be set up are described in the Selecting the Type of Connection section.

It can be disabled with the  Disable button, for example when the Scheduler is activated on a RemoteDrive/IrisControl always connected to the target remote device.

5.15.4.6. *ES851 Log Upload*

 **ES851 Log Upload** This object contains the “upload” activity for the logs acquired from ES851 Data Logger board.

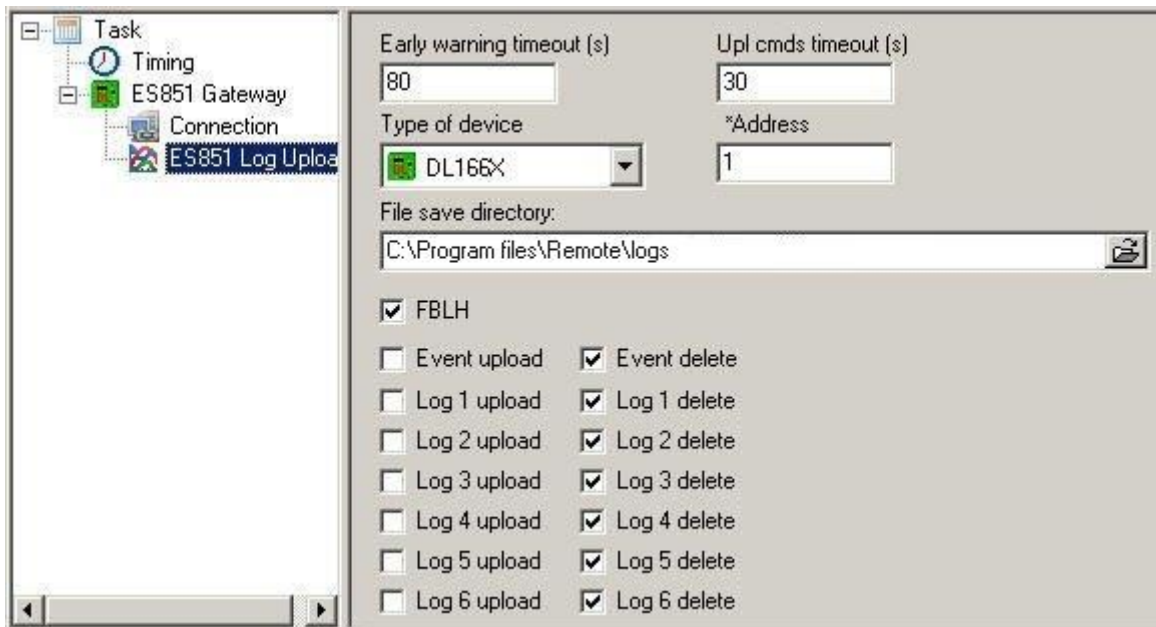

Early warning timeout (s)	Upl cmds timeout (s)
80	30
Type of device	*Address
DL166X	1
File save directory:	
C:\Program files\Remote\logs	
<input checked="" type="checkbox"/> FBLH	
<input type="checkbox"/> Event upload	<input checked="" type="checkbox"/> Event delete
<input type="checkbox"/> Log 1 upload	<input checked="" type="checkbox"/> Log 1 delete
<input type="checkbox"/> Log 2 upload	<input checked="" type="checkbox"/> Log 2 delete
<input type="checkbox"/> Log 3 upload	<input checked="" type="checkbox"/> Log 3 delete
<input type="checkbox"/> Log 4 upload	<input checked="" type="checkbox"/> Log 4 delete
<input type="checkbox"/> Log 5 upload	<input checked="" type="checkbox"/> Log 5 delete
<input type="checkbox"/> Log 6 upload	<input checked="" type="checkbox"/> Log 6 delete

Parameters**Early warning timeout (s.)**

Timeout required for removing the Early warning flag. When this timeout is over, the RemoteDrive/IrisControl will no longer perform any upload procedure (using the default value is recommended).

Upl cmds timeout (s.)

Max. allowable timeout for the response to a command sent to ES851(increase this timeout only if the connection is very slow).

Type of device

Version and type of ES851 Data Logger.

Address

Modbus address for ES851 Data Logger.

File save directory

This directory contains the log files downloaded from ES851.

FBLH

This option allows using the FBLH protocol to improve upload performance. This option can be viewed only if a remote connection is established and if the software version of ES851 Data Logger is greater than or equivalent to 166X. In that case, this option is enabled by default.

The logs to be downloaded and deleted can be selected from the relevant checkboxes.

File sorting:

Downloaded data is divided into folders and files based on the type of connection being used, the type of board being used and the selected recurrence, starting from the containing folder defined in the **“File save directory”**.

The filename is composed of the <MAC address of the connected board>_<last day of the selected time period>_and name of the downloaded log.

The files named Log1.csv...Log6.csv contain periodic acquisition data (more details are given in the Programming Instructions manual for ES851 Data Logger).

The files named LogEvt.csv contain data from acquisition procedures of particular events (more details are given in the Programming Instructions manual for ES851 Data Logger).



CAUTION




The LogEvt.raw file must be deleted, because it is used from the RemoteDrive/IrisControl software to process data append to LogEvt.csv.

The “raw” suffix means that scaling was impossible for certain data columns.

When a log file related to a given period of time is complete, a text line containing the path (starting from the path in the **“File save directory”**) and the filename in the LogsComplete.txt is included in the folder stated in the **“File save directory”**.

The log files are sorted in different tree lists depending on the active connection and the Upload recurrence.

Remote Internet-Proxy Connection

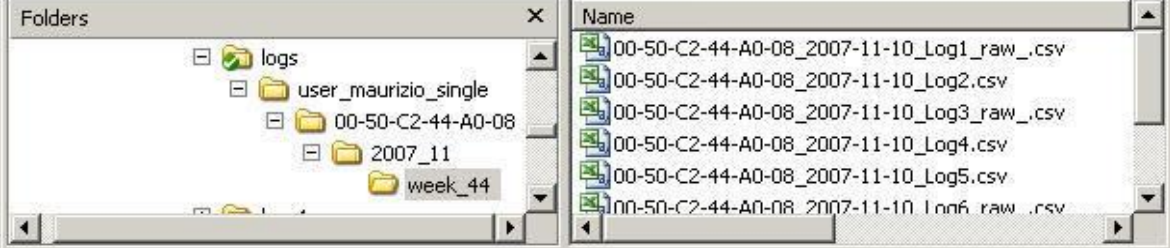
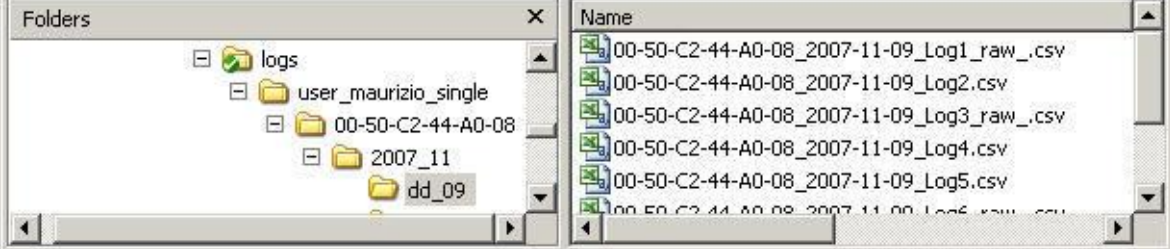
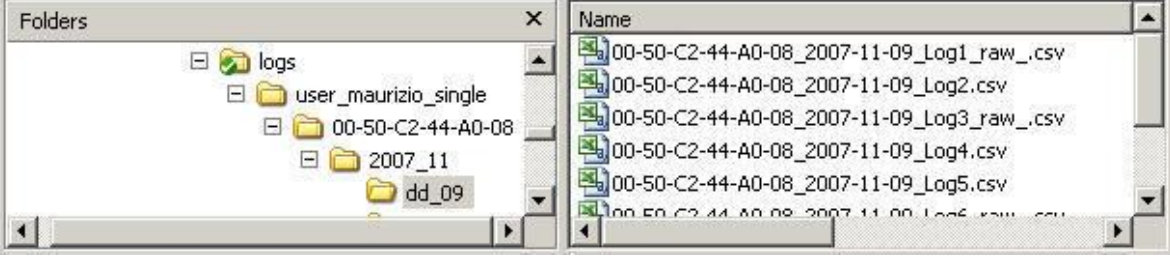
Monthly: user_<username> <board MAC addr.> <year>_<month>	
Weekly: user_<username> <board MAC addr.> <year>_<month> week_<week n.>*	
Daily: user_<username> <board MAC ddr.> <year>_<month> dd_<day>	



NOTE

* This is the number of the week starting from the beginning of the current year.

Local connection, modem connection and Ethernet connection (LAN)
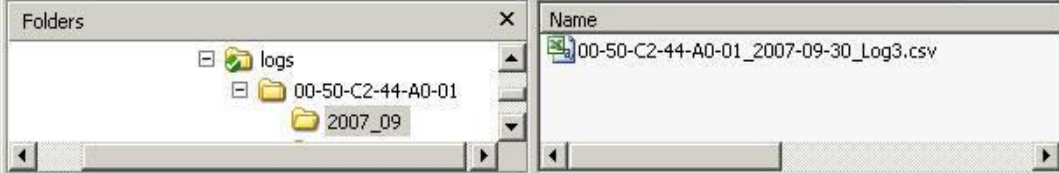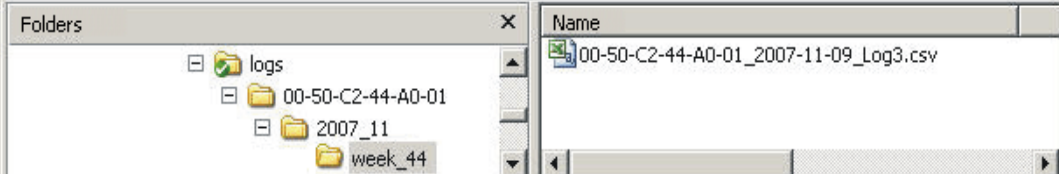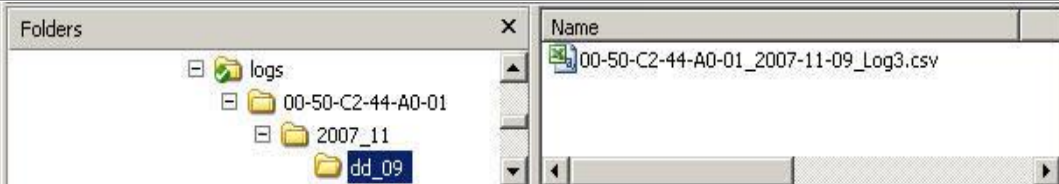
<p>Monthly: <board MAC address> <year>_<month></p>	
<p>Weekly: <board MAC address> <year>_<month> week_<week_n. >*</p>	
<p>Daily: <board MAC address> <year>_<month> dd_<day></p>	




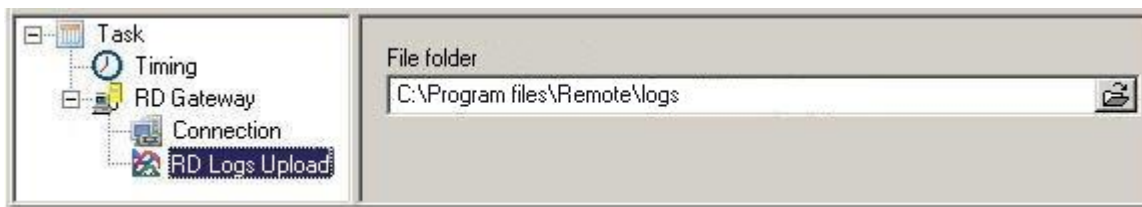
NOTE

* This is the number of the week starting from the beginning of the current year.

If the file is already contained in the folder and if the data structure is compatible with the log to be saved, the RemoteDrive/IrisControl will try to append data; otherwise, it will create a new file. The filename will contain the "newprog" suffix.

5.15.4.7. RD Upload


 **RD Log Upload** This object contains the “file transfer” activity for the log files acquired from the RemoteDrive/IrisControl running on the slave computer.



The figure above shows a Proxy remote connection, where the filename created by the RD/RS Upload object is composed as follows:

<mac of the slave PC>_date_sheet name

For serial links, LAN connections or modem connections (i.e. any type of NON PROXY connections), the right box automatically shows the “Slave PC name” box, which allows creating the folder containing the log files.

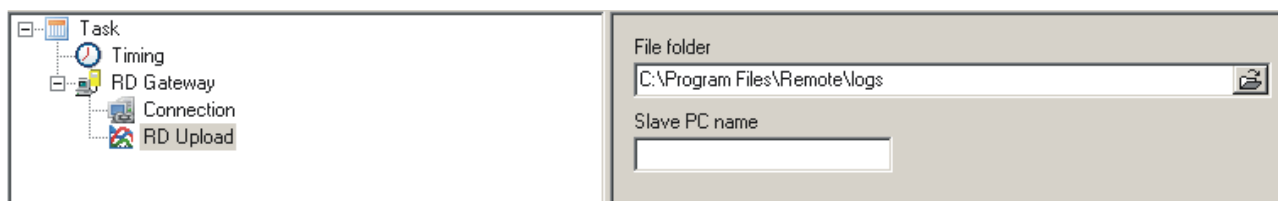


In the “File folder” case, select the target folder.

Sorting the downloaded files:


Files are sorted as described in ES851 Log Upload.

In that case, the filename of the log ends with the name of the measure sheet.

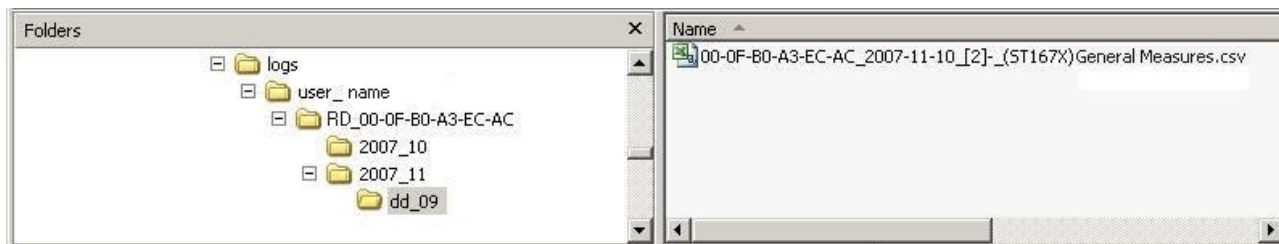


Remote Internet-Proxy Connection

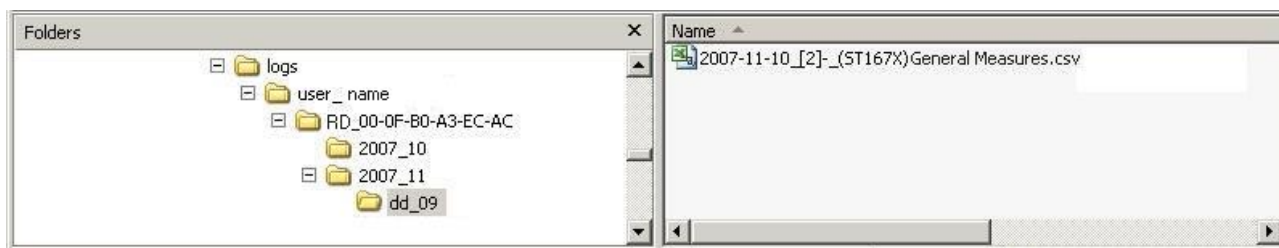

Local connection, modem connection and Ethernet connection (LAN)



5.15.4.8. Acquisition

The  **Acquisition** object allows acquiring some measures from any device connected to the Modbus network downstream of  ES851 Gateway or  RD Upload .
When selecting Acquisition, the “Acquisition save directory:” appears in the right box. Select the target folder for the acquisition file.





The **ESProxy Client** connection is shown in the figure above. The filename of the data file created by the **Acquisition** object is as follows:


<Board MAC address>_acq

When using a **serial link**, a **LAN** or a **modem connection** (any NON-PROXY connection), the Filename box is automatically displayed. In that case, the filename of the **Acquisition** object is :

<Filename>_acq

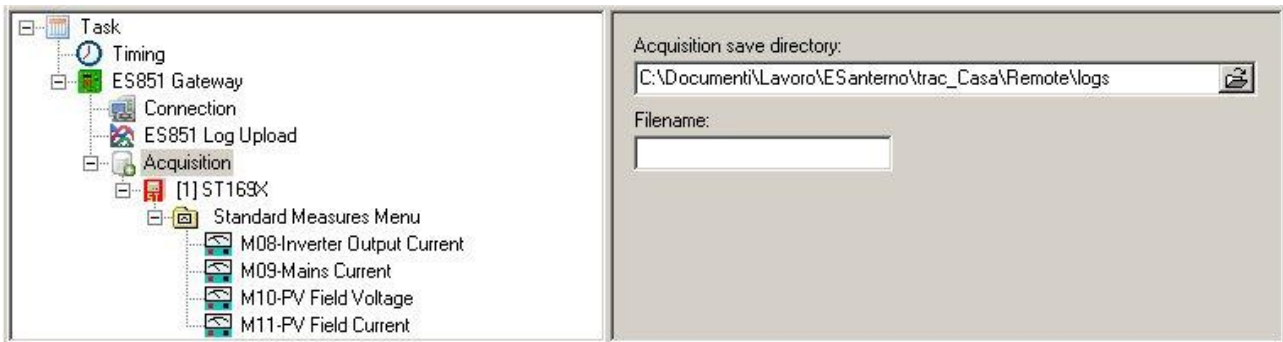


Once the acquisition object is added to the list, you have to specify the devices and the relevant measures to be acquired. To do so, select the **Acquisition** object and use the  **Add** function (see the Add section) to open the **Select measures to add window**.

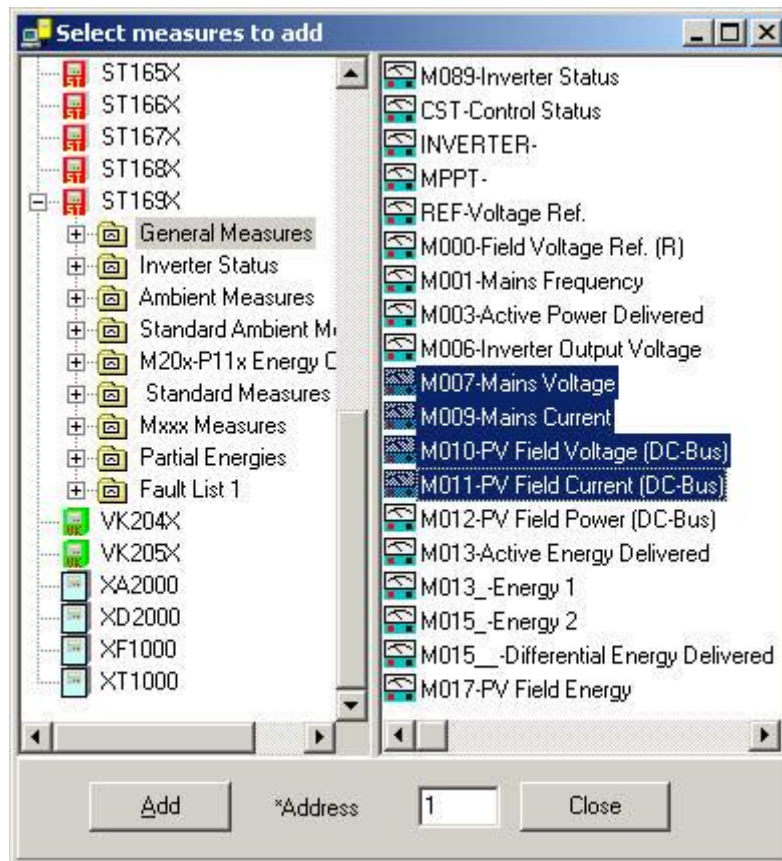


Select a device and double-click to display the whole list of the measure sheets. You can select all the sheets to acquire any available measure, or you can select only one sheet to choose any single measure.

**CAUTION**


Before adding measures to the scheduler, set up the Modbus address of the selected device.

Click the **Add** button to add the measures selected in the right box to the list of objects contained in the  **Acquisition** object and sorted by device and by measure sheet.

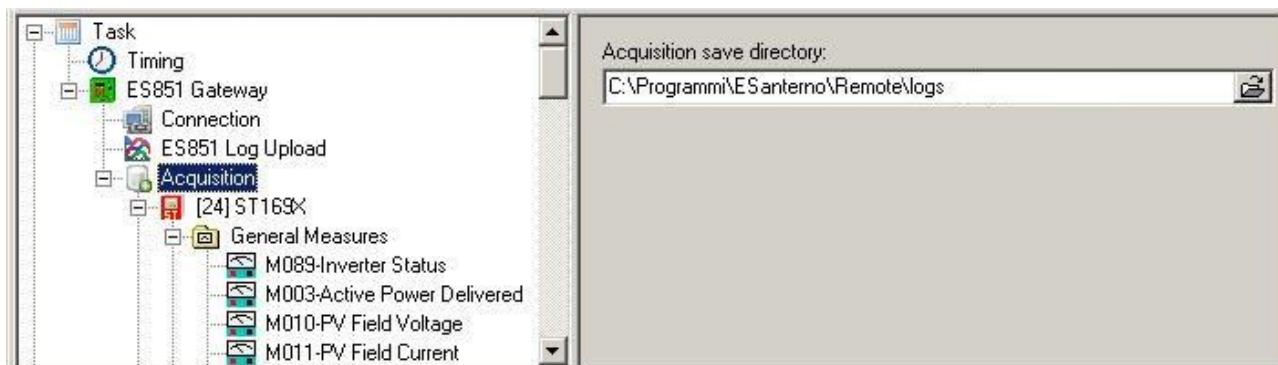


Sorting the acquired files

When using a remote ESProxy Client connection:

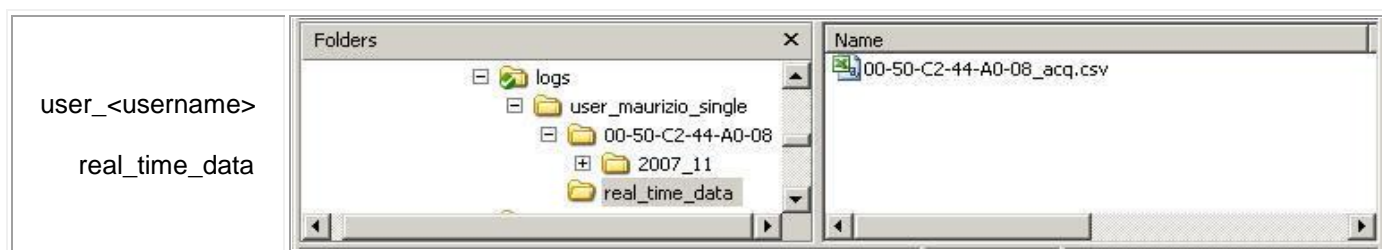


When using a non-ESProxy Client connection

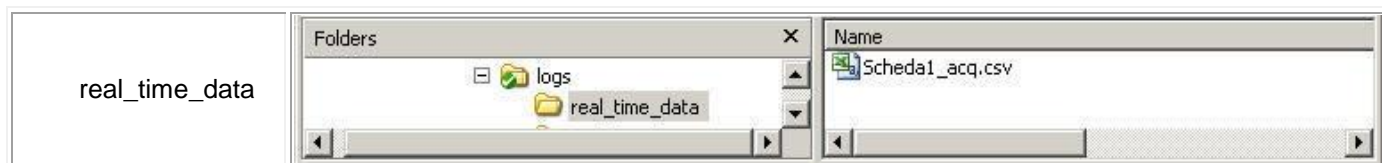


CAUTION

The file is replaced whenever an acquisition procedure takes place. Appending is not supported.

5.15.4.9. FTP transfer

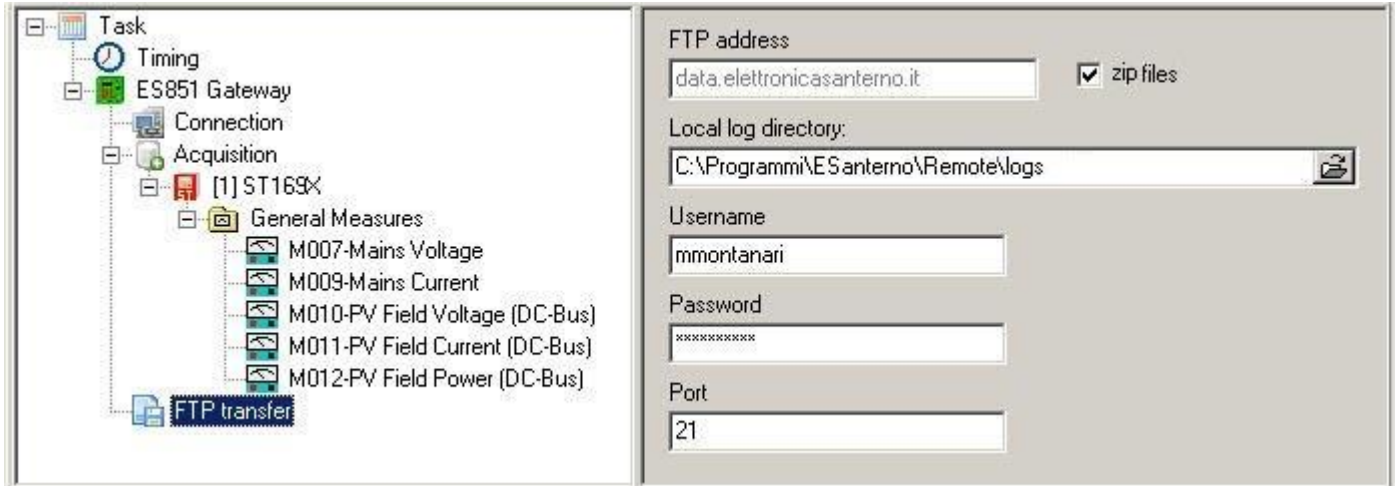

The  FTP transfer object allows the FTP transfer - to a preset server - of the files previously created when uploading and acquiring data. It is to be queued in respect to the Acquisition and Upload objects.



Parameters

- **FTP Address:**
Address of the target FTP server. The default address is used: data.elettronicasanterno.it
- **Zip files:**
Allows sending ZIP files. This is recommended when logs are uploaded.
- **Local Logs folder:**
Containing folder including the files to be transferred (must be the same folder as the target folder for uploaded data and acquired data).
- **Username:**
Username on FTP server.
- **Password:**
Password on FTP server.
- **Port:**
Port on FTP server.

5.15.4.10. Wall Display


The  Wall display object contains the publication activity of the acquired data to the wall display. Publication occurs when the  Acquisition object contains measures configured for the output to the wall display. For example, this kind of measure is contained in the ME00X0 dummy device. When a measure is selected, its custom properties are displayed in the right box in the window. They are very similar to the measures described in Measure Panel with Custom Properties and Output to Led Display (ME00X0 Device). Two additional options are included:

- **Persistence (s.):**
Indicates the persistence time (in seconds) of the last valid value read by the Scheduler. When this time is over, 0 is displayed on the LED display.

**NOTE**

If the persistence time is set to 0, this means that this function is disabled and the last valid value read by the Scheduler is kept displayed until it is refreshed (in that case, no time limits are provided).

- **Enabled:**
Enables publishing the measure to the wall display.

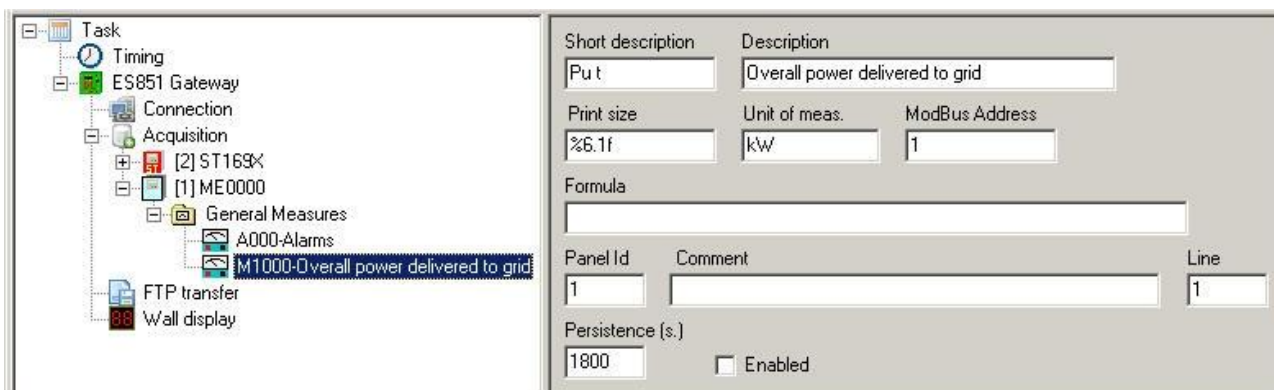

Short description	Description
Pu t	Overall power delivered to grid


Print size	Unit of meas.	ModBus Address
%6.1f	kW	1


Formula

Panel Id	Comment	Line
1		1

Persistence (s.)
1800 ☐ Enabled

When selecting Wall display, the right box in the window shows the last string published to the wall display.

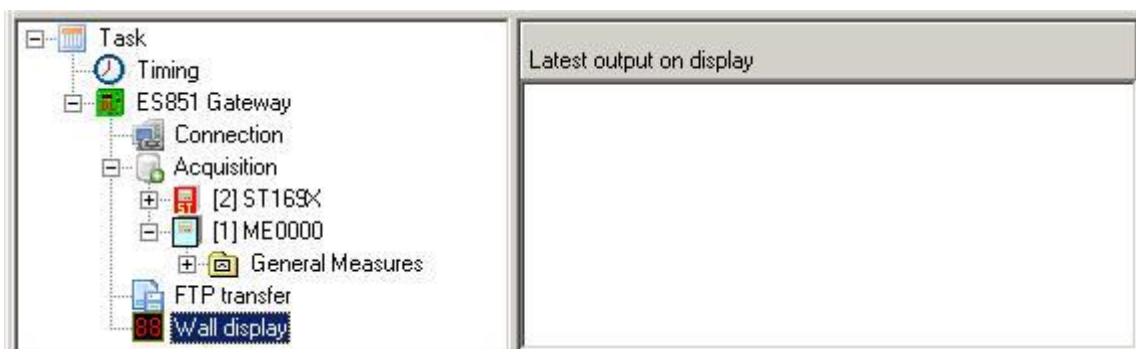


Task
Timing
ES851 Gateway
Connection
Acquisition
[2] ST169X
[1] ME0000
General Measures
A000-Alarms
M1000-Overall power delivered to grid
FTP transfer
 Wall display

Latest output on display

**CAUTION**


In order to dialog with the Led panel, the Lum. Pan. Serial Port Parameters window must be set up and the "Connect" option in that window must be activated.

5.15.5. Menu

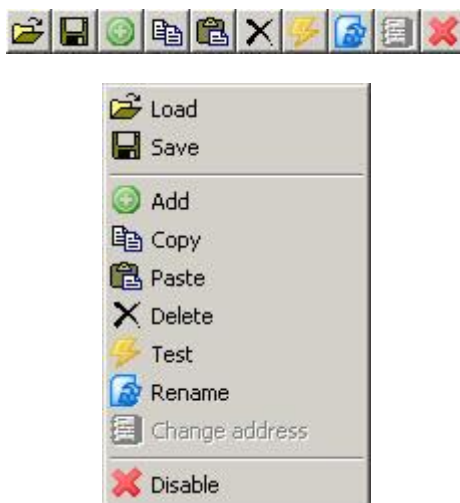

The File menu is available as a drop-down menu or as a button-bar menu. It contains all the activities that can be performed on the objects in the structure. Commands are active based on the relevance of the target object with the File menu.

 5.15.5.1. Load




Loads a scheduler project (*.sch file) previously saved.


5.15.5.2. Save




Saves the current scheduler project (*.sch file).


5.15.5.3. Add

The  **Add** object adds an object to the current scheduler project. This function is activated only when selecting an object in the current project, or if the project is empty. When this function is active, a window appears, which allows choosing an object to be added to the list. The contents of the object selection window change based on the objects compatible with the previously selected object.

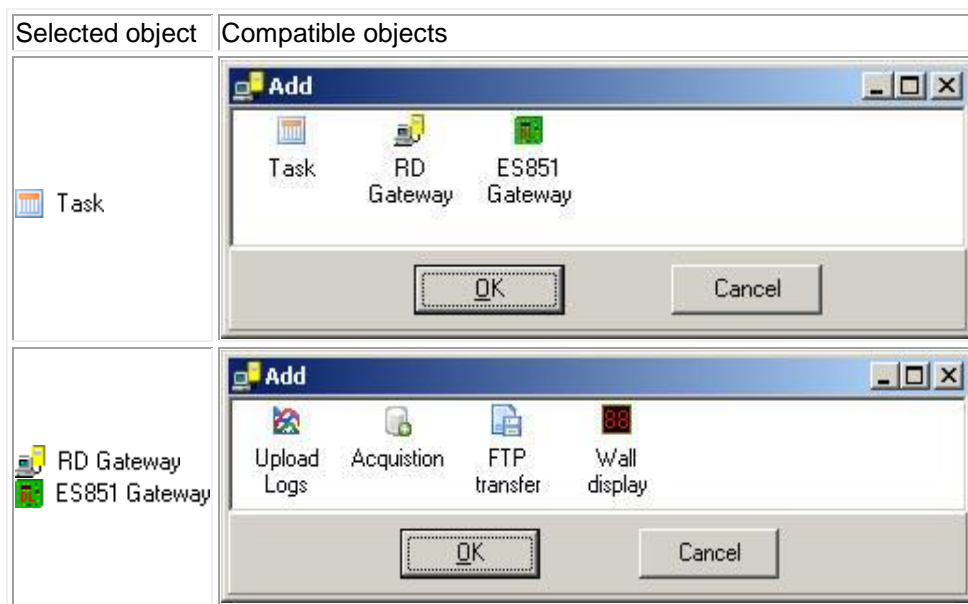


When the  **Acquisition** object is selected, the window for the selection of the measures to be acquired is displayed (see the Acquisition section).


5.15.5.4. *Copy*

 **Copy** Copies the selected object.


5.15.5.5. *Paste*

 **Paste** Pastes the copied object (if compatible) to the list of the selected object. Before pasting the object, select the target object list for the copied object.


5.15.5.6. *Delete*

 **Delete** Removes the selected object and the objects it contains.


5.15.5.7. *Test*

 **Test** Executes the actions belonging to the selected object.


5.15.5.8. *Rename*

 **Rename** Allows entering a new name for the object.

5.15.5.9. *Change address*

 **Change address** This is active only for the objects having a specified address: changes the corresponding Modbus address of the equipment.

5.15.5.10. *Disable*

 **Disable** Disables the actions relating to the selected object and the objects it contains.


For example, if a computer is always connected to the networked devices the scheduler is addressing to, the **Connection** object can be disabled because it is useless.

5.16. Window Menu


The RemoteDrive/IrisControl allows **Horizontally** or **Vertically** arranging the open windows, or recalling a window from the background.

5.17. Help Menu

The Help menu allows accessing the Table of contents of the on-line manual (**On-line User's Guide**). It also implements the **? Help** allowing viewing the online user's guide related to the selected topic (when pointing to a function of the RemoteDrive/IrisControl). The **About** window includes information about the RemoteDrive/IrisControl.

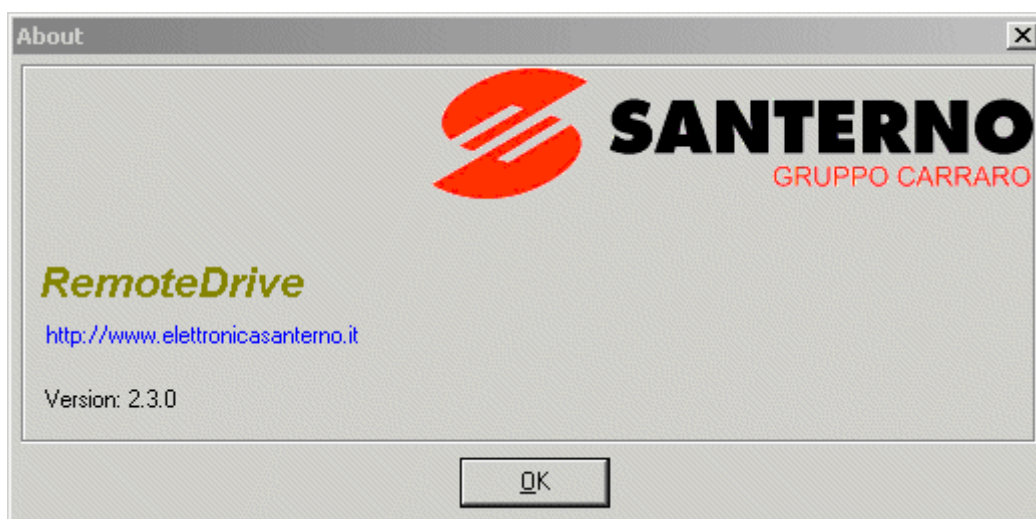

5.18. Acquired Data Print Preview Window

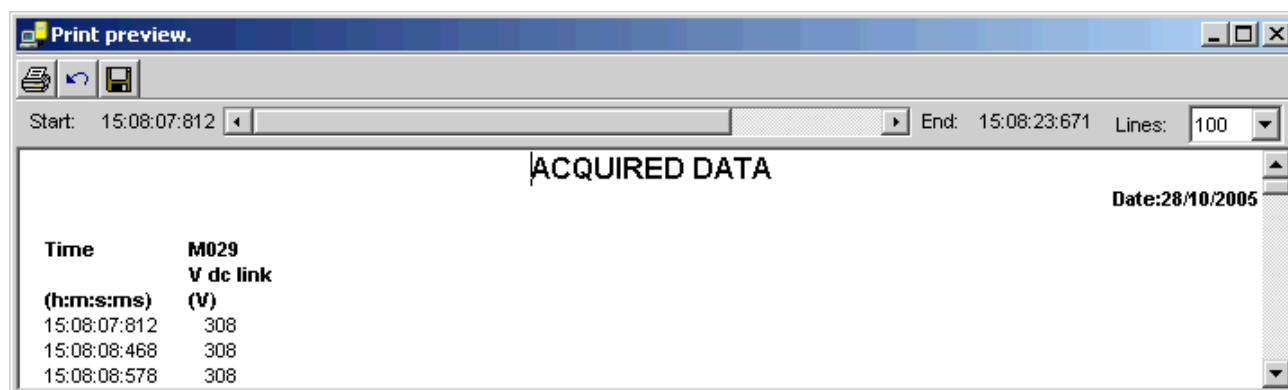

The text can be modified, so you can enter some comments.



Prints the document contents.



 
Updates the acquisition list if data is still being acquired.



Saves the list to disk in RTF or CSV format. The CSV format may be read by any electronic sheet, so you can use it for additional changes.



This scrollbar allows displaying some samples stored from any position; this is useful when the acquisition list becomes longer and longer.



This combobox allows choosing the amount of acquisition lines to be displayed in the window.




CAUTION

The RTF format allows saving only the lines specified in the Lines parameter. The CSV format allows saving all the lines acquired up to that moment, even if they have never been viewed.

When this function is active, do not open the file with applications privileging this type of file (e.g. MS Excel), otherwise RemoteDrive/IrisControl will not be capable of saving the file.

5.19. Setting of Acquisition Saving Window

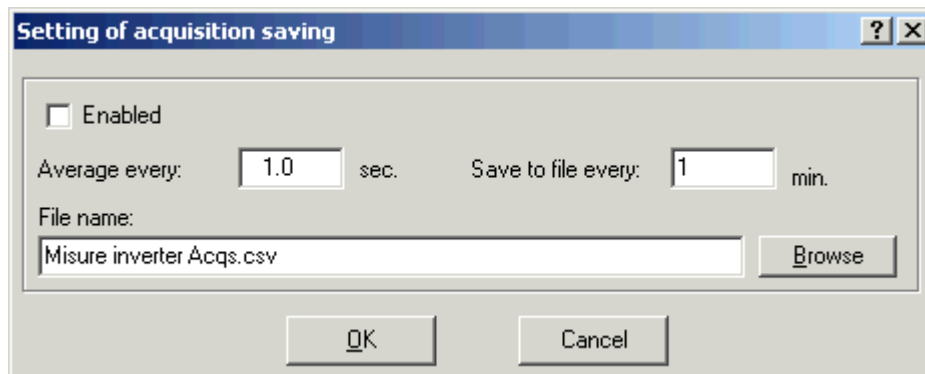

This window contains the configuration panel for scheduled saving to file of the acquired data related to the active measure sheet.

5.19.1. **Enabled**

Save to file: active.

5.19.2. **Average Every:**

Saves to file the average number of the acquired data depending on the preset delay. Set an average time which is equal to or a multiple of the acquisition time. If the average time is the same as the acquisition time, data is saved to file with no average time processing. The average time must NOT be shorter than the acquisition time.

5.19.3. **Save to File Every:**

Delay for saving to file. It must be equal to or longer than the average time.

5.19.4. **File Name:**

Path including the name of the file for data saving.

Whenever data is saved, the system verifies that the file is present; if so, a backup file (same file name with a .bak extension) is created and data acquired in the preset time interval are appended; otherwise, the file is created and data acquired in the preset time interval is saved.

The format of the saved file is CSV; separators and punctuation marks comply with the international options and the options of the operating system language.




CAUTION

When the save function is active, do not open the file containing saved data with applications privileging this type of file (e.g. MS Excel), otherwise the RemoteDrive/IrisControl will not be capable of saving the file.


All the parameters in this window are saved to the project file.

5.20. Parameter Refresh Window

This window is used to update the parameters of the previous version that are saved to a .prj file. This window pops up when you confirm the following message:

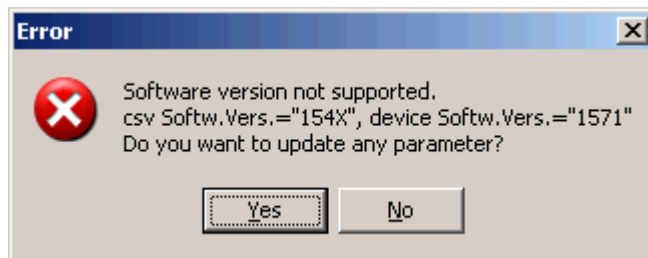

This message appears when you try to write parameters loaded from a file to a drive where the new firmware version is installed.

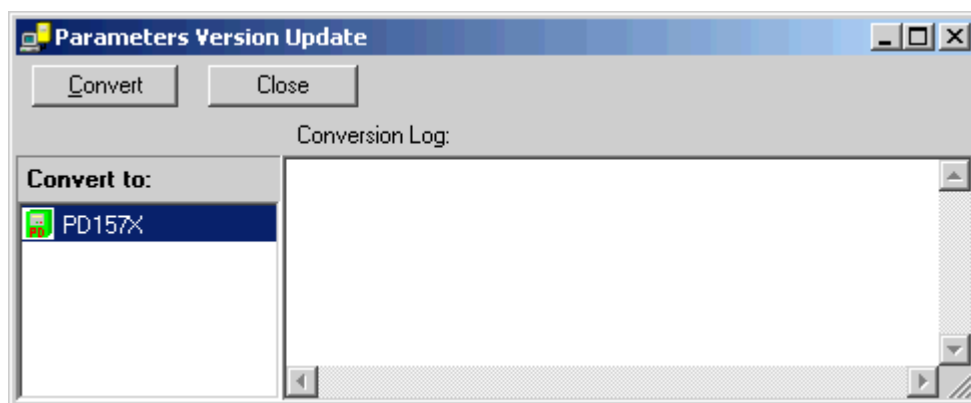

Conversion is to be done when the equipment is connected.

Press the **“Convert”** button to start parameter conversion. This includes three steps:

1. Uploading the selected parameter set.
2. Integrating the old parameters in the new parameter set.
3. Writing the new parameter set to the equipment “on-line”.

If no drive is on-line, the parameter version can be updated off-line by selecting the **“Parameter Version Update”** command from the File menu. Step 3 is not performed when the equipment is off-line.

Conversion Log:

This box lists the results of the conversion of each parameter. The conversion results are saved to a text file ("ParamUpdate.log") included in the "Logs" folder in the RemoteDrive/IrisControl.

Below is a list of the possible messages and their description:

Old Ver.	Value	New Ver.	Value
PD100X: P001=	2.00	PD151X: P001=	2.00 OK

Parameter conversion was successful.

Old Ver.	Value	New Ver.	Value
		PD151X: I073=	1.00 OK

This parameter is not to be found in the previous version.

Old Ver.	Value	New Ver.	Value
P185=	0.00	PD151X: P184=	0.00 <<Id changed>>

New parameter Id (from P185 to P184).

Old Ver.	Value	New Ver.	Value
PD100X: C023=	400.00	PD151X: C023=	320.00 <<too high, Clipped>>

Truncated parameter value (in the latest version, the maximum value for C023 is 320.00, so the old value has been truncated to 320.00).

Old Ver.	Value	New Ver.	Value
PD100X: C024=	10.00	PD151X: C024=	50.00 <<too low, Clipped>>

Truncated parameter value (in the latest version, the minimum value for C024 is 50.00, so the old value has been truncated to 50.00).


Old Ver.	Value	New Ver.	Value
PD100X: C008=	22.00	PD151X: C008=	22.00 <<Cannot write is readonly!>>

The parameter cannot be written because it is readonly at the moment.

5.21. Device Firmware Upgrade Window

Use this panel to upgrade the device firmware.

Before this window opens, you have to enter the name of the hexadecimal file (*.hex or *.mot) containing the new firmware version. When the window is open, you can change the upgrade file by clicking the “**Browse**” command:

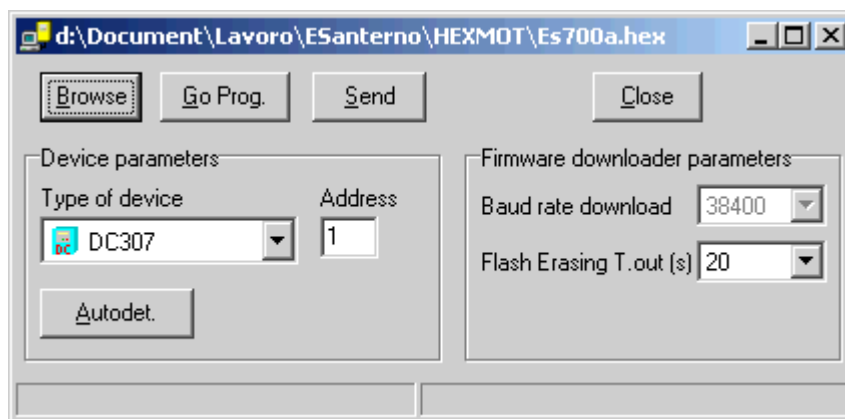

Type of device

Device type and firmware version to be updated. The “**Autodetect**” button, if available, allows the automatic detection of the device type and firmware version.

Address

Modbus address of the device.


Download baud rate (bps)

Baud rate during download (can be altered only for **PD**, **Px**, **SM** and **ST** equipment).

Flash Erase T.out (s)

Max. time in sec. between the flash erase command and the response after erasing.

5.21.1. Download Procedure for DCREG (DC) Drives

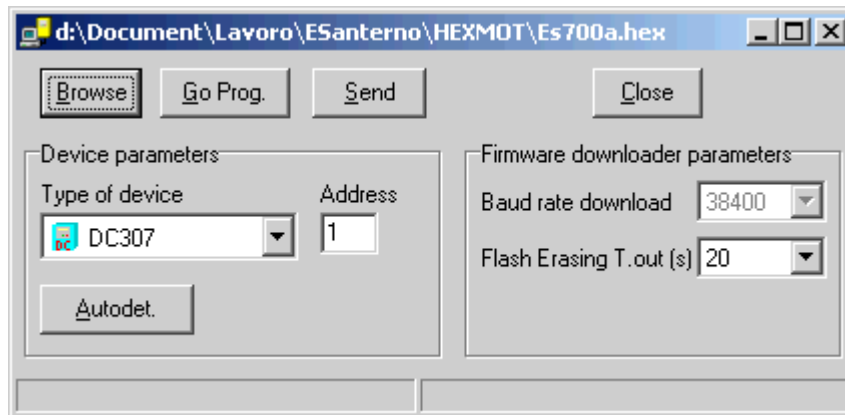


firmware download

1. In case of multidrop connection (RS485), only the device to be upgraded is to be left connected to the network.
2. Choose the right type of device and address.
3. Click **“Go prog”**. This command checks if the selected device type is valid and if the upgrade file complies with it. In this case, it sends a preliminary upgrade command to the device.
4. You can now start writing the device internal flash memory by clicking **“Send”**. The flash memory write procedure is preceded by an erase stage that will last a few seconds. This is controlled by a timeout procedure (see “Flash Erase T.out”) allowing detecting if the erase procedure is stopped. When the timeout is over, if the erase procedure continues, erasing will stop and a time-out message will be displayed.


5.21.2. Download Procedures for Sinus Penta/Penta Marine (PD) and Relevant Applications (PR and PS), Iris Blue (IB) and Solardrive Plus (PU)

Two download procedures are available: firmware download or MMI table download. Both of them make use of *.mot hexadecimal files; the distinction between them is made by means of the file name: if it terminates with F0 it relates to the firmware; if it terminates with F1 it relates to MMI tables.

The buttons to be used are available based on the type of the selected file.

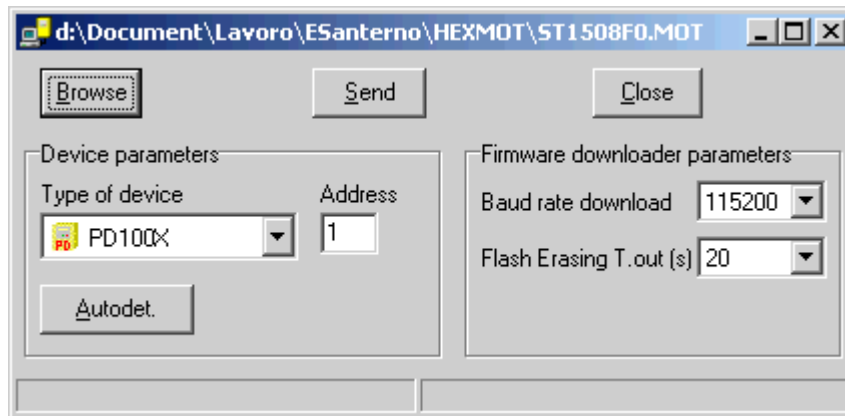


Firmware download

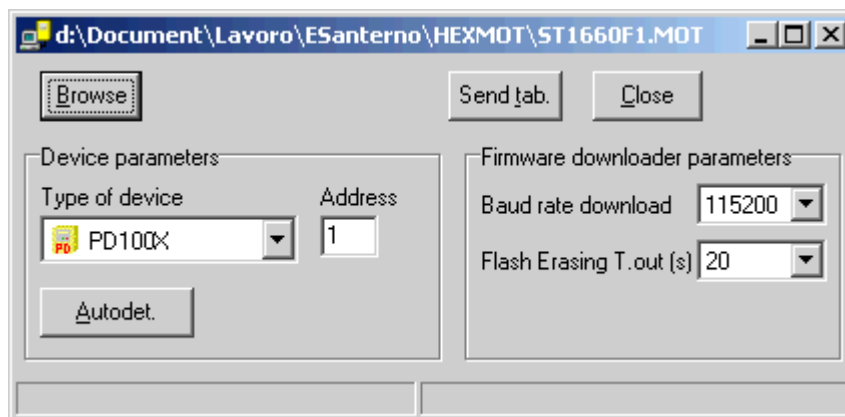

MMI table download

1. In case of multidrop connection (RS485), only the device to be upgraded is to be left connected to the network.
2. Choose the right type of device and address.
3. Click "Send" or "Send tab.". This command checks if the selected device type is valid and if the upgrade file complies with it. In this case, a preliminary upgrade command is sent to the device. The flash memory write procedure is preceded by an erase stage that will last a few seconds. This is controlled by a timeout procedure (see "Flash Erase T.out") allowing detecting if the erase procedure is stopped. When the timeout is over, if the erase procedure continues, erasing will stop and a time-out message will be displayed.

5.22. Parameter Print Preview Window

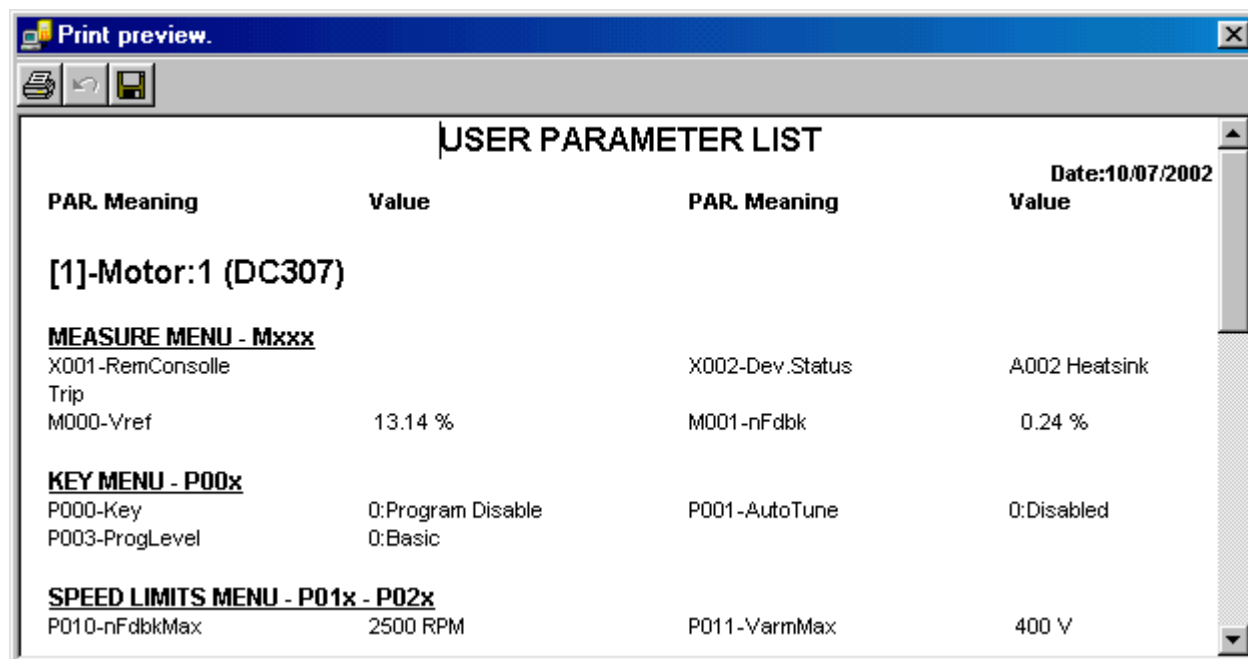

The text can be modified, so you can enter some comments.



Prints the document contents.



Saves the document contents to disk in RTF format.

6. O.S. CONFIGURATION FOR POINT-TO-POINT CONNECTIONS

6.1. Client

When using remote connections where the computer implementing the RemoteDrive/IrisControl programmed as a client is not connected to a LAN, you have to create an outgoing connection (Client connection) allowing the operating system to establish a connection to an ES851 Data Logger or to a computer implementing the RemoteDrive/IrisControl programmed as a server.

6.1.1. Windows XP and Windows 2000

When using Win2000 and WinXP, you can connect the client by selecting the 'First connect to' option and by displaying the Remote access configuration window directly from the RemoteDrive/IrisControl (see the First connect to section). Also, you can use the same connecting procedure allowing accessing the Internet via analog modem without changing the default settings of the operating system.

Your username and password must be the same as the ones entered for your account authorizing incoming calls to the server computer or to ES851 Data Logger.



NOTE If you are asked to enter the domain name, leave blank.

6.1.2. Windows Vista

The connection to a client PC implementing Windows Vista is the same as an Internet connection via analog modem. The default settings of the operating system are to be left unchanged.

The username and password must be the same as the ones used for an account authorized to receive incoming calls to the server computer or to ES851 Data Logger.



NOTE If you are asked to enter the domain name, leave blank.

6.2. Server


For point-to-point connections via modem between two computers, an incoming connection is required in the computer implementing the RemoteDrive/IrisControl programmed as a Server. The incoming connection allows the RemoteDrive/IrisControl to accept the calls performed by the computer implementing the RemoteDrive/IrisControl programmed as a client. To create an incoming connection, you can exploit the utilities of the operating system.

Below is an example of how to accept incoming connections in Windows XP.

From the Start menu, choose:




To open the “**My Network Places**” window, create a new connection:

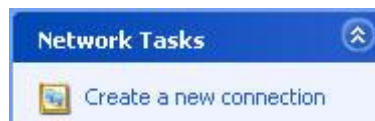




Select **"Set up and advanced connection"**:

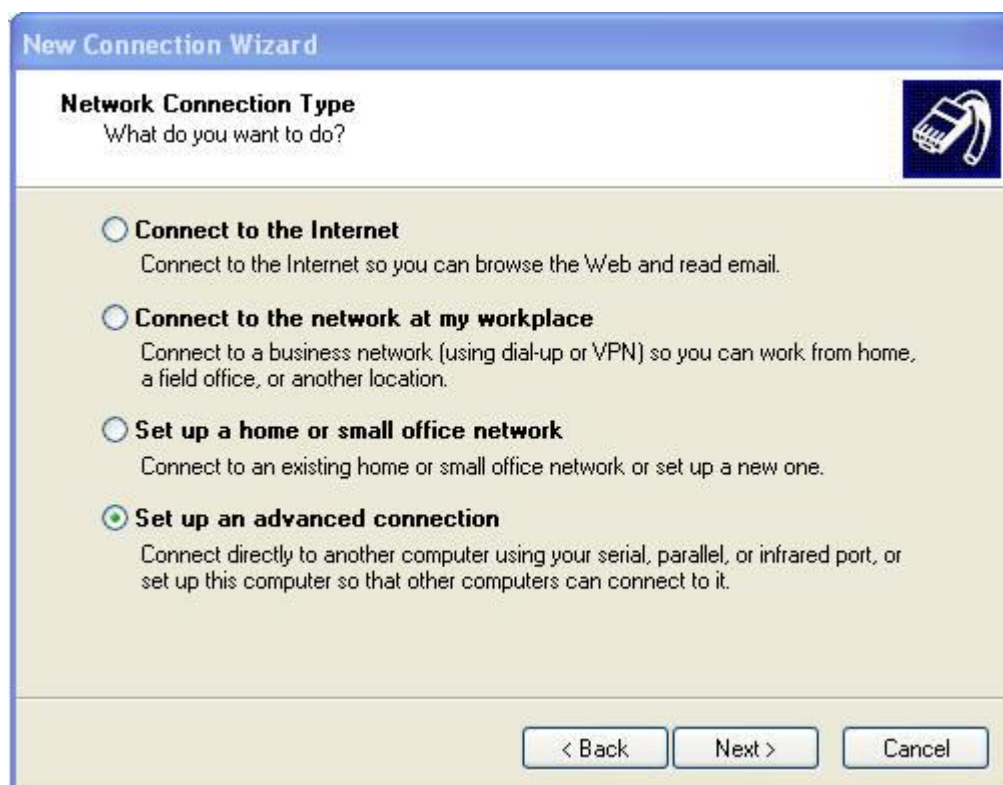


and select **"Accept incoming connections"**:



Select a modem for incoming calls:

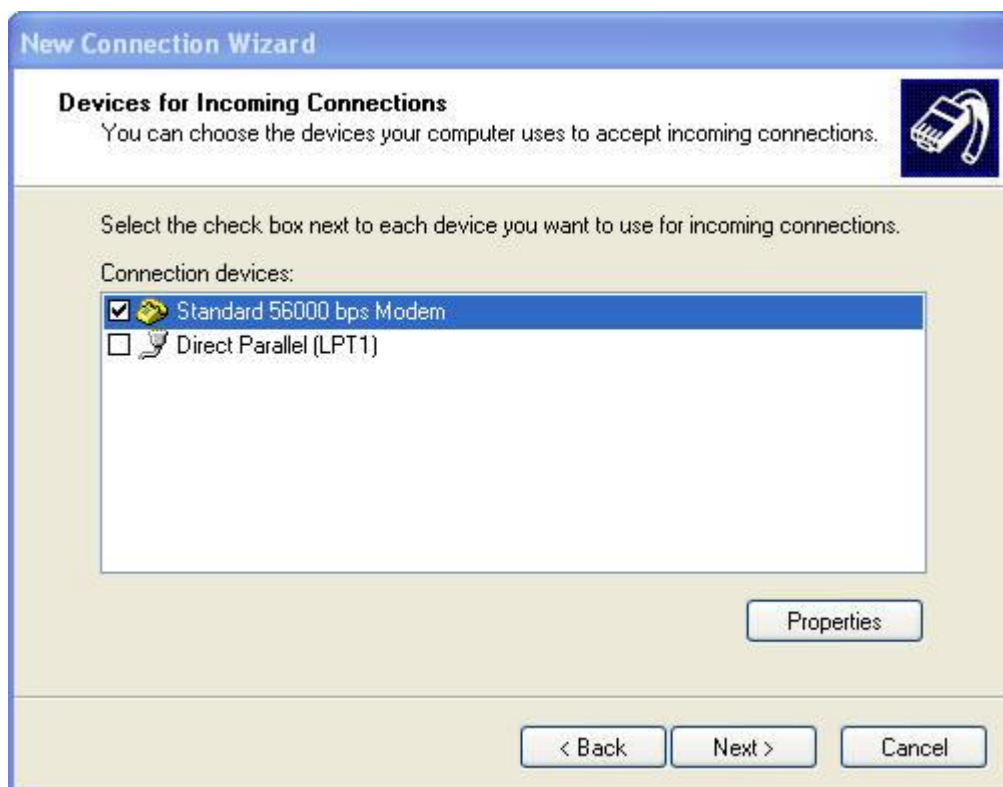


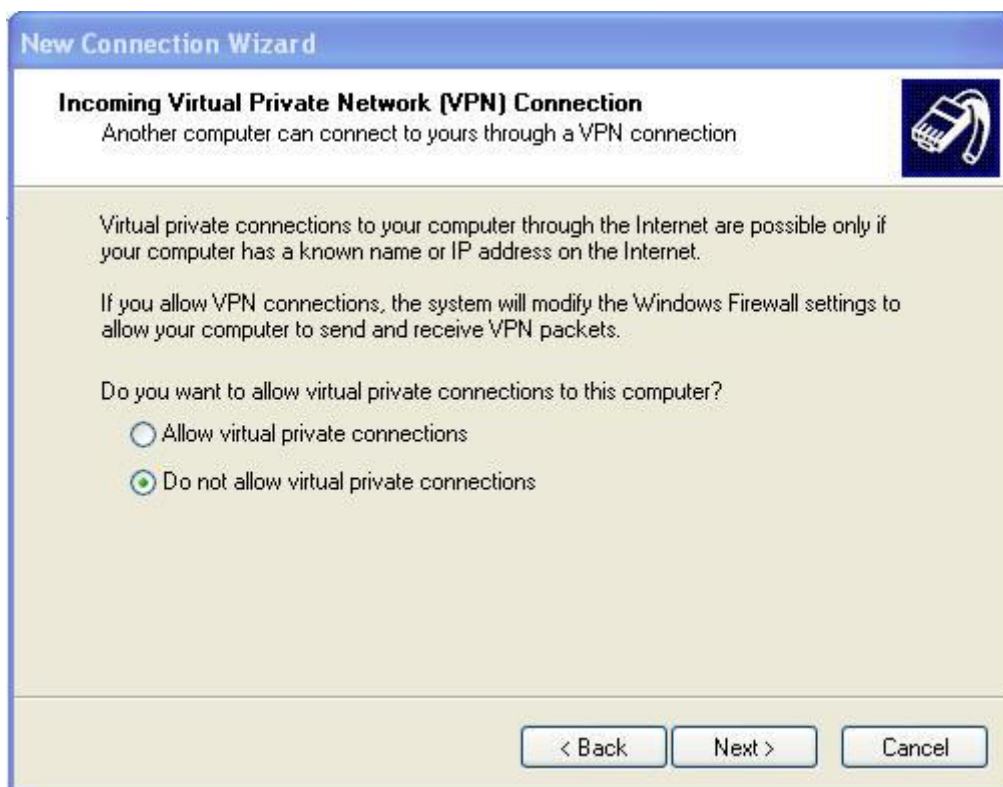

Select or add the user the Client computer shall connect to. If no authorized user is selected, no incoming connection is available.



In the “**Networking Software**” section, no changes are needed, as the default settings are sufficient for incoming connections.

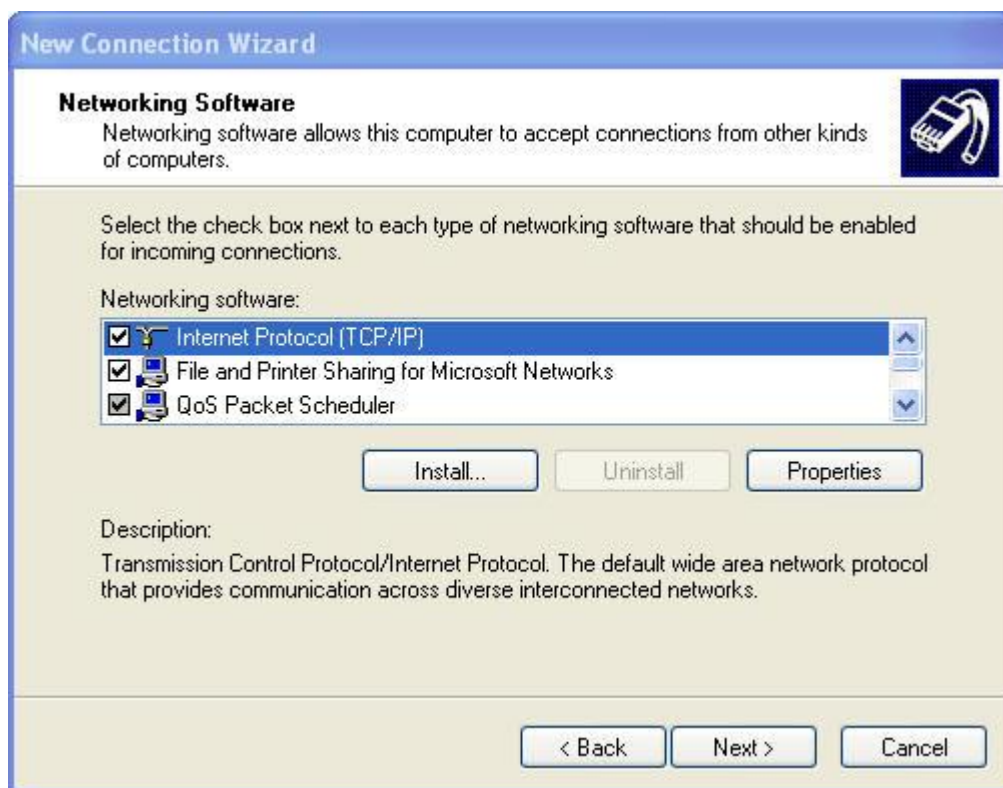

In “**My Network Places**”, the following icon appears: this indicates that the computer can now receive incoming calls.



When an incoming connection is active, an icon showing the name of the connected user appears:

